

Boombyte



Interactive Setup Guide

Version 1.5

Start Setup

[< Back](#)

Main Menu

1. [Before You Start](#)
2. [How to Charge](#)
3. [FM Radio](#)
4. [SD Card Player](#)
5. [USB Stick Player](#)
6. [Bluetooth Speaker](#)
7. [Troubleshooting and FAQs](#) ↗
8. [Register Product](#) ↗
9. [Contact Us](#)
10. [Rate this Guide](#) ↗

Next

< Back

Back to
Menu



1. Before You Start

☒ The Boombyte works as an FM radio, microSD card player, USB Stick Player, and Bluetooth speaker.

⚠ Supports **MP3**, **WAV**, and **WMA** files with up to **32GB** storage (card or flash drive).

☒ The unit will only activate the Micro SD, or USB mode **after** it detects a connected audio source.

Got it

< Back

 
Back to
Menu



2. How to Charge

The battery icon flashes while charging and stops when full (about **3** hours).

☒ Charging requirements: 5V / 1A (USB-C).

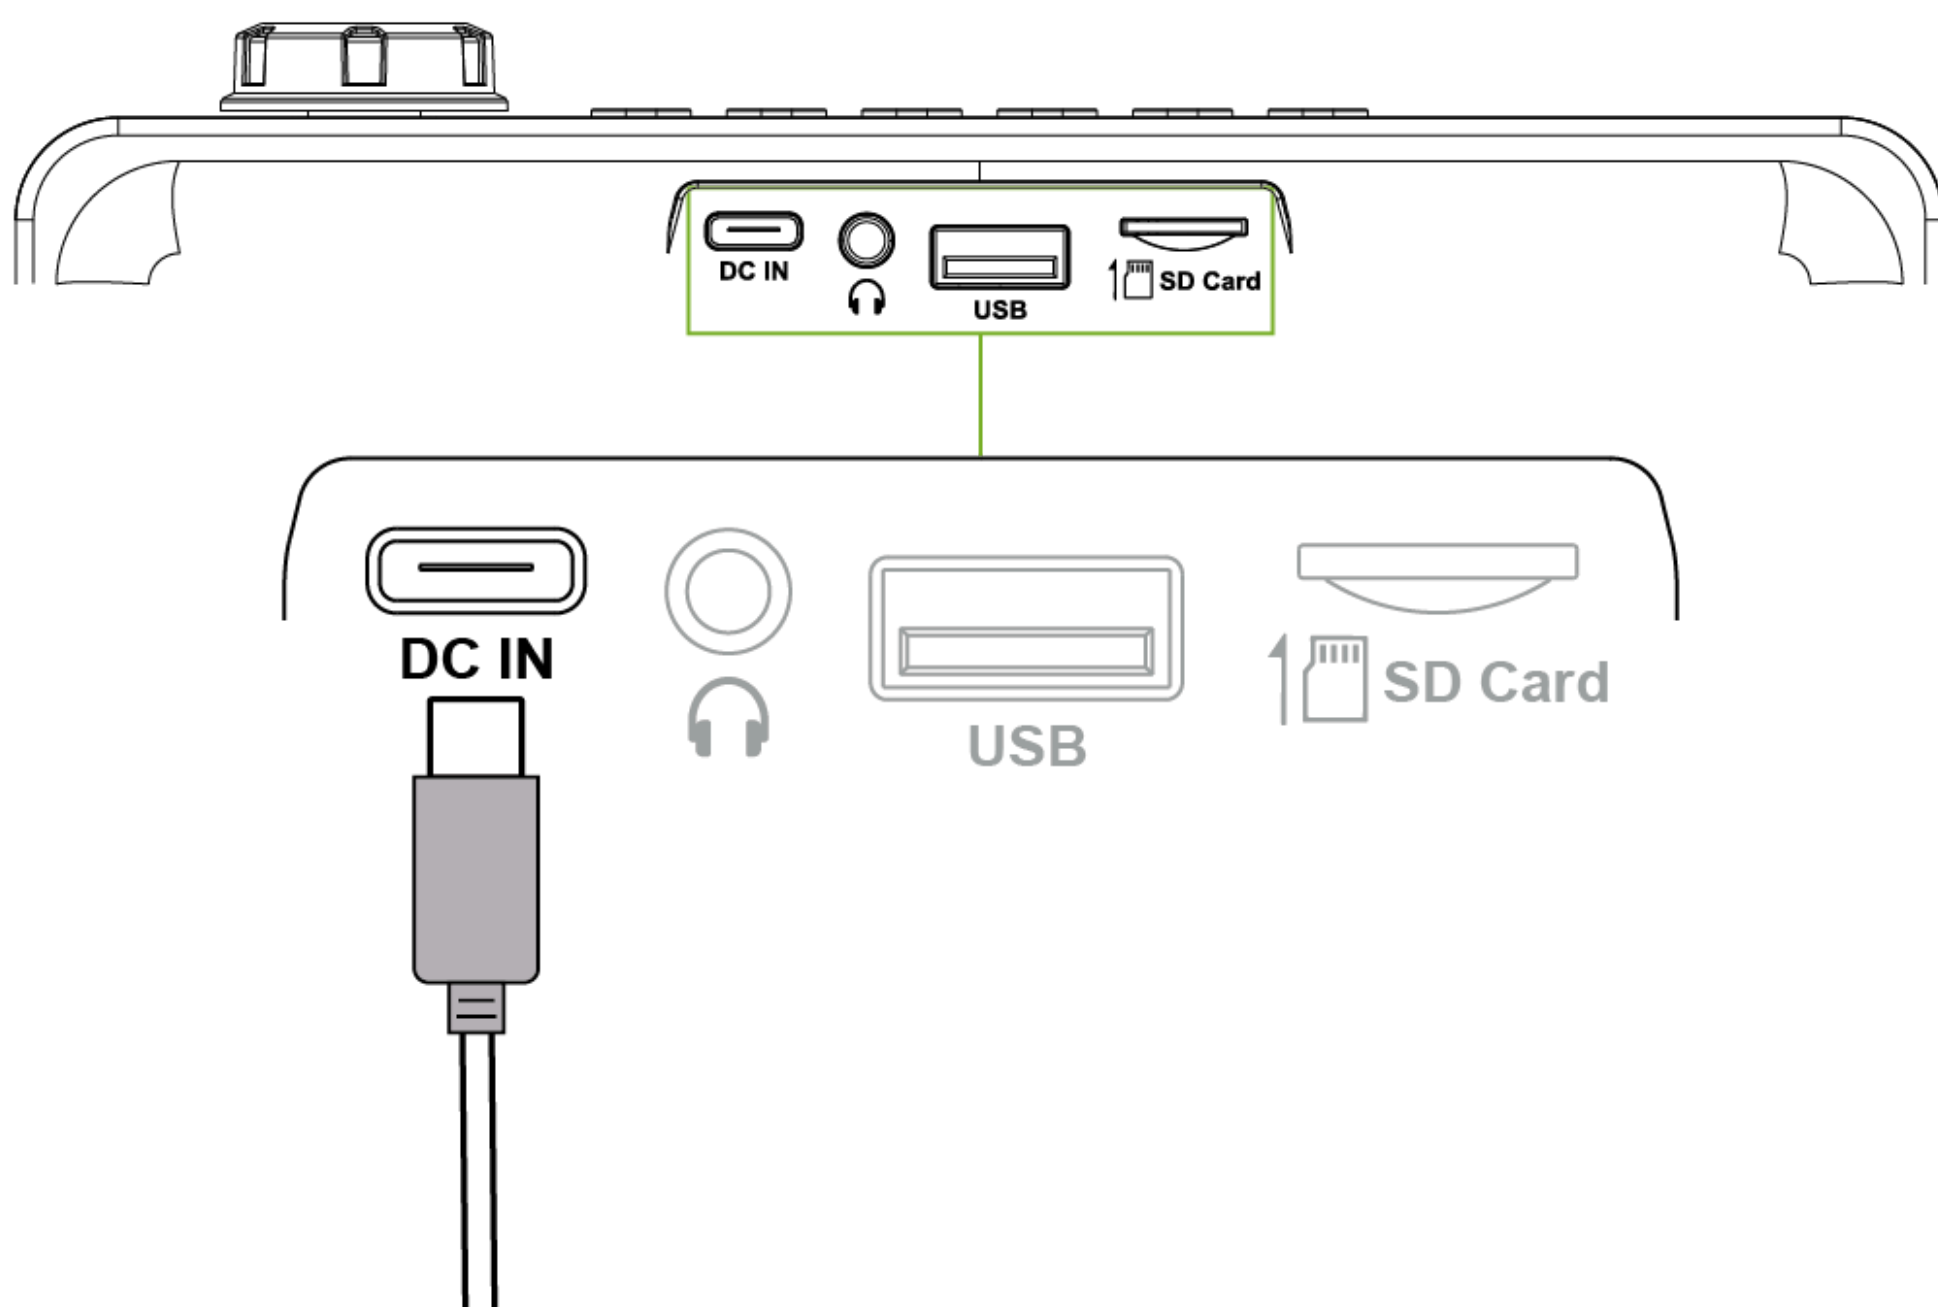

Got it

< Back

 
Back to
Menu



I would like to use as




FM Radio

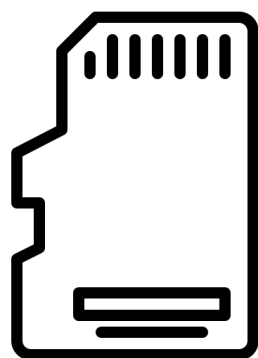

SD Card
Player



USB Stick
Player

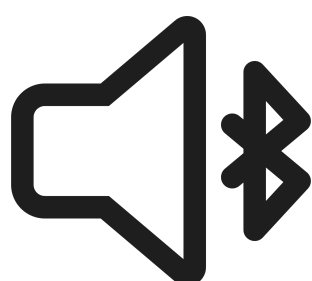

BT Speaker

< Back

Back to
Menu



3. FM Radio

3.1 Switch to FM mode

1☒ Turn the knob to **ON** – screen lights up.

2☒ Device will **auto-search stations** on first power-on. If not, press and hold **FM** button.



Continue

< Back

Back to
Menu



3. FM Radio

3.2 Search Channels

1☒The device will scan and save all available stations. (Takes about **2** minutes.)

2☒When done, it will tune to the **first** station found. Use the **SEEK>** button to scroll through saved stations.

Got it

Troubleshoot

< Back

Back to
Menu



Reduce Static & Improve Reception

☒ FM signals can be weak in remote areas or enclosed rooms.

⚠ Minimise interference—keep phones, TVs, and other electrical devices away.

☒ Use the power cord as an FM antenna & fully extend it.

Continue

Need help

< Back

Back to
Menu



3. FM Radio

3.3 Preset Channel

↓ To save a favorite, hold any number key (1–9) until “Channel Saved” appears. Next time, press that number to go straight to the station.



Continue

< Back

 
Back to
Menu



4. SD Card Player

4.1 Insert MicroSD Card

- Maximum storage capacity for a MicroSD card: **32GB**.
- Supported file formats: **MP3**, **WAV**, **WMA**.
- Push the card in until it clicks into place.

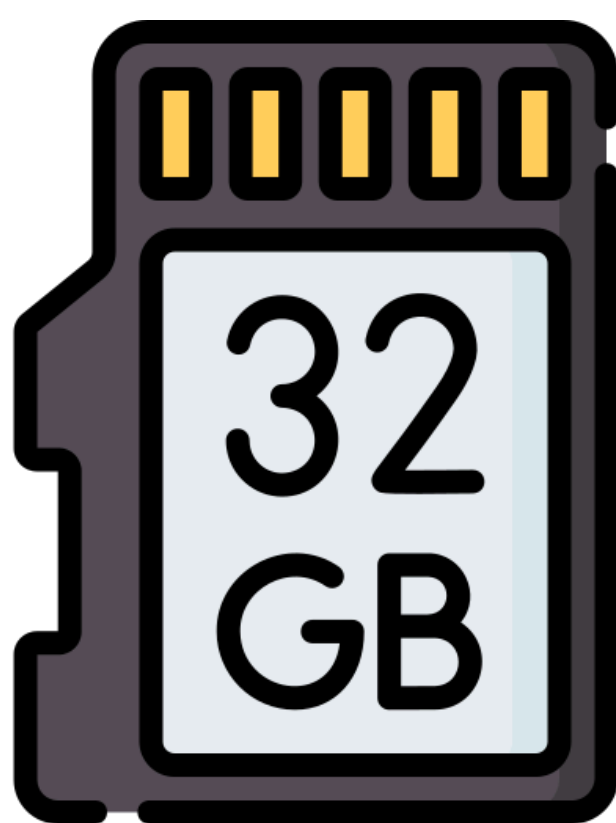

Continue

< Back

Back to
Menu



4. SD Card Player

4.2 Switch to MicroSD card mode

1☒ Turn the knob to **ON** — the screen will light up.

2☒ Press **MODE** once to switch to **Micro SD card** mode.



Continue

< Back

 
Back to
Menu



5. USB Stick Player

5.1 Plug in the USB Stick

- Maximum storage capacity for a flash drive: **32GB**.
- Supported file formats: **MP3, WAV, WMA**.
- Plug the stick in the USB port.

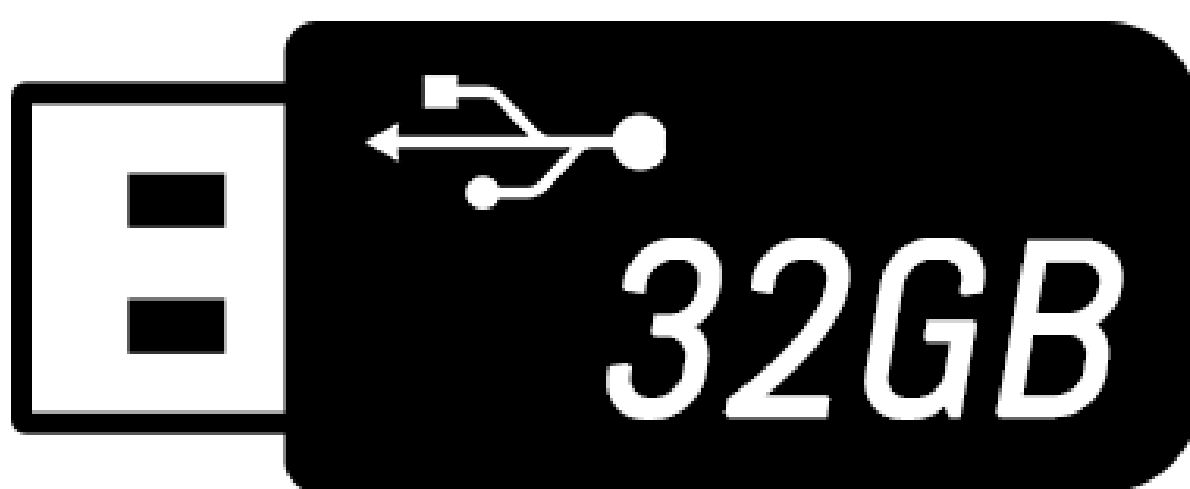

Continue

< Back

Back to
Menu



5. USB Stick Player

5.2 Switch to Music mode

1☒ Turn the knob to **ON** — the screen will light up.

2☒ Press **MODE** once to switch to **Music** mode.



Continue

< Back

Back to
Menu



6. Bluetooth Speaker

6.1 Turn on Bluetooth

1☒ This speaker connects to phones, tablets, or computers – **not** to other speakers or headphones.

2☒ Turn on Bluetooth on your device.

Settings

Q Search



John Doe
Apple iPhone12, iOS14.5, English, United States



Airplane Mode



WLAN

AVA-02-Meeting Room >



Bluetooth

Off >



Cellular



Personal Hotspot

Off >

Continue

< Back

Back to
Menu



6. Bluetooth Speaker

6.2 Switch to Bluetooth mode

1☒ Turn the knob to **ON** — the screen will light up.

2☒ Press **MODE** once to switch to **Bluetooth** mode (pairing).



Continue

< Back

Back to
Menu

 


6. Bluetooth Speaker

6.3 Select "Avantree Boombyte"

☒ Select the speaker from your device's Bluetooth list.

☒ Wait for connection.

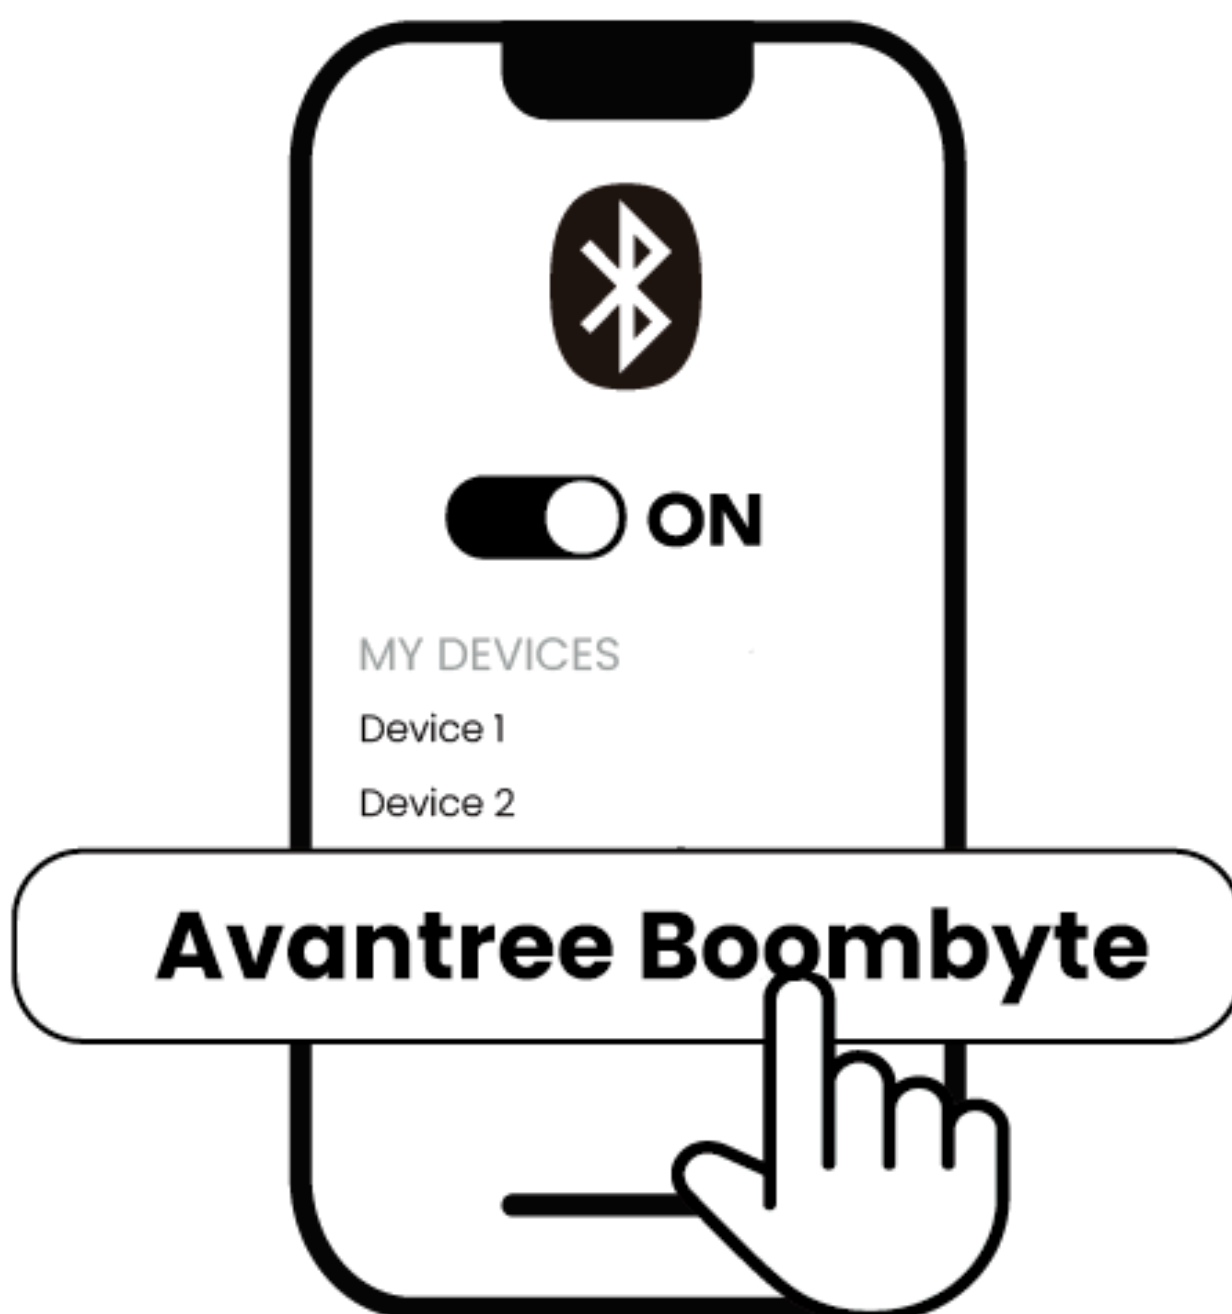

Connected

< Back

Back to
Menu



Navigation Guide

- Press /OK – Mode settings
- Hold /OK – System settings
- Use SEEK> / <SEEK – Scroll
- Press /OK – Select
- Choose "Return" – Go back
- Turn knob – Adjust volume

 
Tips

- Plug in 3.5mm wired headphones to listen privately.
- Press and hold the "**0**" button to lock or unlock all buttons.
- [View detailed button functions here ↗](#)

Continue

< Back


Back to
Menu

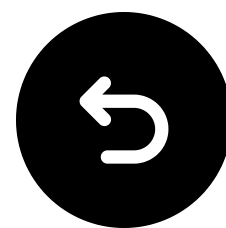

You're Ready

Enjoy your experience with **Boombyte** now!

 📄 [Rate this guide, thanks!](#) ↗

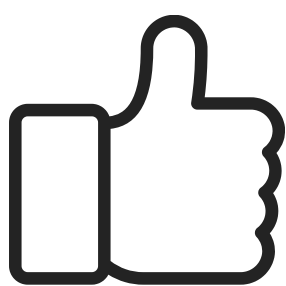

< Back

Back to
Menu



9. Contact Us

We're here to help you.
Choose an option below:

Email us at
support@avantree.com

[Book a call](#) ↗

[Submit a ticket](#) ↗

[Live chat with us](#) ↗

