

Oasis Plus 2



Interactive Setup Guide

Version 1.3

[Advanced Setup & FAQs](#)

Buttons & Indicators

Initial Setup



Warning

↗ You're about to leave this setup guide and visit an external link.

 BACK To come back here again, please **use your browser's "back" button** or re-scan the QR code on your device.


[Proceed](#) ↗

< Back

Start Over



Buttons & Indicators

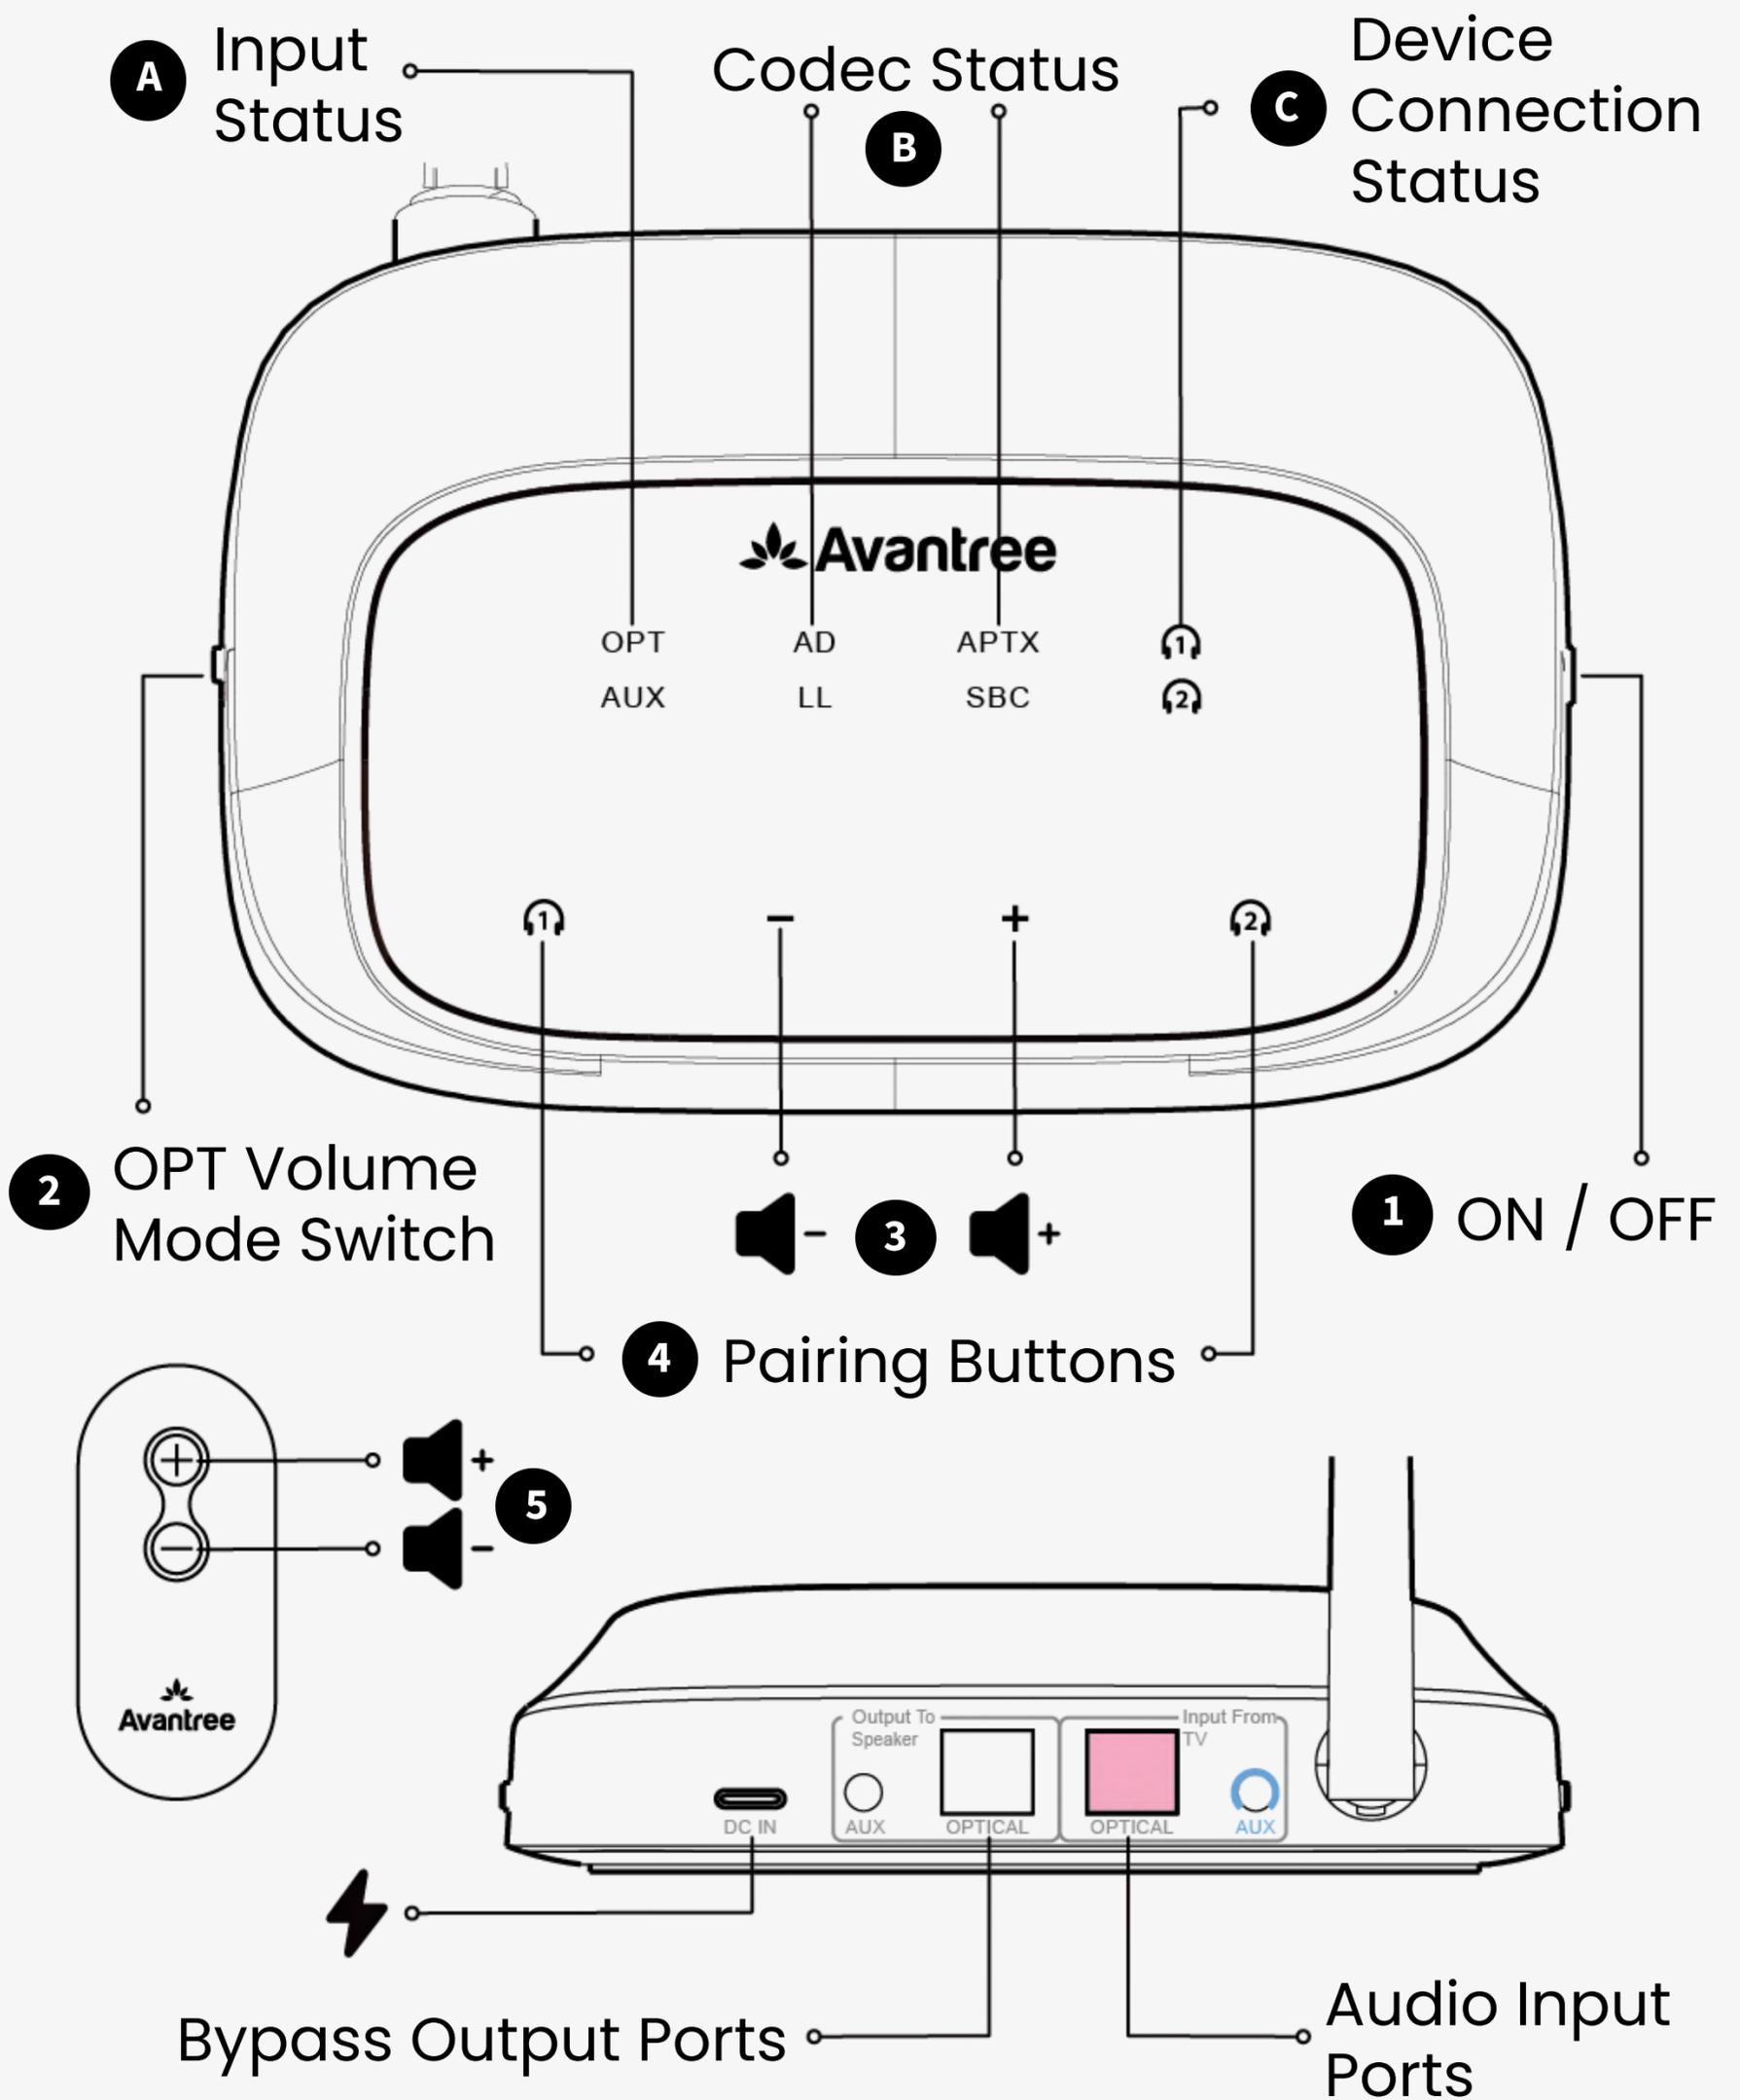

Continue

< Back

Start
Over



LED Indicators

Button Functions

No.	Button	Functions
1	OFF ON	Switch to ON/OFF to turn it on/off
2	OPT Volume Boost Normal	Switch to TV/AVR mode while connecting via AUX cable
3		Press once to adjust volume
		Press & hold both buttons for 7 seconds to clear pairing history
4		Press & hold for 2 seconds to enter pairing mode
		Press once to reconnect paired device
5		Press once to adjust volume with the Remote

LED Indicators

No.	Indicator	Status
A	Flashing white light by "OPT" / "AUX"	Invalid audio signal
	Solid white light by "OPT" / "AUX"	Valid audio signal
B	Solid white light by "AD," "LL," "APTX," or "SBC"	Audio streaming in the aptX adaptive, aptX low latency, aptX or SBC codec
C	Flashing white and green alternately by	Pairing mode
	Solid white light by	Successfully connected to your device(s)

Start setup

< Back

Start
Over



Remove the Sticker

Remove the front panel sticker before setup.



Continue

< Back

Start
Over



What's in the box?



✓ Oasis Plus
2



✓ Type C
Power Cable
for Transmitter



✓ Optical
Audio Cable



✓ AUX
3.5mm Audio
Cable

Continue

< Back

Start
Over



Connect via optical

- 1 Plug one end of the cable into TV's "**Optical Digital Audio Out**" port.
- 2 Plug the other end into transmitter's "**Optical**" port.



Connected

I don't have optical

< Back

Start
Over



Plug in the transmitter

⚡ Plug the **USB-C cable** into the **transmitter** and your TV's **USB** power port.



It's plugged in

< Back

Start
Over



Select the right audio settings

 Using your TV remote, go to:

➔ **Settings** → **Sound** → **Sound Output**.

✓ Select **Optical**.



Not sure how?

Visit our [TV Sound Settings Guide](#)

Continue



Warning

↗ You're about to leave this setup guide and visit an external link.

 BACK To come back here again, please **use your browser's "back" button** or re-scan the QR code on your device.

[Proceed](#) ↗


< Back

Start
Over



Make sure "PCM" is selected

✓ Change "Audio Format" to **PCM**.

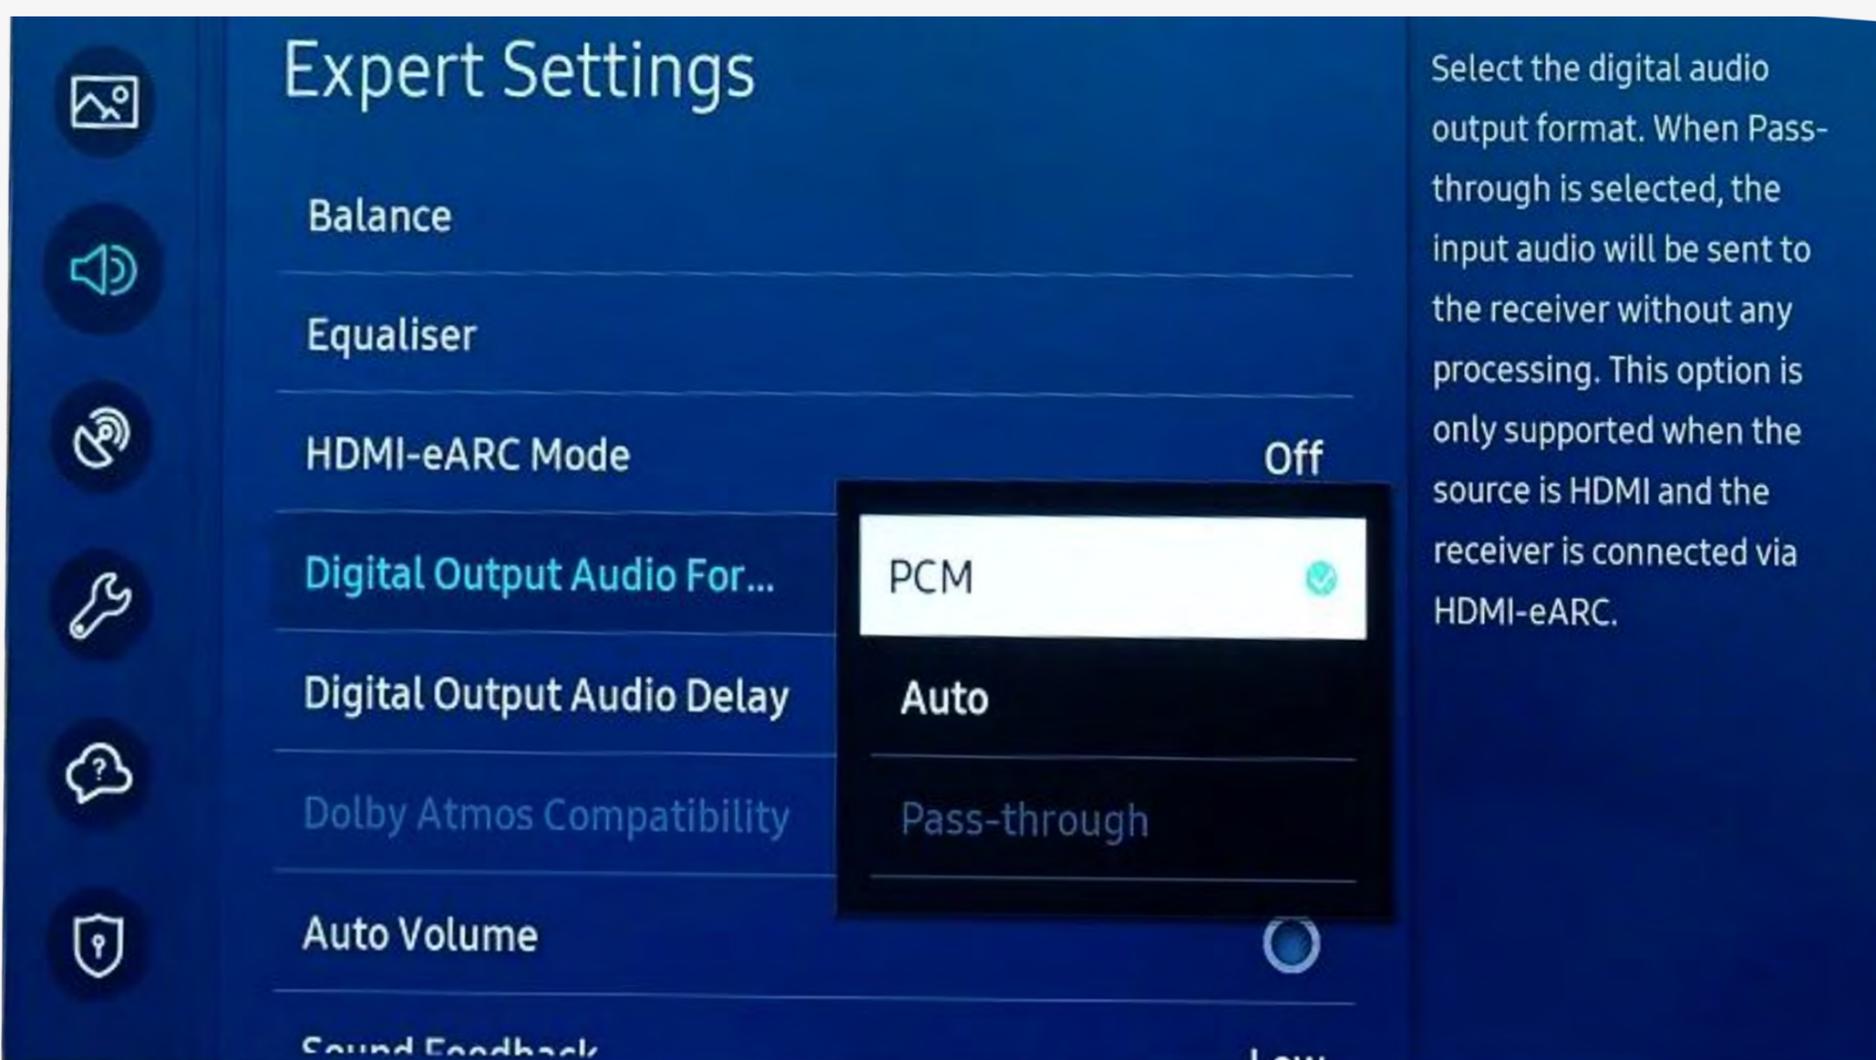

Not sure how?

Visit our [TV Sound Settings Guide](#)

Continue



Warning

↗ You're about to leave this setup guide and visit an external link.

 BACK To come back here again, please **use your browser's "back" button** or re-scan the QR code on your device.

[Proceed](#) ↗

< Back

Start
Over



Power on the transmitter

Slide the OFF ON switch to the "ON" position. You'll see the transmitter's LED light up.



Continue

< Back

Start
Over



Is the transmitter in pairing mode?

Is the  LED flashing **Green** and white  rapidly?



Yes

No

< Back

Start
Over



Put the transmitter in pairing mode manually

 Press & hold the  button for **5** seconds until the LED flashes green & white  .



Continue

< Back


Start
Over



Turn Bluetooth OFF on nearby devices

Your headphones might connect to other devices  .

Turn Bluetooth **off** on nearby devices before pairing.

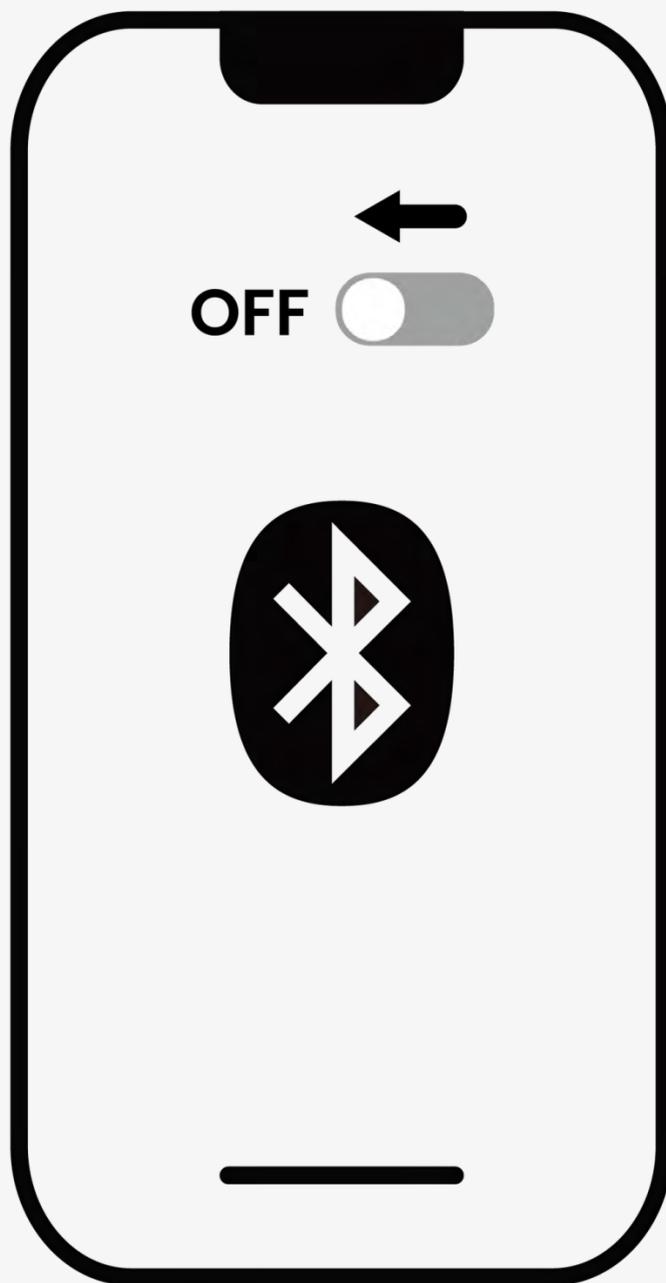

Bluetooth is off

< Back

Start
Over



Put your headphones in pairing mode



⚠ Pairing methods vary by headphones. Most activate by **pressing** and **holding** a button for a few seconds.

Not sure how?

Visit our [Headphone Pairing Guide](#)

Continue



Warning

↗ You're about to leave this setup guide and visit an external link.

 BACK To come back here again, please **use your browser's "back" button** or re-scan the QR code on your device.

[Proceed](#) ↗



Warning

↗ You're about to leave this setup guide and visit an external link.

 **BACK** To come back here again, please **use your browser's "back" button** or re-scan the QR code on your device.

[Proceed](#) ↗

< Back

Start
Over



Hold them close & wait for connection

- 1 Wait for **5-10** seconds.
- 2 Once connected, the LED will turn **solid white**.



Connected

Troubleshoot

< Back

Start
Over



Troubleshooting

If they fail to connect, please try:



Reset Transmitter



Reset Headphones



Clear Environment

< Back

Start
Over



Reset the transmitter

- 1** Press & hold - & + for 7 seconds.
- 2** Wait for LEDs to flash **pink**.
- 3** Transmitter will auto re-enter pairing mode.

Transmitter is reset

< Back

Start
Over



Reset your headphones

Resetting your headphones clears its pairing history.



Different headphones have different resetting processes. Consult your device's user manual for directions if needed.

Continue

< Back

Start
Over



Clear your environment

📶 WiFi routers & devices (i.e. Samsung Smart TVs) may interfere with pairing.

🔌 **Unplug** or **move** away to improve connection.



My environment is clear

< Back

Start
Over



Test for sound

 Play a TV show or movie and check for sound through your headphones.

✓ Tip: To stop sound from your TV speakers, go to **Settings** → **Audio** and select "**TV Speakers Off.**"

No sound? Try [troubleshooting](#)

Continue



Warning

↗ You're about to visit an external link and leave this setup guide.

 BACK To come back here again, please **use your browser's "back" button** or re-scan the QR code you have on your device.

[Proceed](#) ↗

< Back

Start
Over



If you notice a lag in sound

It may be because your headphones do NOT support **low-latency** technology.

For the best latency performance, use headphones that support **aptX Adaptive** or **aptX Low Latency**.

If you're using a non-aptX device, such as AirPods, you may experience a slight audio delay.

Continue

Contact us

< Back

Start
Over



Connect via AUX

1 Plug one end of the AUX cable into the TV's  **headphone jack**.

2 Plug the other end into the transmitter's "**AUX**" port.



Connected

< Back

Start
Over



Plug in the transmitter

⚡ Plug the **USB-C cable** into the **transmitter** and your TV's **USB** power port.



Continue

< Back

Start
Over




Select the right audio settings

 Using your TV remote, go to:

➔ **Settings** → **Sound** → **Sound Output**.

✓ Select **Headphones**.

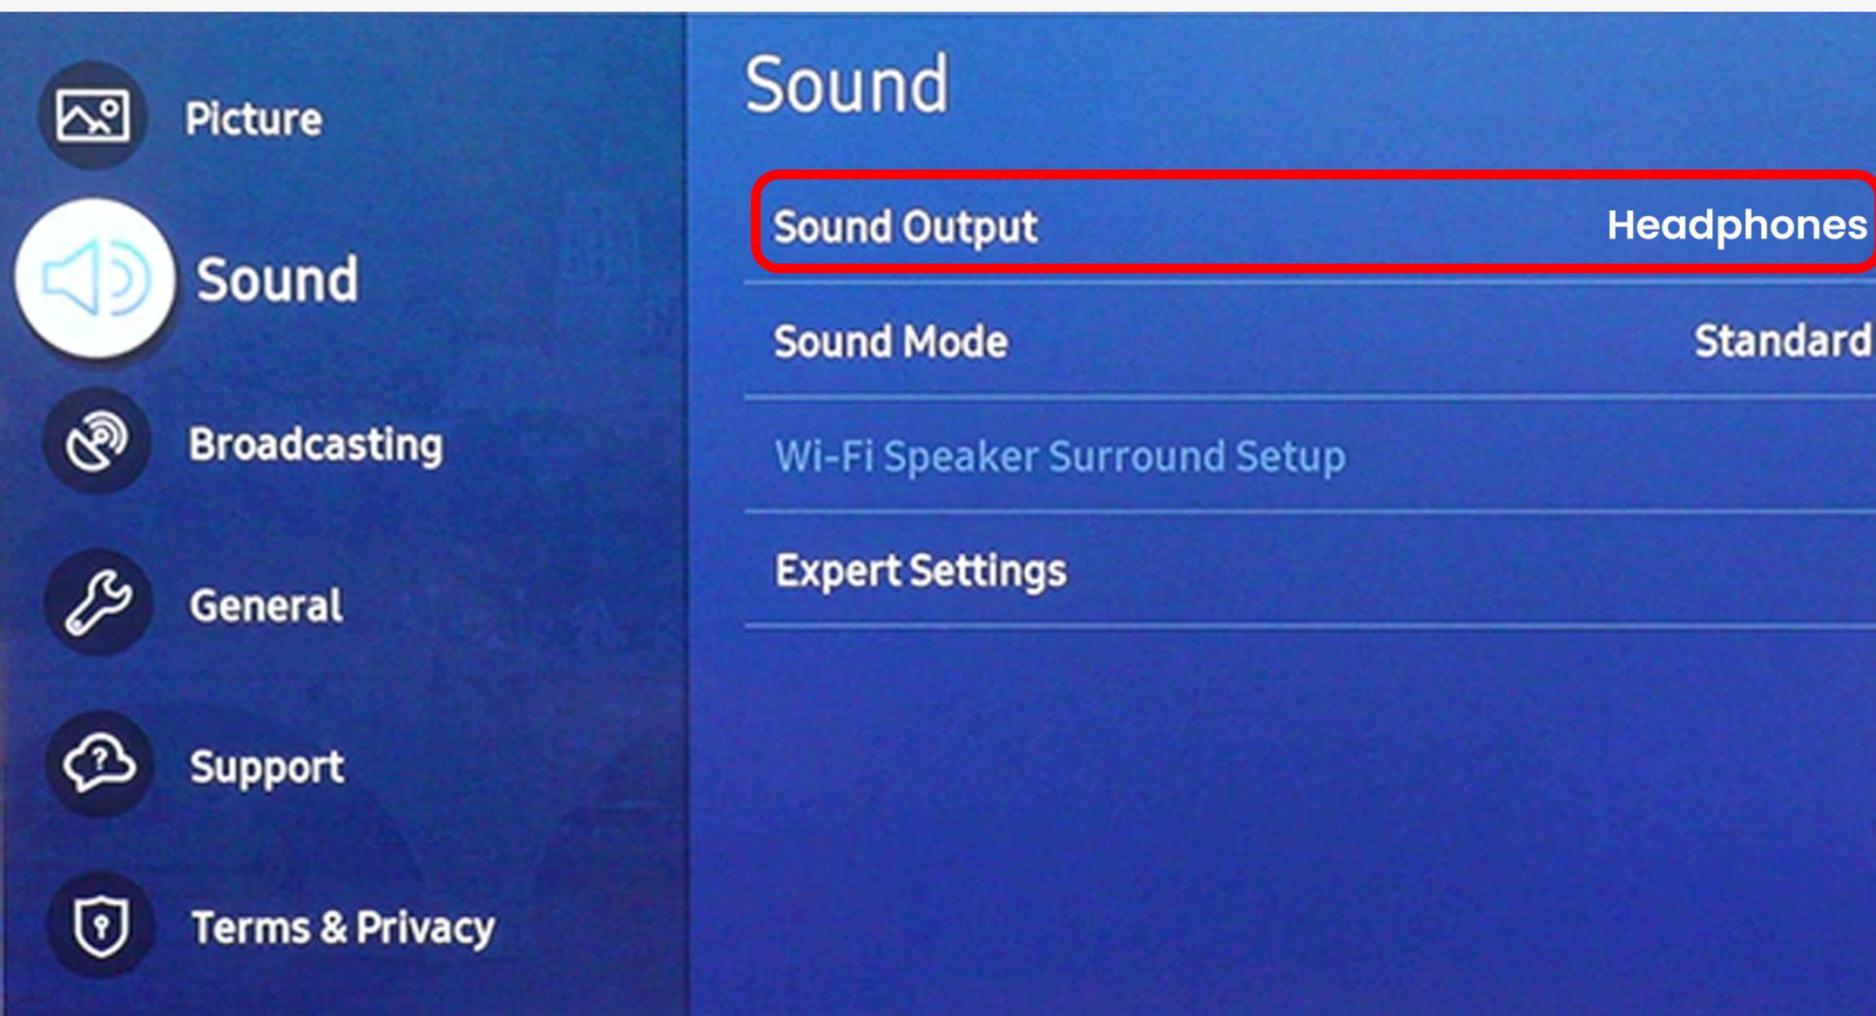

Continue

< Back

Start
Over



Power on the transmitter

Slide the **OFF** **ON** switch to the "ON" position. You'll see the transmitter's LED light up.



Continue

< Back

Start
Over



Is the transmitter in pairing mode?

Is the  LED flashing **Green** and white rapidly  • ?



Yes

No

< Back

Start
Over



Put the transmitter in pairing mode manually

 Press & hold the  button for **5** seconds until the LED flashes green & white  .



Continue

< Back


Start
Over



Turn Bluetooth OFF on nearby devices

Your headphones might connect to other devices  .

Turn Bluetooth **off** on nearby devices before pairing.

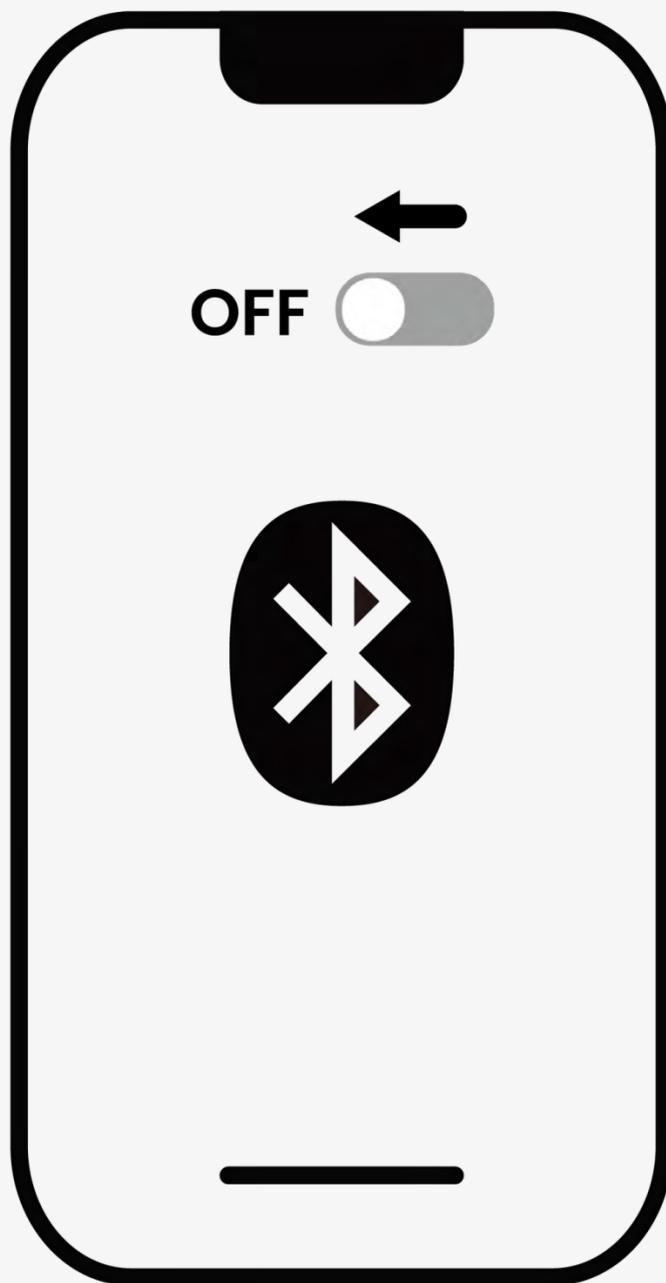

Bluetooth is off

< Back

Start
Over



Put your headphones in pairing mode



⚠ Pairing methods vary by headphones. Most activate by **pressing** and **holding** a button for a few seconds.

Not sure how?

Visit our [Headphone Pairing Guide](#)

Continue



Warning

↗ You're about to leave this setup guide and visit an external link.

 BACK To come back here again, please **use your browser's "back" button** or re-scan the QR code on your device.

[Proceed](#) ↗



Warning

↗ You're about to leave this setup guide and visit an external link.

 **BACK** To come back here again, please **use your browser's "back" button** or re-scan the QR code on your device.

[Proceed](#) ↗

< Back

Start
Over



Hold them close & wait for connection

- 1 Wait for **5-10** seconds.
- 2 Once connected, the LED will turn **solid white**.



Connected

Troubleshoot

< Back

Start
Over



Test for sound

 Play a TV show or movie and check for sound through your headphones.

✓ Tip: To stop sound from your TV speakers, go to **Settings** → **Audio** and select "**TV Speakers Off.**"

No sound? Try [troubleshooting](#)

Continue



Warning

↗ You're about to visit an external link and leave this setup guide.

 BACK To come back here again, please **use your browser's "back" button** or re-scan the QR code you have on your device.

[Proceed](#) ↗

< Back

Start
Over



If you notice a lag in sound

It may be because your headphones do NOT support **low-latency** technology.

For the best latency performance, use headphones that support **aptX Adaptive** or **aptX Low Latency**.

If you're using a non-aptX device, such as AirPods, you may experience a slight audio delay.

Continue

Contact us

< Back

Start
Over



Connect via RCA

⚠ Note

- Only RCA ports marked "**AUDIO OUT**" are the correct ports.
- RCA adapter is **NOT** included. Contact us for a free adapter if needed



Connected

Contact us

< Back

Start
Over



Plug in the transmitter

⚡ Plug the **USB-C cable** into the **transmitter** and your TV's **USB** power port.



Continue

< Back

Start
Over



Other connection options

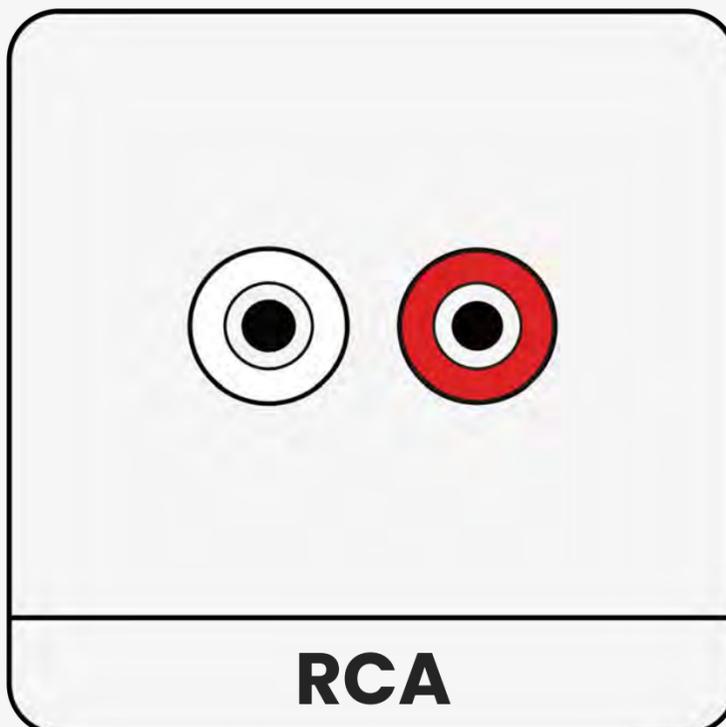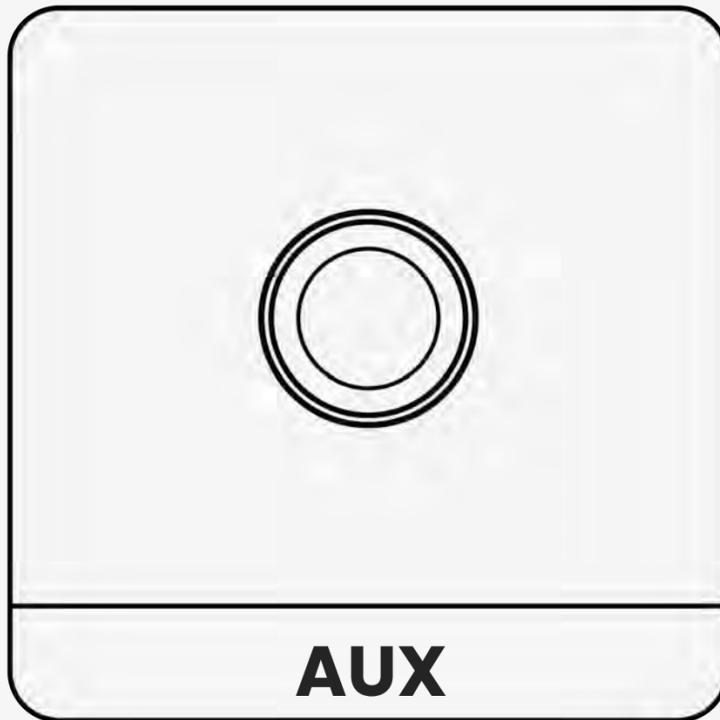

Not listed

< Back

Start
Over



Reach out to us for help!

You can email us directly at **support@avantree.com**, or click the button below to redirect to our support page.

We'll get back to you within 1 business day!

[Get support](#)





Warning

↗ You're about to leave this setup guide and visit an external link.

 BACK To come back here again, please **use your browser's "back" button** or re-scan the QR code on your device.

[Proceed](#) ↗

< Back

Start
Over



You're done!

We hope you enjoy your experience with the Oasis Plus 2!

If you ever need anything, please don't hesitate to reach out to us at support@avantree.com

[Add FREE 24-month coverage!](#)

[Advanced Setup & FAQs](#)





Warning

↗ You're about to leave this setup guide and visit an external link.

 **BACK** To come back here again, please **use your browser's "back" button** or re-scan the QR code on your device.

[Proceed](#) ↗