SP850



Interactive Setup Guide

Version 1.5

Start Setup

Main Menu

- 1. Before You Start
- 2. How to Charge
- 3. FM Radio
- 4. SD Card Player
- 5. <u>Bluetooth Speaker</u>
- 6. Troubleshooting and FAQs /
- 7. Register Product /
- 8. Contact Us
- 9. Rate this Guide 🖊





1. Before You Start


- The SP850 works as an FM radio, microSD card player, and Bluetooth speaker.
- To turn it on, remove the protective film from the battery and reinsert it.



2. How to Charge

The battery icon flashes while charging and stops when full (about **2.5** hours).

□ Charging requirements: 5V / 1A (USB-C).

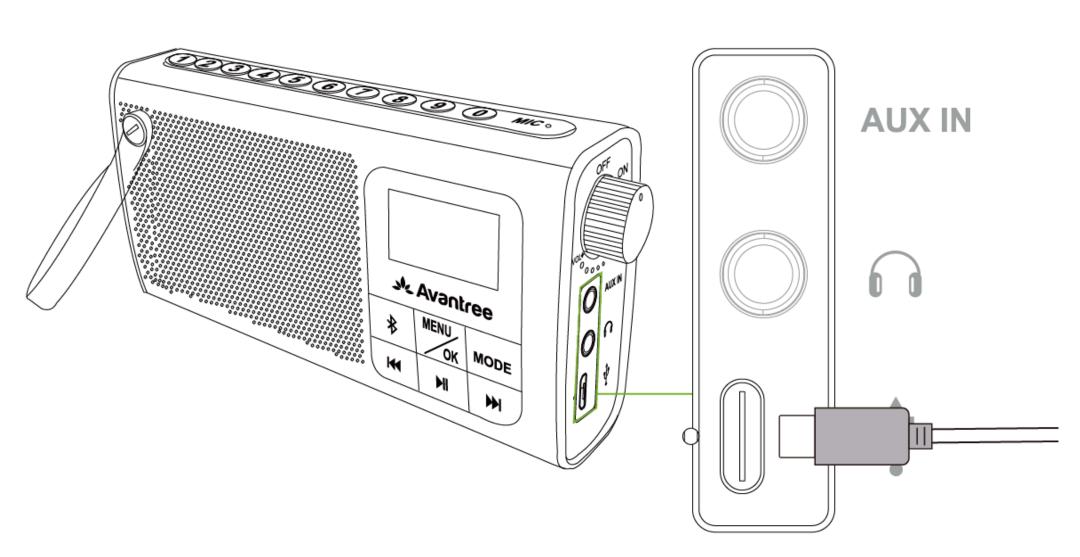






I would like to use as



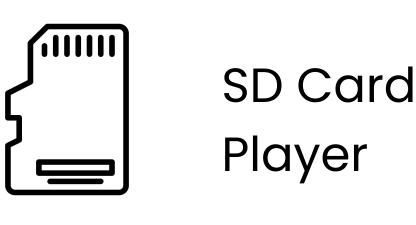





3. 1 Switch to FM mode

¹⊠Turn the knob to **ON** — the screen will light up.

2\omega\text{The device will start in **FM** mode the first time you turn it on. If not, press **MODE** once to switch to FM.



3.2 Search Channels

1\(\text{Double-click the MENU/OK button to start Auto-Search. The device will scan and save all available stations. (Takes about 2 minutes.)

212When done, it will tune to the **first** station found. Use the button to scroll through saved stations.

Got it

Troubleshoot

Reduce Static & Improve Reception

⚠ Minimise interference—keep
phones, TVs, and other electrical
devices away.

Continue

Need help

3.3 Preset Channel

♣ To save a favorite, hold any number key (1–9) until "Channel Saved" appears. Next time, press that number to go straight to the station.

⊠ For units before Batch T25F1, please update firmware first (see DFU steps).



3.4 Navigation Guide


- Press MENU/OK Mode settings
- Hold MENU/OK System settings
- Use ∅ / ∅ Scroll
- Press MENU/OK Select
- Choose "Return" Go back
- Turn knob Adjust volume

- Plug in 3.5mm wired headphones to listen privately.
- View detailed button functions here /

4. SD Card Player

4.1 Insert MicroSD Card

- Maximum storage capacity for a MicroSD card: 32GB.
- Supported file formats: MP3, WAV, WMA.
- Push the card in until it clicks into place.

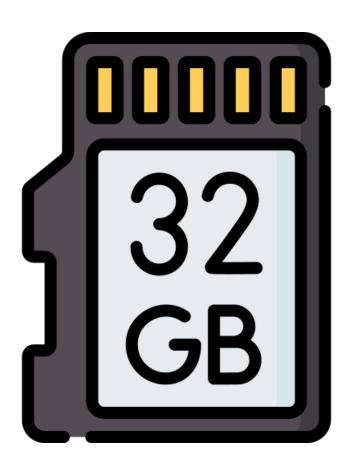





4. SD Card Player

4.2 Switch to MicroSD card mode

¹⊠Turn the knob to **ON** — the screen will light up.

2\(\text{MPress MODE}\) once to switch to Micro SD card mode.



4. SD Card Player

4.3 Navigation Guide

- Press MENU/OK Mode settings
- Hold MENU/OK System settings
- Use ∅ / ∅ Scroll
- Press MENU/OK Select
- Choose "Return" Go back
- Turn knob Adjust volume

For units before Batch T25F1, follow the DFU update steps here to enable the "Repeat Off" option.






5.1 Turn on Bluetooth

1\(\text{IThis speaker connects to phones,}\) tablets, or computers - **not** to other speakers or headphones.

2\mathbb{I}\text{Turn on Bluetooth on your device.}

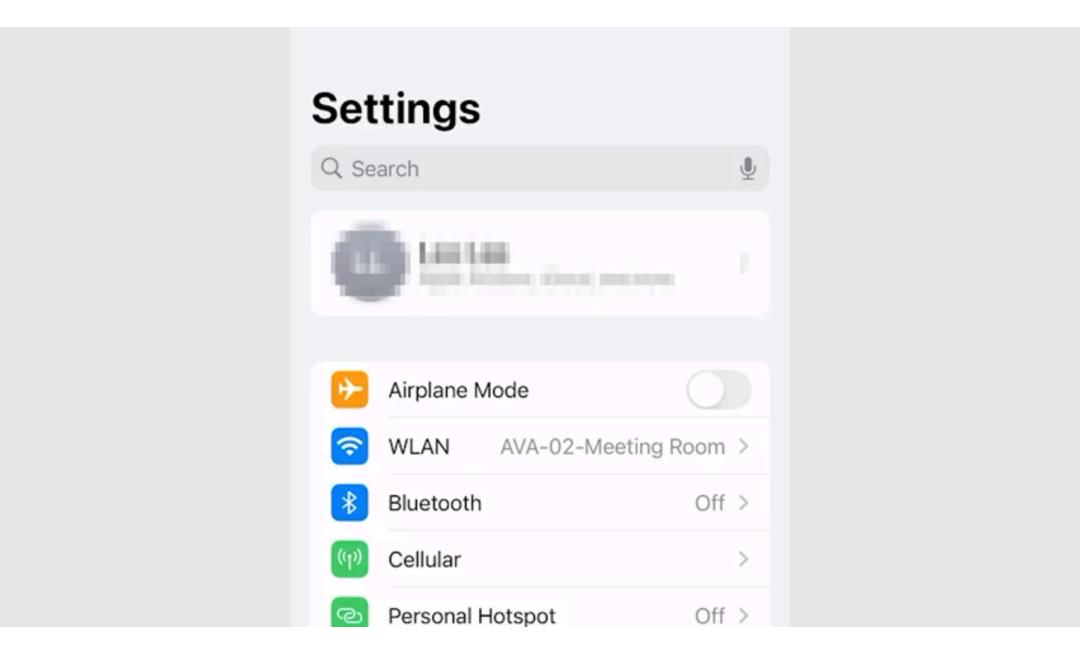





5.2 Switch to Bluetooth mode

1⊠Turn the knob to **ON** — the screen will light up.

2\mathbb{Ince} Press sonce to switch to **Bluetooth** mode (pairing).



5.3 Select "Avantree SP850"

- Select the speaker from your device's Bluetooth list.
- Mait for connection.



Connected

5.4 Navigation Guide

- Press MENU/OK Mode settings
- Hold MENU/OK System settings
- Use ∅ / ∅ Scroll
- Press MENU/OK Select
- Choose "Return" Go back
- Turn knob Adjust volume

⊠Tips

- The **microphone** port works for Bluetooth calls.
- Plug in a 3.5mm audio cable to use it as a wired speaker (AUX mode).





You're Ready

Enjoy your experience with **SP850** now!

☐ Rate this guide, thanks! ↗







8. Contact Us

We're here to help you. Choose an option below:

Email us at support@avantree.com

Book a call /

Submit a ticket /

Live chat with us ✓

