

# Audiplex 3/MX



## Interactive Setup Guide

Version 1.5.1


Start Setup

[< Back](#)

# Main Menu

1. Before You Start
2. How to Charge
3. Source Connection
4. Receiver Connection
5. Advanced Features
  - 5.1 Add more receivers
  - 5.2 Add more transmitter
  - 5.3 Channel Switching
  - 5.4 Use with Wireless Microphone
6. Register Your Product
7. Live Agent Help
8. Rate This Guide

[Next](#)

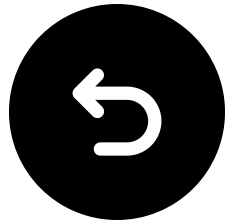

## 1. Before You Start

- **Group use** – Ideal for classes, churches, and families
- **Flexible input** – Bluetooth for phones, wired (Optical/AUX/RCA) for Mixers / TVs
- **Expandable** – Connect up to 100 receivers
- **Not for Bluetooth headphones** – Use only with included receivers
- **Personal volume** – Each user adjusts their own sound

< Back

Back to  
Menu



## 2. How to Charge


- Charge receiver in dock (included 5V/2A adapter).
- Low battery: Top **red** light blinks every 5s (fast blink before off).
- Playtime: up to 10 hrs.



Next




< Back

Back to  
Menu

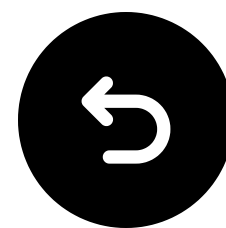

## 3. Source Connection

The transmitter supports three input methods: Bluetooth / Optical / AUX.

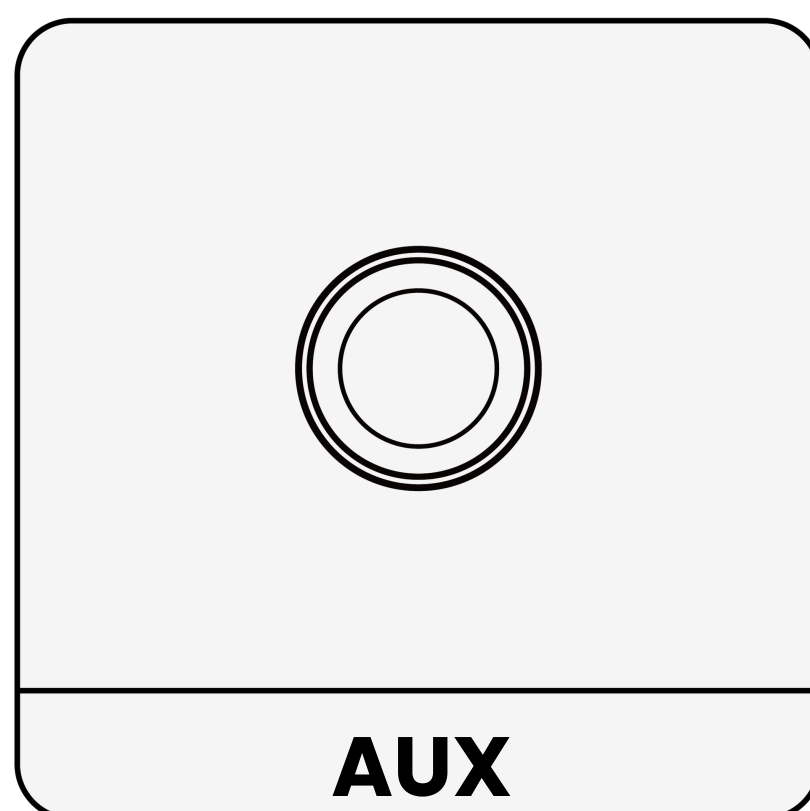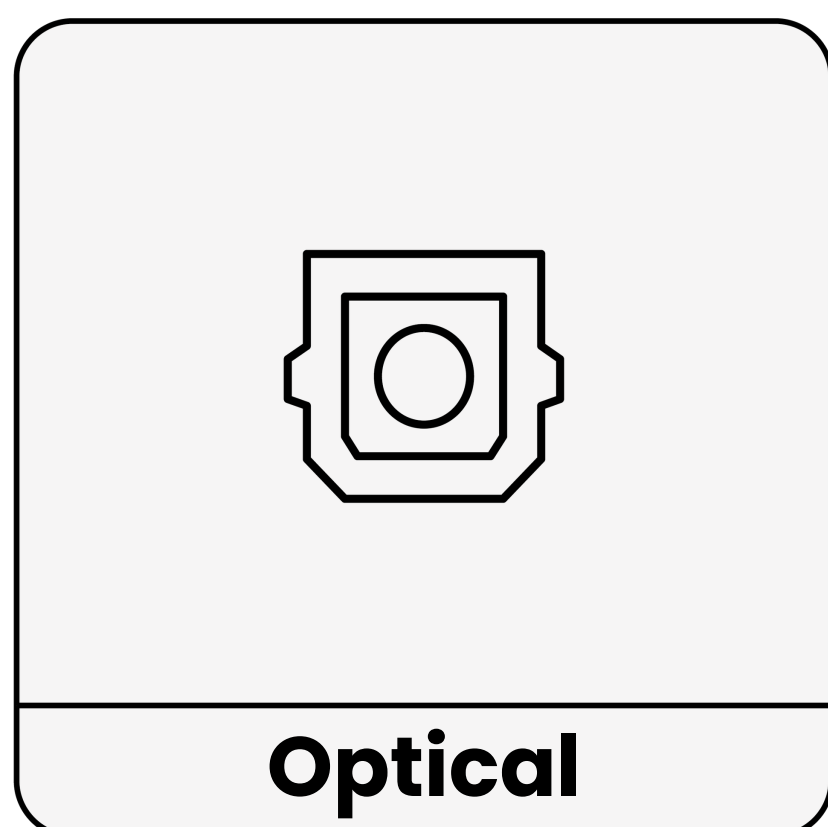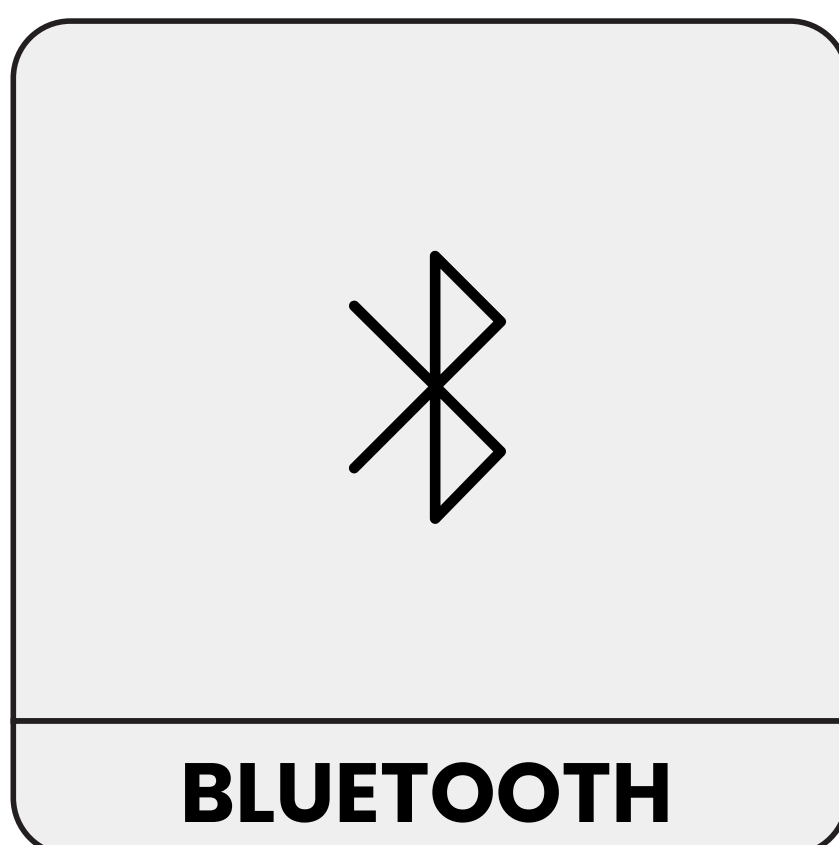


< Back

Back to  
Menu



## 3. Source Connection

### 3.1 Enter Pairing Mode


- 1 Power device via USB(5V, 0.5~2A) and turn on.
- 2 Press button  → Bluetooth LED blinks.



Next


< Back

Back to  
Menu

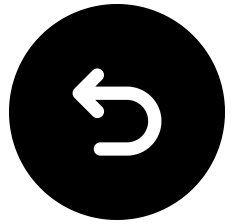

## 3. Source Connection

### 3.2 Connect to Phone/Tablet

- 1 Turn on Bluetooth, and select "**Avantree Flex Base**" or "**Avantree Audiplex 3**".
- 2 Connected → Device's  LED stays **blue**.

Note: Keep phone/tablet within **4.5m(15 ft)** of device.



activities such as streaming music, making phone calls, and gaming. [Learn more...](#)

Bluetooth



This iPhone is discoverable as "iPhone Leo" while Bluetooth Settings is open.

MY DEVICES

AirPods

Not Connected 

OTHER DEVICES 

To pair an Apple Watch with your iPhone, go to the [Apple Watch app](#).

Next

< Back

Back to  
Menu



## 3. Source Connection

### 3.1 Connect Audio & Transmitter

- 1 Plug Optical cable into TV's **Optical Out** & transmitter's **OPTICAL**(Input).



Next

< Back

Back to  
Menu



## 3. Source Connection

### 3.1 Connect Audio & Transmitter

- 2 Powered via USB-C(5V, 0.5~2A).
- 3 Turn on transmitter. OPT mode is default(LED on).



Next

< Back

Back to  
Menu



## 3. Source Connection

### 3.2 Audio Sound Settings

- 1 Go to: Settings > Sound > Sound Output, select **Optical**.
- 2 Set audio format to **PCM** to avoid **no sound**.
- 3 Check OPT LED → Solid.



View [TV Sound Settings Guide](#) ↗

Next

< Back

Back to  
Menu



## 3. Source Connection

### 3.1 Connect Audio & Transmitter

- 1 Plug AUX cable into audio source's **headphone jack** & transmitter's **AUX**(Input).



Next

< Back

Back to  
Menu



## 3. Source Connection

### 3.1 Connect Audio & Transmitter

- 2 Powered via USB-C (5V, 0.5~2A).
- 3 Turn on transmitter and switch to **AUX** (LED on).



Next

< Back

Back to  
Menu



## 4. Receiver Connection

### 4.1 Connect Receiver & Transmitter


- 1 Turn on receivers.
- 2 Auto-connects to transmitter. Receivers' **channel LED solid** (default: Channel 1).
- 3 Plug headphones into receiver.



Next

< Back

Back to  
Menu

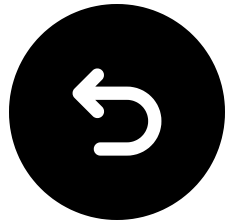

## 4. Receiver Connection

### 4.2 Adjust Volume

- Press **+** / **-** on receiver to adjust volume.
- Each receiver has **independent** volume control.

Next



< Back

Back to  
Menu



## 5. Advanced Features

### 5.1 Add More Receivers

- 1 Transmitter: hold  2s →  Fast blinking **blue** light.
- 2 Receiver: hold "+" & "Channel" 3s → **Channel 1's** LED fast blink → Connected: LED **solid**.


Supports 100 simultaneous receivers.



Next

< Back

Back to  
Menu

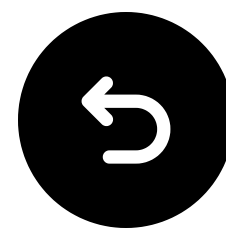

## 5. Advanced Features

### 5.2 Add More Transmitters

Use extra transmitters to stream different audio sources.

Refer to [Section 5.1](#) for setup instructions.

Switch channels ([Section 5.3](#)) to select which audio source to listen to.

Next

< Back

Back to  
Menu



## 5. Advanced Features

### 5.3 Channel Switching


**1** Hold 'Change Channel' on the transmitter/receiver 2s.

**2** LED switches.

Match channels for auto-connect.



Next

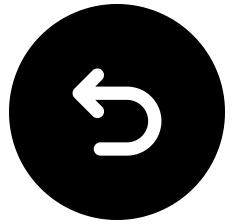

## 5. Advanced Features


### 5.4 Use with Wireless Microphone

- 1 Use a 3-pin 3.5mm mic.  
[\(e.g., BOYA BY-WM3T2\)](#)
- 2 Use [AUX extension cable](#) to reduce interference.
- 3 Plug into AUX IN next to antenna.
- 4 Adjust volume on receiver.



< Back

Back to  
Menu

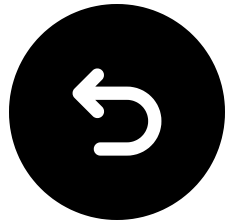

## 6. Register Your Product

Register now to:


- Extend warranty to 24 months-FREE.
- Enjoy priority service support.

[Register Now](#) ↗

You're Ready

< Back

Back to  
Menu

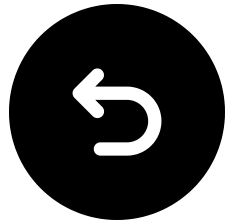

## 7. Live Agent Help

We'll respond within **1 business day**

Quick support options:

 Email: [support@avantree.com](mailto:support@avantree.com)


 [Schedule callback ↗](#)

 [Submit a ticket ↗](#)

 [Live chat ↗](#)

< Back

Back to  
Menu

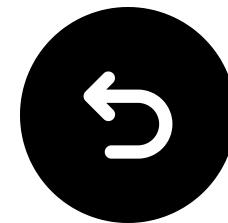

## 8. Rate This Guide

Thanks for choosing Audiplex 3!

We hope this guide helped you get started.

Your quick rating helps us improve:

