Medley Pebble



Interactive Setup Guide

Version 1.5

Start Setup

Main Menu

- 1. Before You Start
- 2. How to Wear
- 3. Connect via Base (Recommended)
- 4. Connect via TV's Bluetooth
- 5. Advanced Features
- 6. Troubleshooting
- 7. Register Your Product
- 8. <u>Live Agent Help</u>
- 9. Rate This Guide
- 10. Advocate for Us

1. Before You Start

Designed for watching TV comfortably while staying aware of your surroundings.

Key Tips:


- Recommend to use with base
- Turn off base when pairing with phone
- TV + phone can work together

2. How to Wear


Place the ear hook along your ear's contour.



Choose Mode

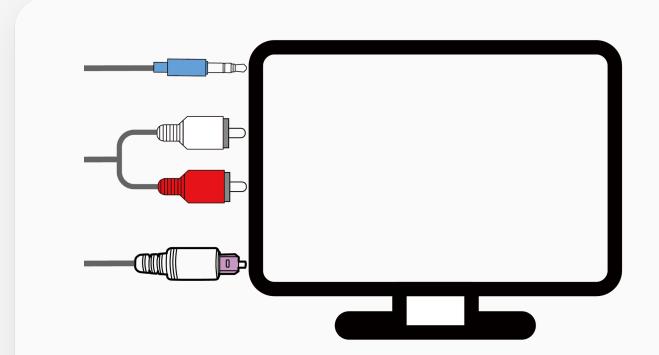


Connect via Base (Recommended)

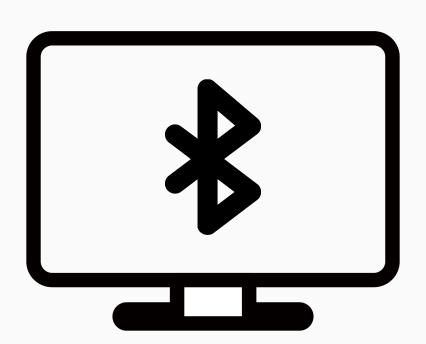



Connect via TV's Bluetooth

Select Connection Type

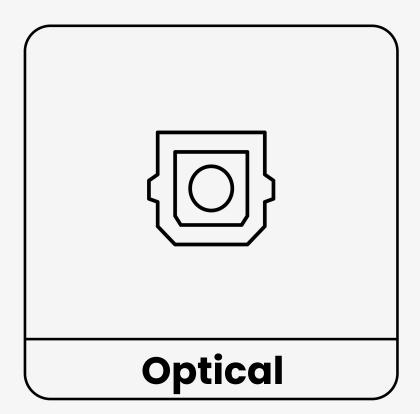


(Recommended)

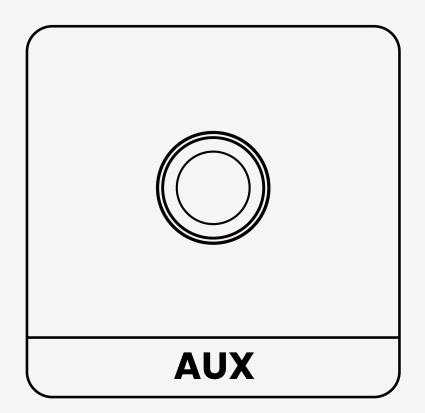

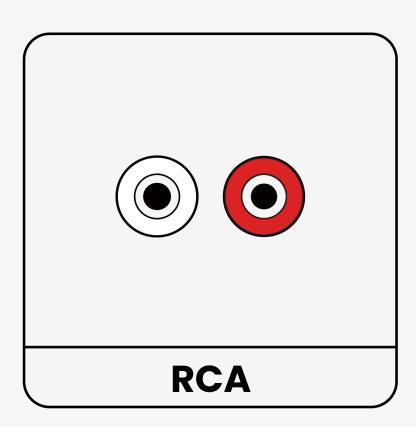


3.1 Connect Cables

1121 Plug USB-C cable into power near TV.

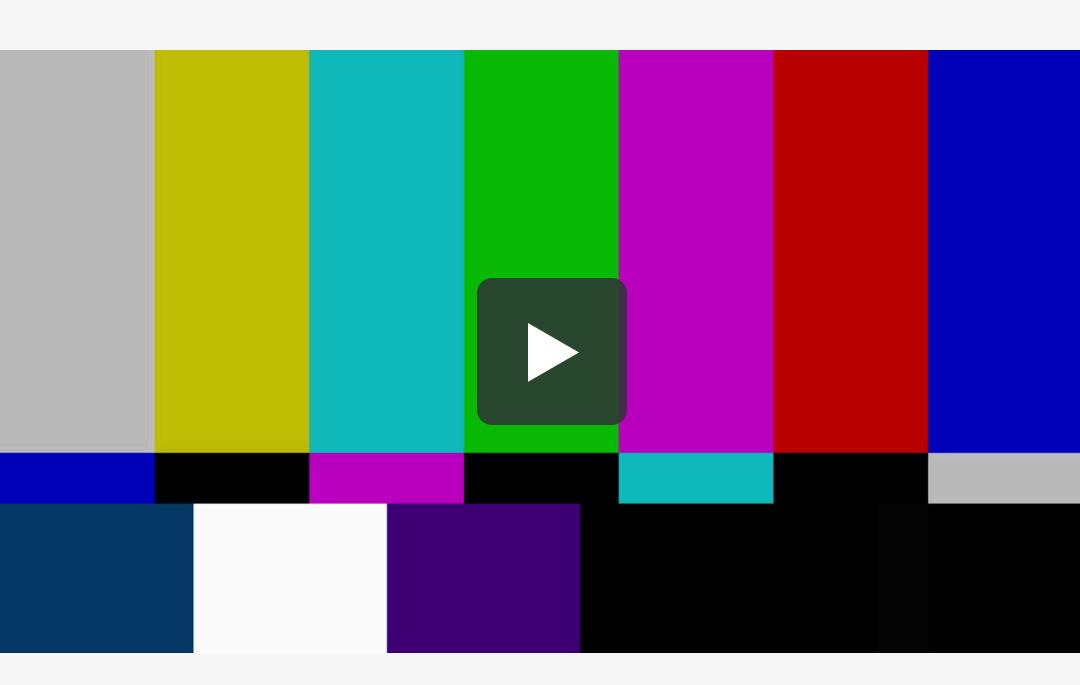

3.1 Connect Cables


21 Plug Optical cable into TV's Optical Out and transmitter's OPT IN.

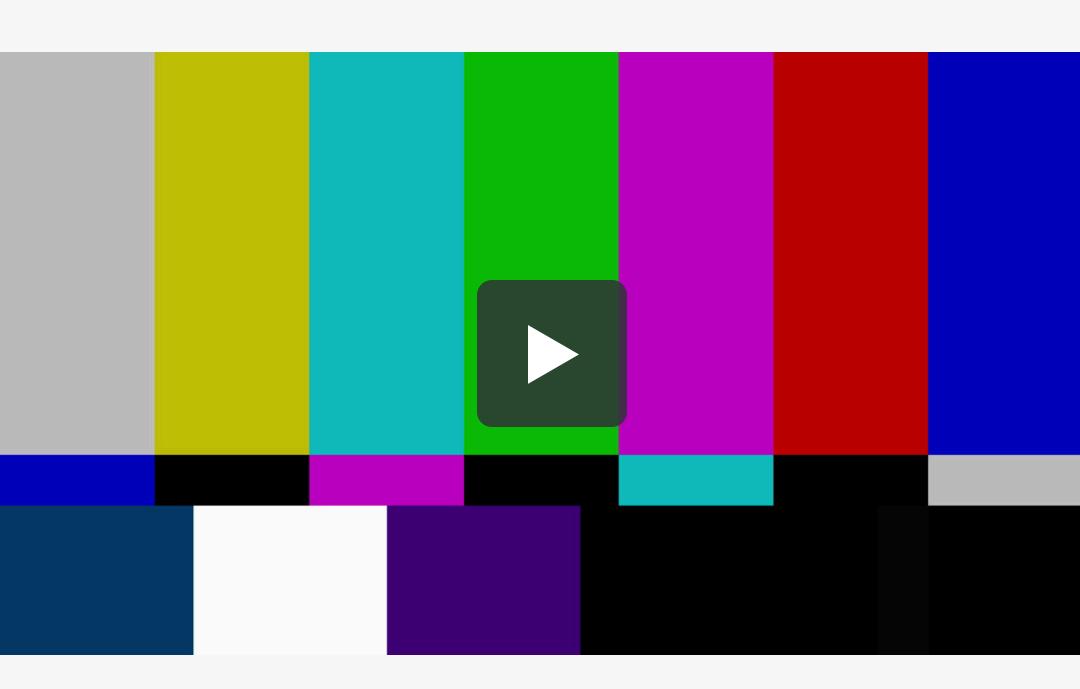

3.2 Adjust TV Sound Settings

1\overline{\text{Notal}} \text{Sound > Sound > Sound > Output, select **Optical**.

2\overline{\text{Set audio format to PCM to avoid no sound.}

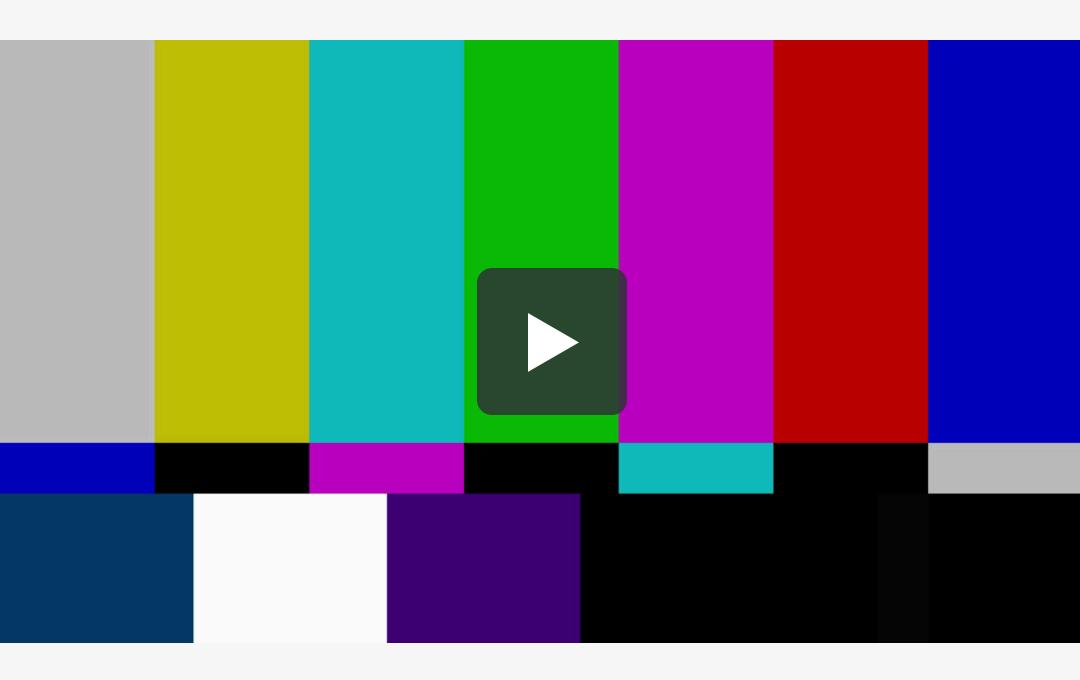

Not sure how? Visit our <u>TV Sound Settings Guide</u>



Warning

You're about to leave this setup
guide and visit an external link.


☑ To come back here again,please use your browser's"back" button or re-scan the QR code on your device.

Proceed 7

3.3 Power on & Connect


III Turn on transmitter, remove earphones. Transmitter blinks blue. Earphones stay blue 2s, then blink red & blue.

21 Wait 5s. Transmitter stays blue, earphone LED **off** when connected.

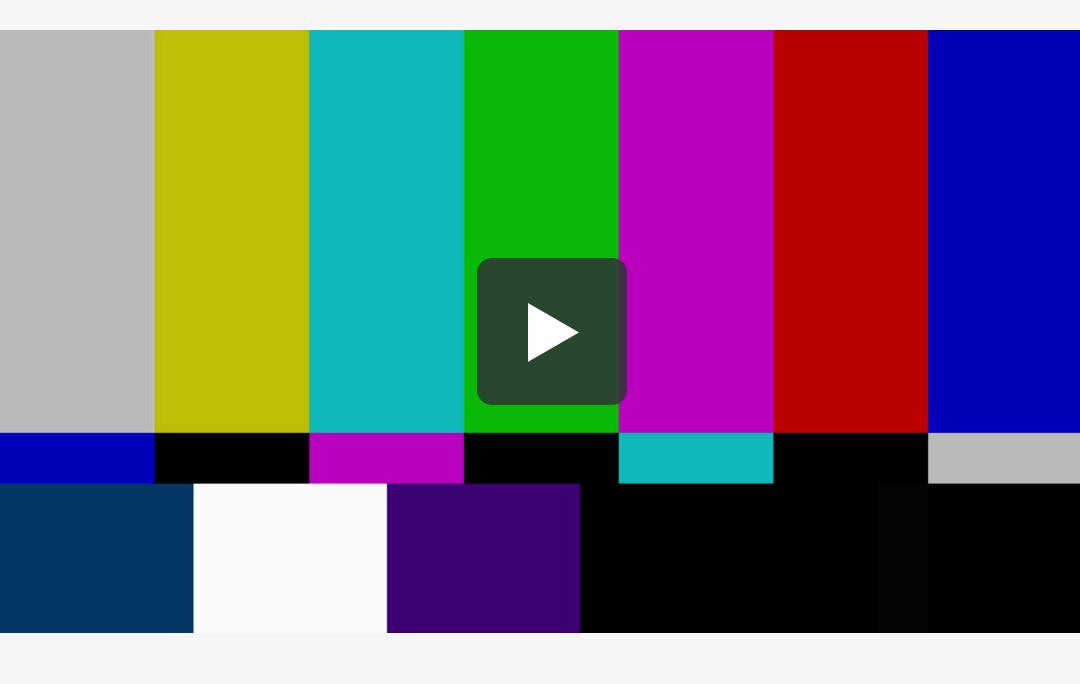

3.1 Connect Cables

12 Plug USB-C cable into power near TV.

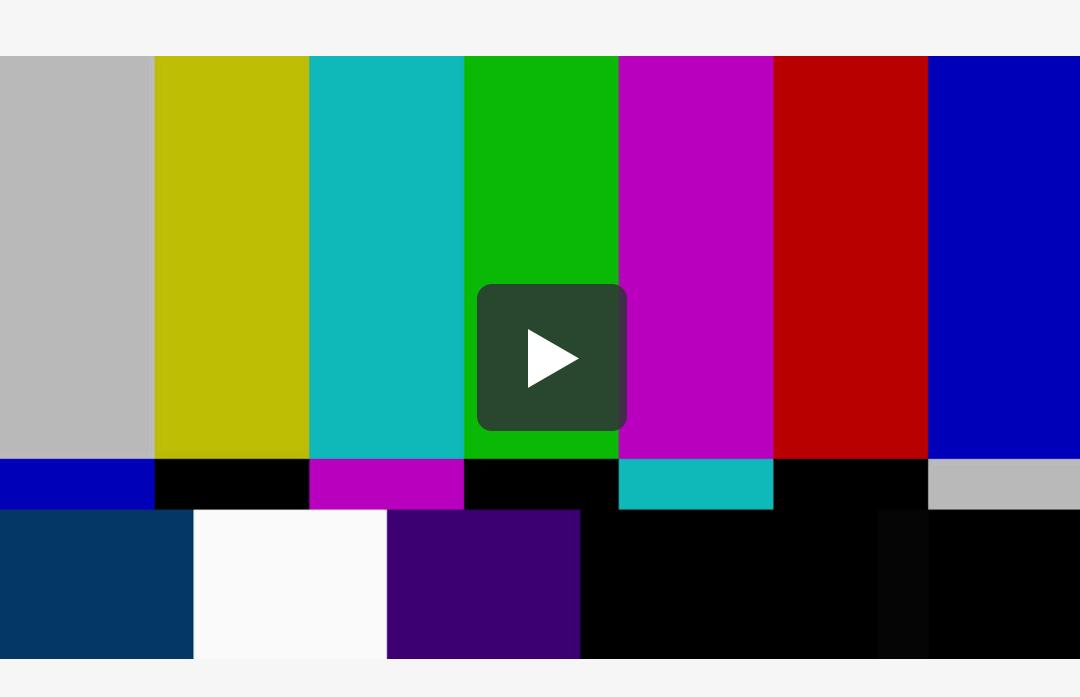

3.1 Connect Cables


2\(\text{Plug AUX cable into TV's}\) **headphone jack** & transmitter's **AUX**.





3.2 Adjust TV Sound Settings


Go to: Settings > Sound > Sound Output, select **Headphones**.

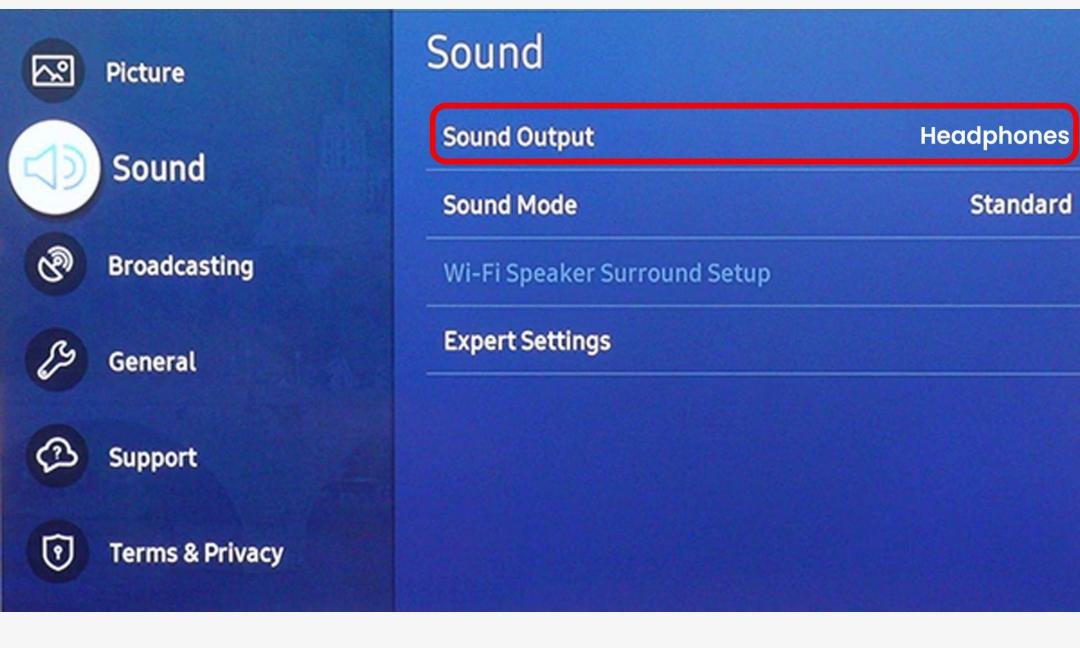

3.3 Power on & Connect


III Turn on transmitter, remove earphones. Transmitter blinks blue. Earphones stay blue 2s, then blink red & blue.

21 Wait 5s. Transmitter stays blue, earphone LED **off** when connected.

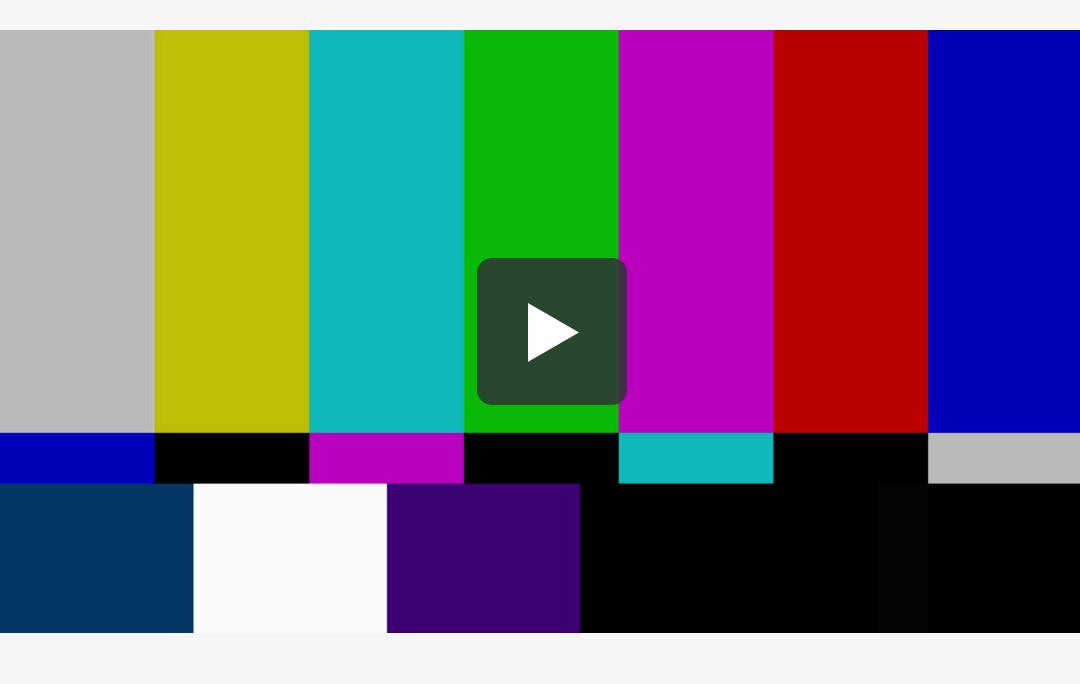

3.1 Connect Cables


12 Plug USB-C cable into power near TV.

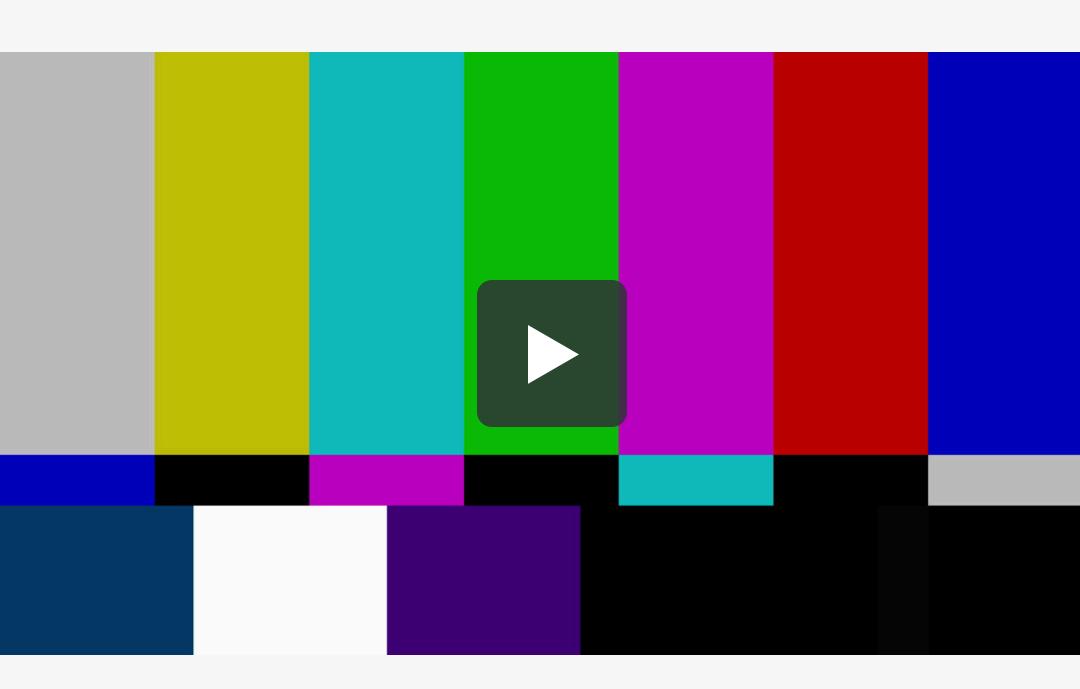

3.1 Connect Cables

21 Use RCA ports labeled Audio Out.


- RCA to AUX adapter NOT included.
- Contact us for a free adapter if needed.

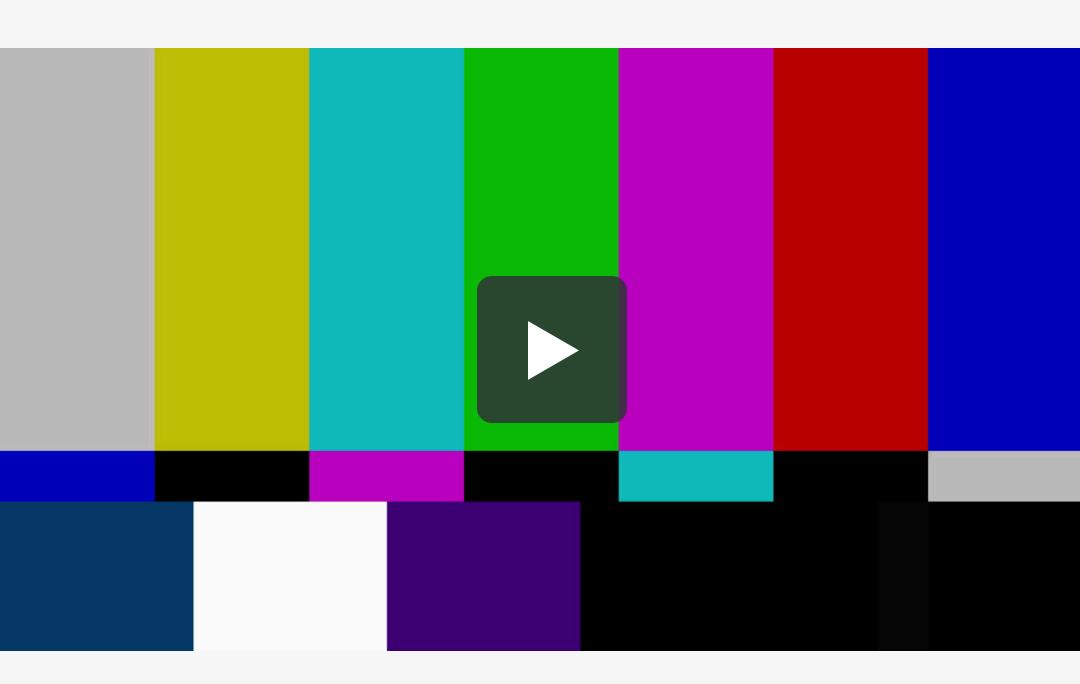



3.2 Adjust TV Sound Settings


Go to: Settings > Sound > Sound Output, select **Headphones**.

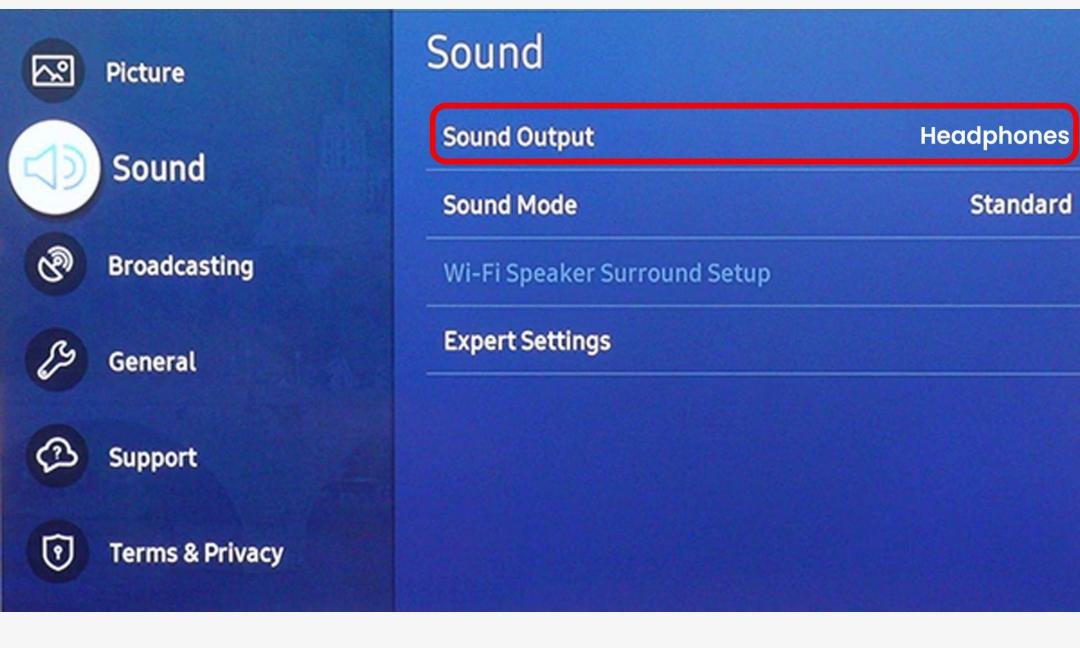

3.3 Power on & Connect

III Turn on transmitter, remove earphones. Transmitter blinks blue. Earphones stay blue 2s, then blink red & blue.

21 Wait 5s. Transmitter stays blue, earphone LED **off** when connected.

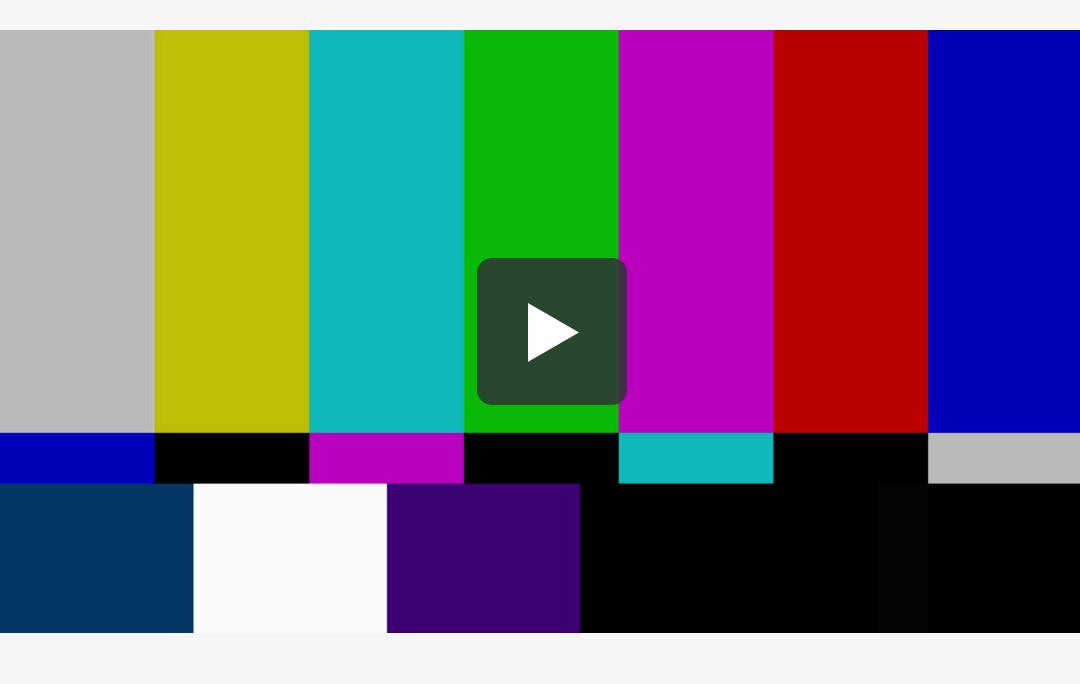

4.1 Keep Transmitter Off







4.2 Enter TV Bluetooth Settings

Go to: Settings > Sound > Sound
Output, select **Bluetooth Speaker List**.




Not sure how? Visit our <u>TV Bluetooth Settings Guide</u>

Next

4.3 Put Earphones Into Pairing

With transmitter off, remove earphones.

LED blinks red & blue → ready to pair.

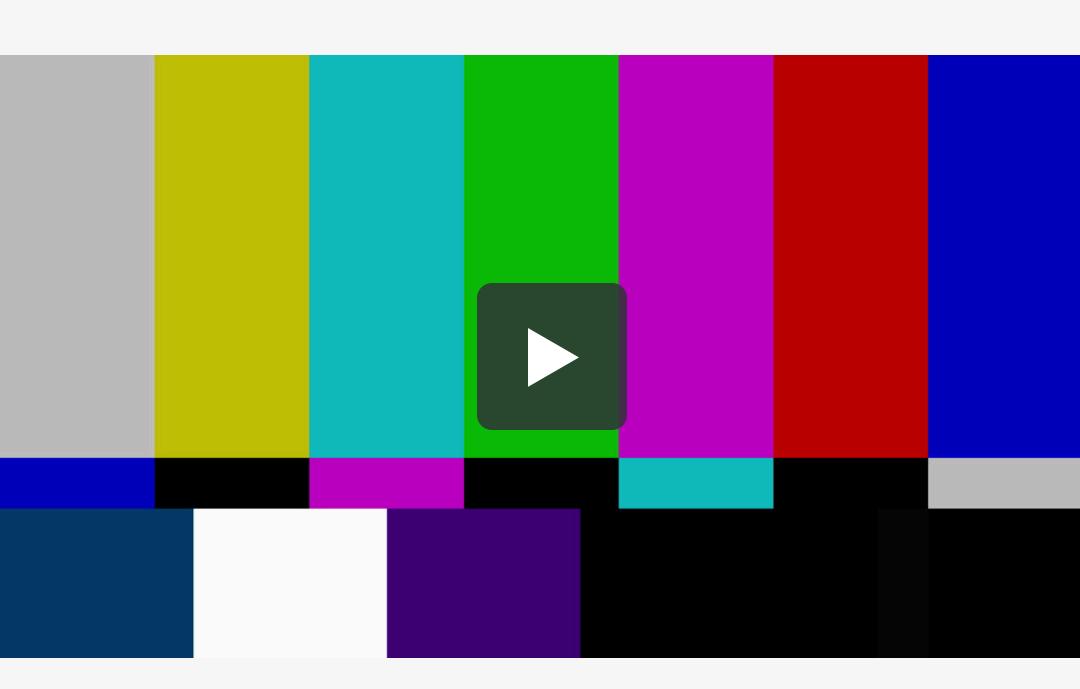






4.4 Select "Avantree Pebble Pro"

Select "Avantree Pebble Pro" from TV's Bluetooth Speaker List to connect.

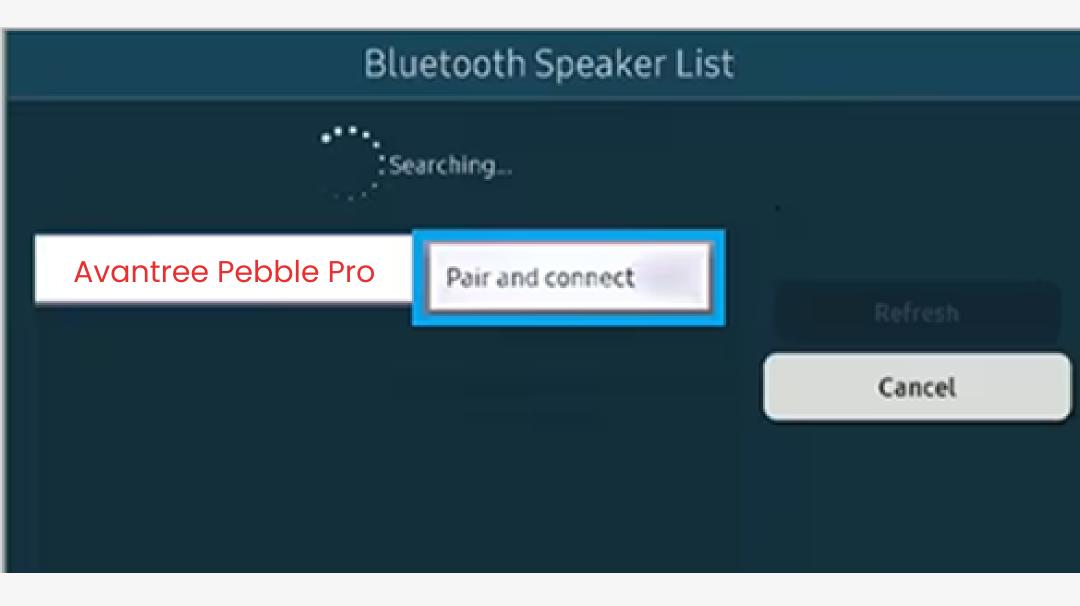


5. Advanced Features

5.1 Use Earphones With Phone/PC

111 Turn transmitter off.

2\overline{\text{Remove earphones. LEDs blink}} red & blue (pairing mode).

3\(\text{Iurn on Bluetooth, search}\)
"Avantree Pebble Pro" and pair.
Once connected, LEDs are off.

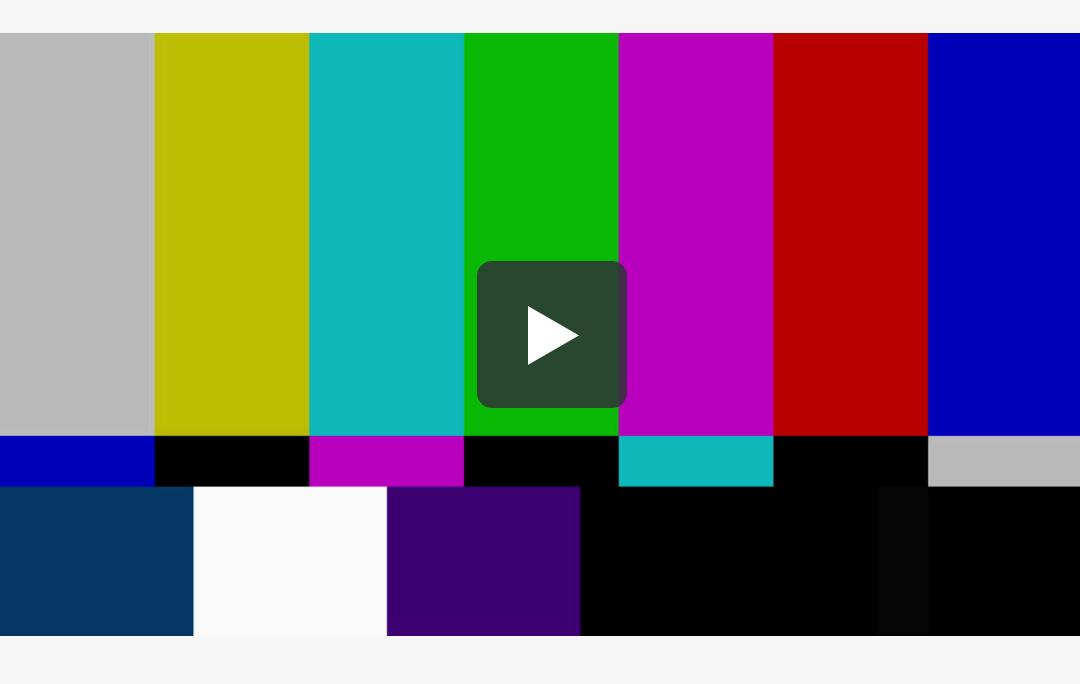


5. Advanced Features

5.2 Earphones Dual Link (Phone + Base)

112 Connect earphones to phone.

21 Turn on transmitter and wait 2s. When connected, stays blue.


Note: Dual Link ensures you won't miss calls. Press **MFB** to answer calls; TV audio takes priority.

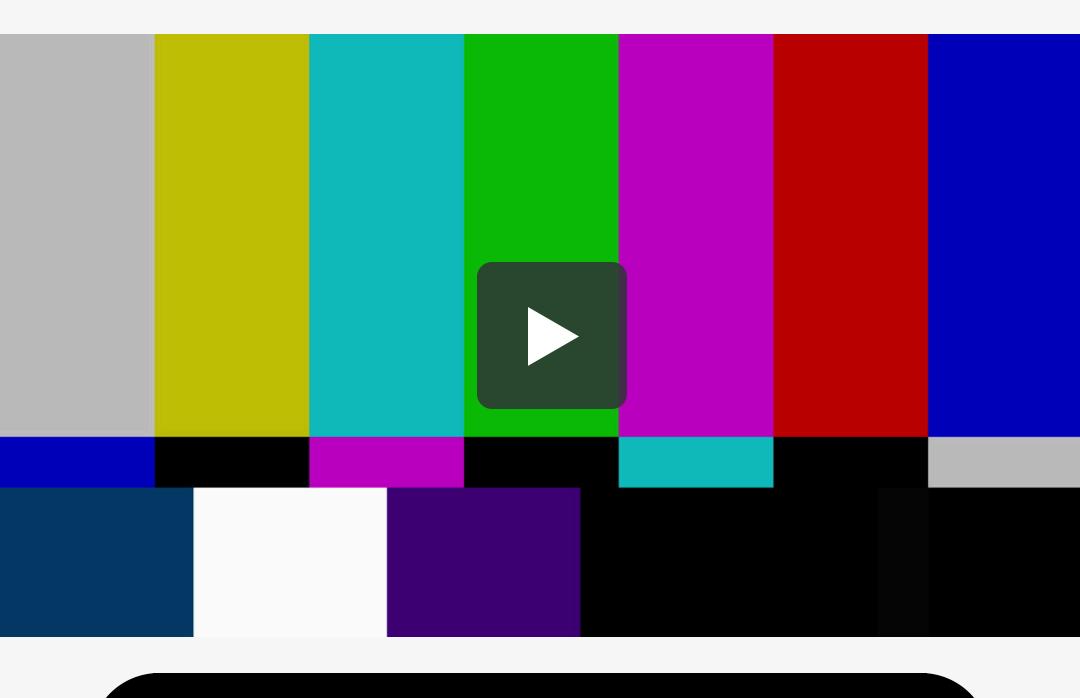

5. Advanced Features

5.3 Bypass to Soundbar

Bypass works only with matching input / output, e.g., Optical for both TV and soundbar.

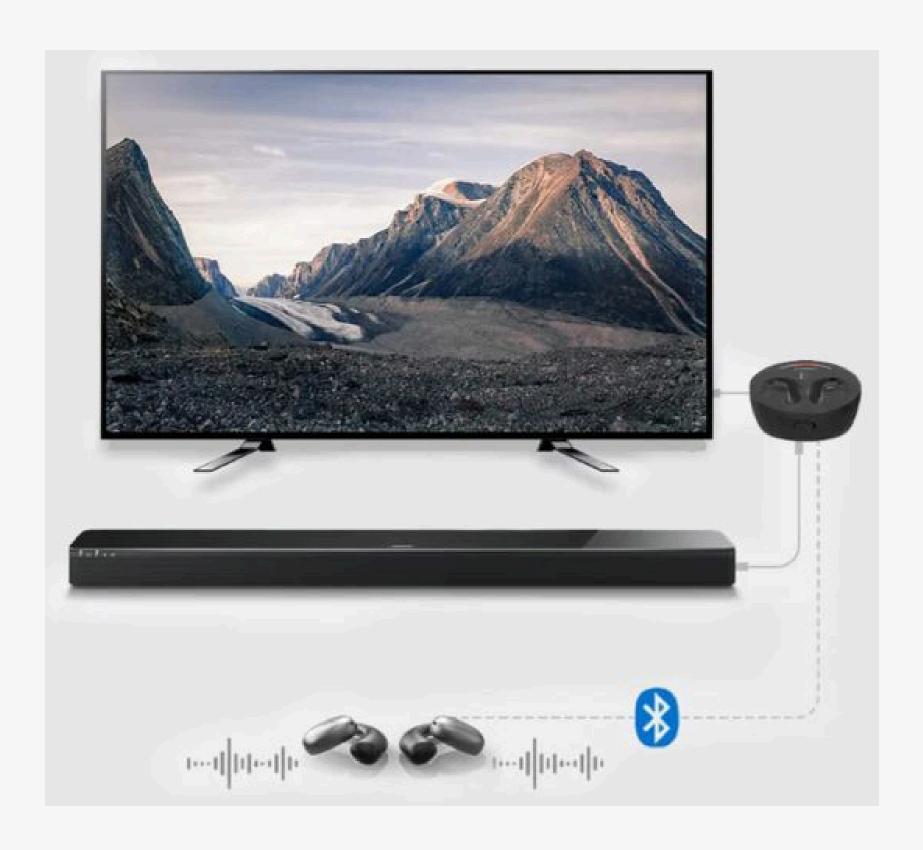

6. Troubleshooting

No sound? Check 2 things:

1. Headphone & Base Connected?

Solid blue = OK

Flashing = Not connected → <u>Fix it</u>

2. TV Audio Signal OK?

AUX / OPT solid = OK

Flashing = No signal → Fix it

More Troubleshooting & FAQs /

7. Register Your Product

Register now to:

- Extend warranty to 24 months-FREE.
- Enjoy priority service support.

Register Now ↗

8. Live Agent Help

We'll respond within **1 business day**Quick support options:

- X Email: support@avantree.com

- ∠ Live chat ∠







9. Rate This Guide

Thanks for choosing Medley Pebble!

We hope this guide helped you get started.

Your quick rating helps us improve:

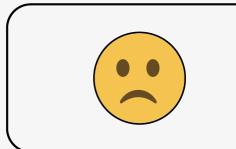

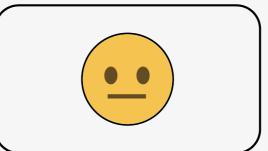



10. Advocate for Us

We've supported hearing-impaired customers for **20+** years.

Did we help you? Leave a quick review on Amazon to support us!

Select your store:

- M Amazon US
- Mazon UK
- M Amazon CA
- Mazon AU