



Aria Aura (T)

2-in-1 Bluetooth Headphones
With Auracast Support




Interactive User Guide

Version 2.3.1



First Time Setup

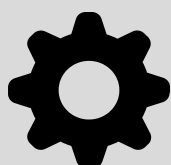

Troubleshooting

< Back



Main Menu

1. Before You Start

2. Use as Bluetooth Headphones

- Connect to Phone/PC
- Connect to Bluetooth TV

3. Use With Auracast Broadcast

- At Home(TV Transmitter)
- In Public Places

4. Advanced (Optional)

- Dual Mode (Never Miss a Call)
- Join a Secured Broadcast

5. Power, Buttons & Indicators

6. Troubleshooting



7. Support & Feedback

Next

1. Before You Start


2-in-1 **Bluetooth** headphones with **Auracast** support

- Use as regular Bluetooth headphones
- Join **open broadcasts** (e.g. churches)
- Join **secured broadcasts** via app
- **Never miss a call** while listening to broadcasts

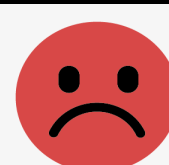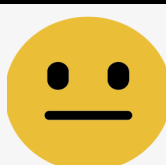
[Next](#)



2. Use as Bluetooth Headphones

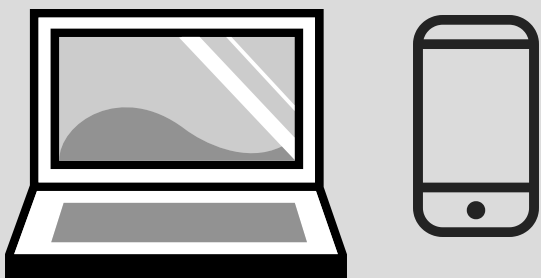

Connect to
Phone/PC

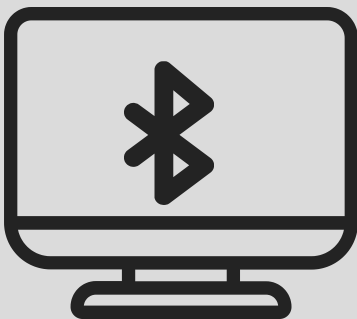

Connect to
Bluetooth TV





Connect to Phone/PC

- 1 Slide the power switch to **ON**.
On first use, auto-enter pairing
→ LED blinks **red** & **blue**.
 - 2 On your device, turn on Bluetooth
and select **Aria Aura**.
- ✓ **Connected:** LED turns **solid blue**.



*Not blinking red & blue? Hold the power switch to **Pair with Phone** for 3s.*

Next

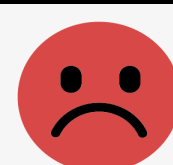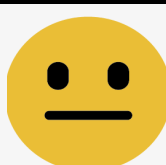

Connect to Bluetooth TV



- 1 Slide the power switch to **ON**.
On first use, headphones auto-enter pairing → LED blinks **red** & **blue**.
- 2 On your TV, turn on Bluetooth settings and select **Aria Aura**.

✓ **Connected:** LED turns **solid blue**.



*Not blinking red & blue? Hold the power switch to **Pair with Phone** for 3s.*

Next

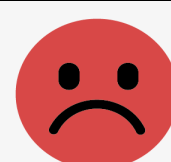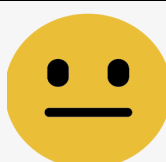


< Back



Menu


3. Use With Auracast Broadcast

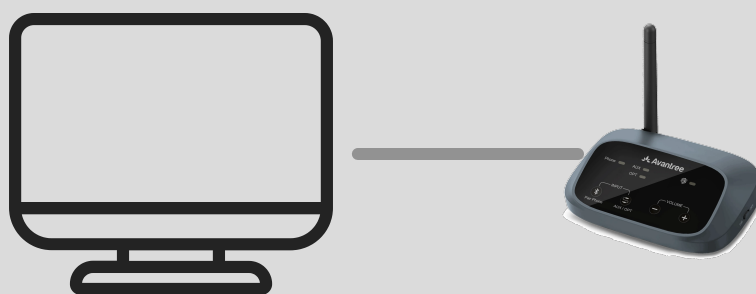

At Home
(TV Transmitter)



In
Public Places

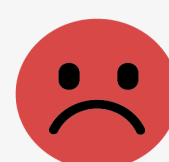

At Home (TV Transmitter)



On your headphones:

- ➊ Slide the power switch to **ON**.
 - ➋ Hold  for 5s → LED blinks **orange**.
(Ready to join Auracast)
 - ➌ Put it nearby the transmitter.
- ✓ **Joined:** LED turns **solid orange**.



- → [***Supported TV Transmitter***](#)
- → [***Join secured transmitter broadcasts***](#)

Next

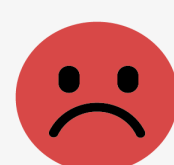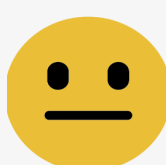

Supported Avantree Transmitter



Oasis Aura



Audikast 4




Aura Loop



Opera Aura



Aura Focus

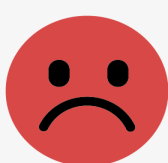

In Public Places



Listen to Auracast broadcasts in places like churches, museums, gyms, and events.

Join an open broadcast: *(no password)*

- ➊ Slide the power switch to **ON**.
 - ➋ Hold  for 5s → LED blinks **orange**.
- ✓ **Joined:** LED turns **solid orange**.

→ [Join a secured broadcast](#)

Next

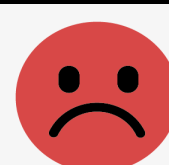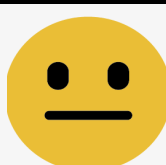

4. Advanced (Optional)

4.1 Dual Mode (Never Miss a Call)



Stay connected to your phone while listening to an Auracast broadcast (e.g. TV audio, church broadcast).

Never miss a call

- Incoming calls pause broadcast automatically.
- Broadcast resumes after the call ends.



Next

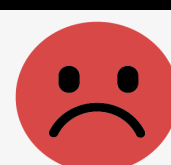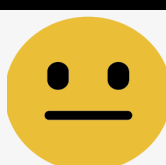

4.2 Join a Secured Broadcast

Join secured Auracast broadcasts using  **Avantree** app.

- **Before you join:**



Download the Avantree app.



Download on the
App Store





GET IT ON
Google Play



Connect Aria Aura to your phone via Bluetooth.

Next

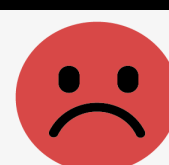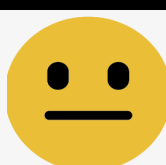



- **How to join:**

① Open the app and add Aria Aura



② Tap Auracast, then select a broadcast




③ Enter the password.





④ Tap the ⓘ icon > Save.

(Saves the password for next time)

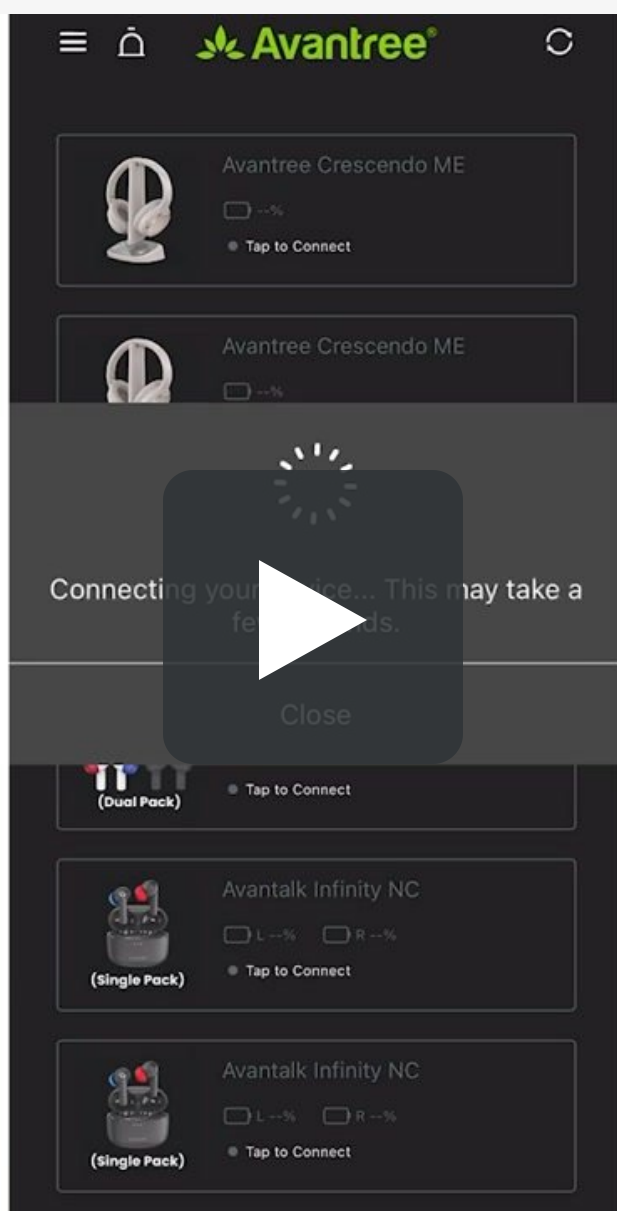

Next

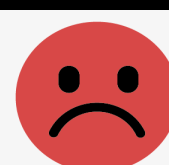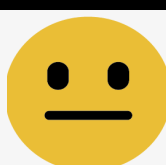



5. Power, Buttons & Indicators

5.1 Power & Charging

- **USB-C** power: 5V, 1–2.4A
- Charging: LED stays **solid red**.
- Fully charged: LED turns **off** (~2.5h).
- Playtime: Up to 35 hours.



***Aria Aura T** can also be charged via the charging stand.*

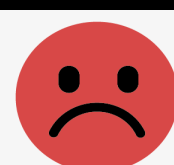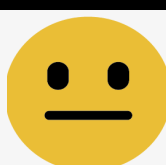[Next](#)

5.2 Buttons & Indicators



A LED

- **Solid**

- Auracast joined (**orange**)
- Bluetooth connected (**blue**)

- **Blinking**

- Searching Auracast (**orange**)
- Bluetooth pairing (**red** & **blue**)





Multi-Function Button

- Search Auracast broadcasts
- Answer/Reject calls

→ [Full Buttons & Indicators Guide](#)

Next

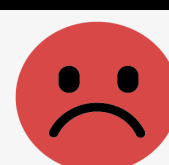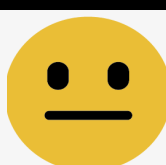

< Back





Menu

Rate This Guide

Your feedback helps us improve this guide for everyone.

It only takes a moment.

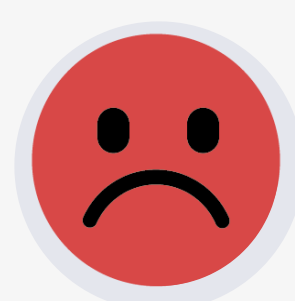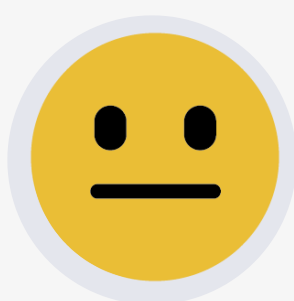

Next

< Back



Menu

6. Troubleshooting

Common Issues



- Watch TV & answer calls
- Reset headphones
- Replace earpads

 [More FAQ & Help](#) ↗



Still need help? [Contact support](#) ↗

Next

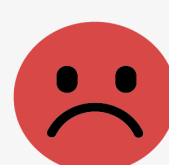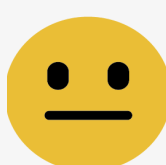

7. Support & Feedback

Agent Support

Need help? We're here.



Email



Call



Chat

Register Your Product

Extended warranty & get updates.

Get 24M Warranty

