

Aura Focus



Interactive Setup & Support Guide

Version 1.6.1


Start Setup

[< Back](#)

Main Menu

1. [Before You Start](#)
2. [How to Charge](#)
3. [Connect via Base \(Recommended\)](#)
4. [Connect via TV Bluetooth](#)
5. [Adjust Volume](#)
6. [Advanced Features](#)
7. [Recommend Use With](#)
8. [Troubleshooting](#)
9. [Get Your Warranty](#)
10. [Rate This Guide](#)
11. [Need Human Help?](#)

[Next](#)

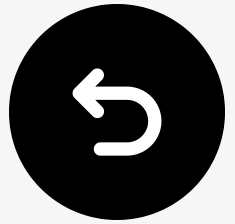

1. Before You Start

Wireless Auracast TV earbuds with 2-in-1 transmitter & charging dock

- Recommend to use with base for low latency and stable connection
- Work with smart TVs via built-in Bluetooth
- Connect unlimited Aura Focus earbuds — perfectly in sync

[Next](#)

< Back

Back to
Menu



2. How to Charge

Note: Ensure case lid is **up** ↑ for charging on base.

- Use USB-C (5V, 0.5~2A)
- Case
Charging: Blinking **white**
Full: Solid **white**
- Playtime: up to 6 hrs




Next

< Back


Back to
Menu



Choose Mode

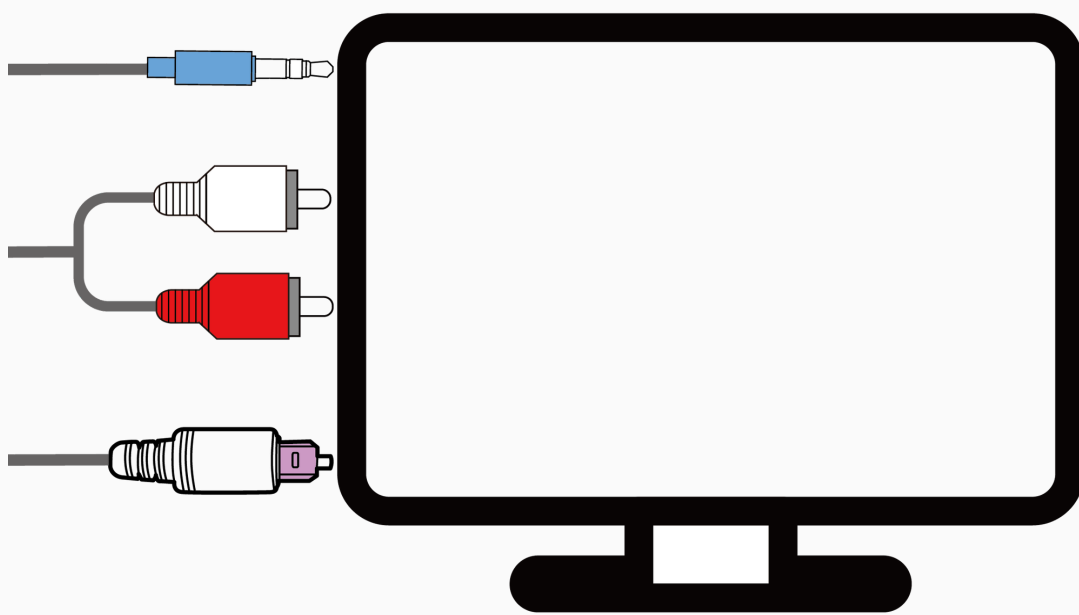

Connect via Base
(Recommended)

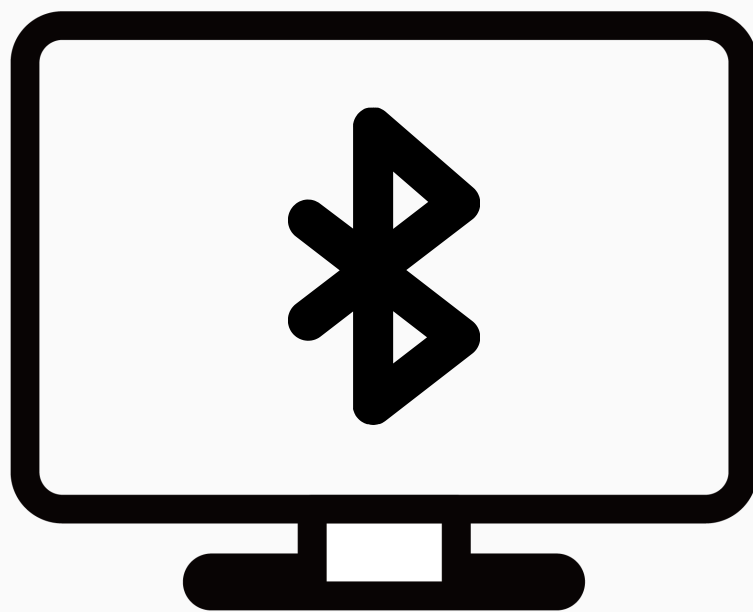

Connect via TV Bluetooth


< Back

Back to
Menu




3. Connect via Base

Select Connection Type

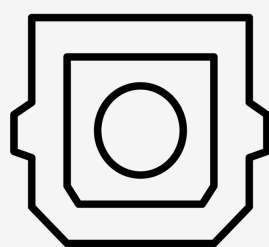


Optical

(Recommended)

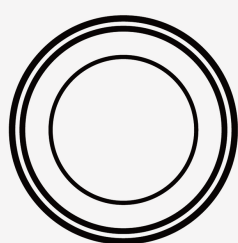

AUX

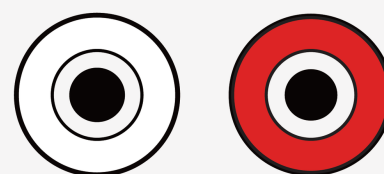

RCA

< Back

Back to
Menu



3. Connect via Base

3.1 Connect Cables

- 1 Plug USB-C cable into power near TV.
- 2 Plug Optical cable into TV's **Optical Out** & transmitter's **OPT IN**.



Next

< Back

Back to
Menu



3. Connect via Base

3.2 Adjust TV Sound Settings

- 1 Go to: Settings > Sound > Sound Output, select **Optical**.
- 2 Set audio format to **PCM** to avoid **no sound**.



Not sure how?

Visit our [TV Sound Settings Guide](#)

Next



Warning

↗ You're about to leave this setup guide and visit an external link.



BACK

To come back here again, please **use your browser's "back" button** or re-scan the QR code on your device.

[Proceed](#) ↗

< Back

Back to
Menu



3. Connect via Base

3.3 Power on & Connect

- 1 Slide transmitter to **ON**.
- 2 Take out earbuds. They will auto-connect. Earbuds prompt **"Connected"**.
- 3 Play a video. You'll hear sound through earbuds.



Next

< Back

Back to
Menu



3. Connect via Base

3.1 Connect Cables

- 1 Plug USB-C cable into power near TV.
- 2 Plug AUX cable into TV's **headphone jack** & transmitter's **AUX IN**.



Next

< Back

Back to
Menu



3. Connect via Base

3.2 Adjust TV Sound Settings

Go to: Settings > Sound > Sound Output, select **Headphones**.



Next

< Back

Back to
Menu



3. Connect via Base

3.3 Power on & Connect

- 1 Slide transmitter to **ON**.
- 2 Take out earbuds. They will auto-connect. Earbuds prompt **"Connected"**.
- 3 Play a video. You'll hear sound through earbuds.



Next

< Back

Back to
Menu



3. Connect via Base

3.1 Connect Cables

- 1 Plug USB-C cable into power near TV.
- 2 Use RCA ports labeled **Audio Out**.
 - RCA to AUX adapter **NOT** included.
 - Contact us for a free adapter if needed.



Next

< Back

Back to
Menu



3. Connect via Base

3.2 Adjust TV Sound Settings

Go to: Settings > Sound > Sound Output, select **Headphones**.



Next

< Back

Back to
Menu



3. Connect via Base

3.3 Power on & Connect

- 1 Slide transmitter to **ON**.
- 2 Take out earbuds. They will auto-connect. Earbuds prompt "**Connected**".
- 3 Play a video. You'll hear sound through earbuds.



Next


< Back

Back to
Menu



4. Connect via TV Bluetooth

⚠ 4.1 Keep Transmitter OFF

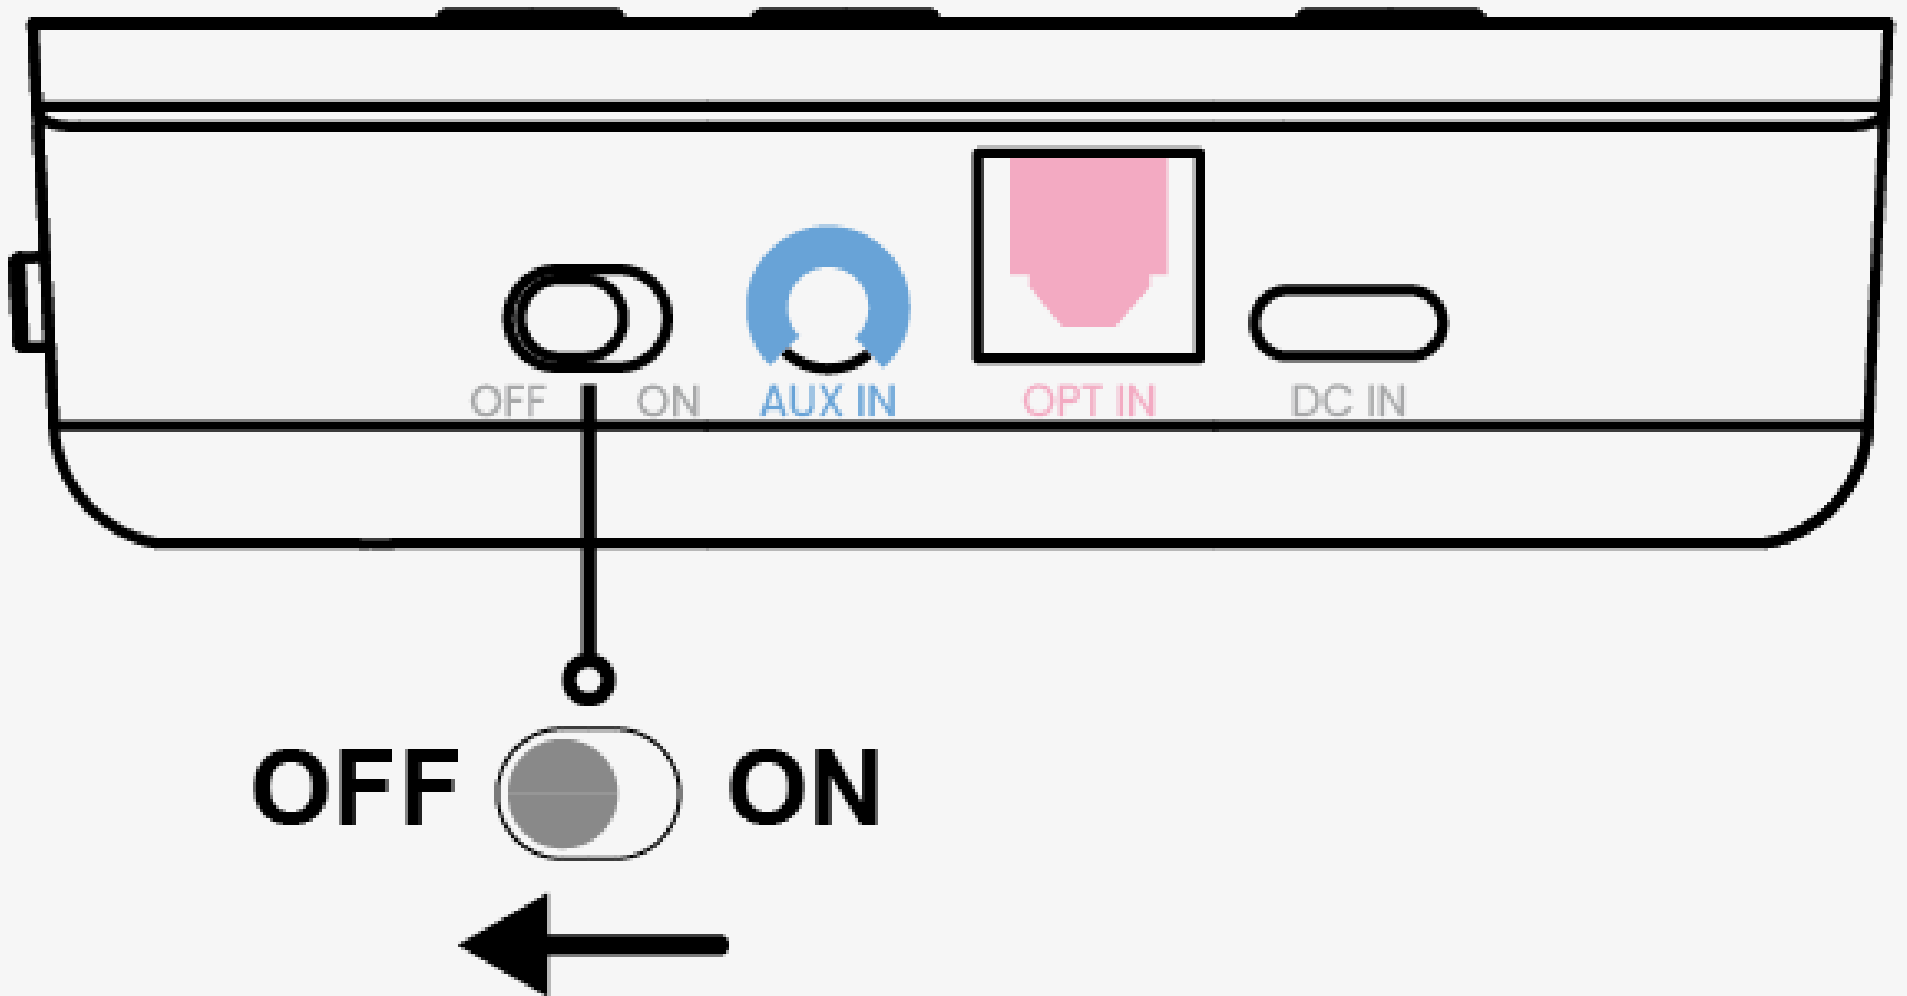

Next

< Back

Back to
Menu



4. Connect via TV Bluetooth

4.2 Enter TV Bluetooth Settings

Go to: Settings > Sound > Sound Output, select **Bluetooth Speaker List**.



Not sure how?

Visit our [TV Bluetooth Settings Guide](#)

Next

< Back

Back to
Menu



4. Connect via TV Bluetooth

4.3 Put Earbuds Into Pairing

Open the case, press case button for 2s. LEDs blink **red** & **blue** → ready to pair.



Next

< Back


Back to
Menu



4. Connect via TV Bluetooth

4.4 Connect to TV


Select "**Avantree Flow**" from TV's Bluetooth Speaker List to connect.

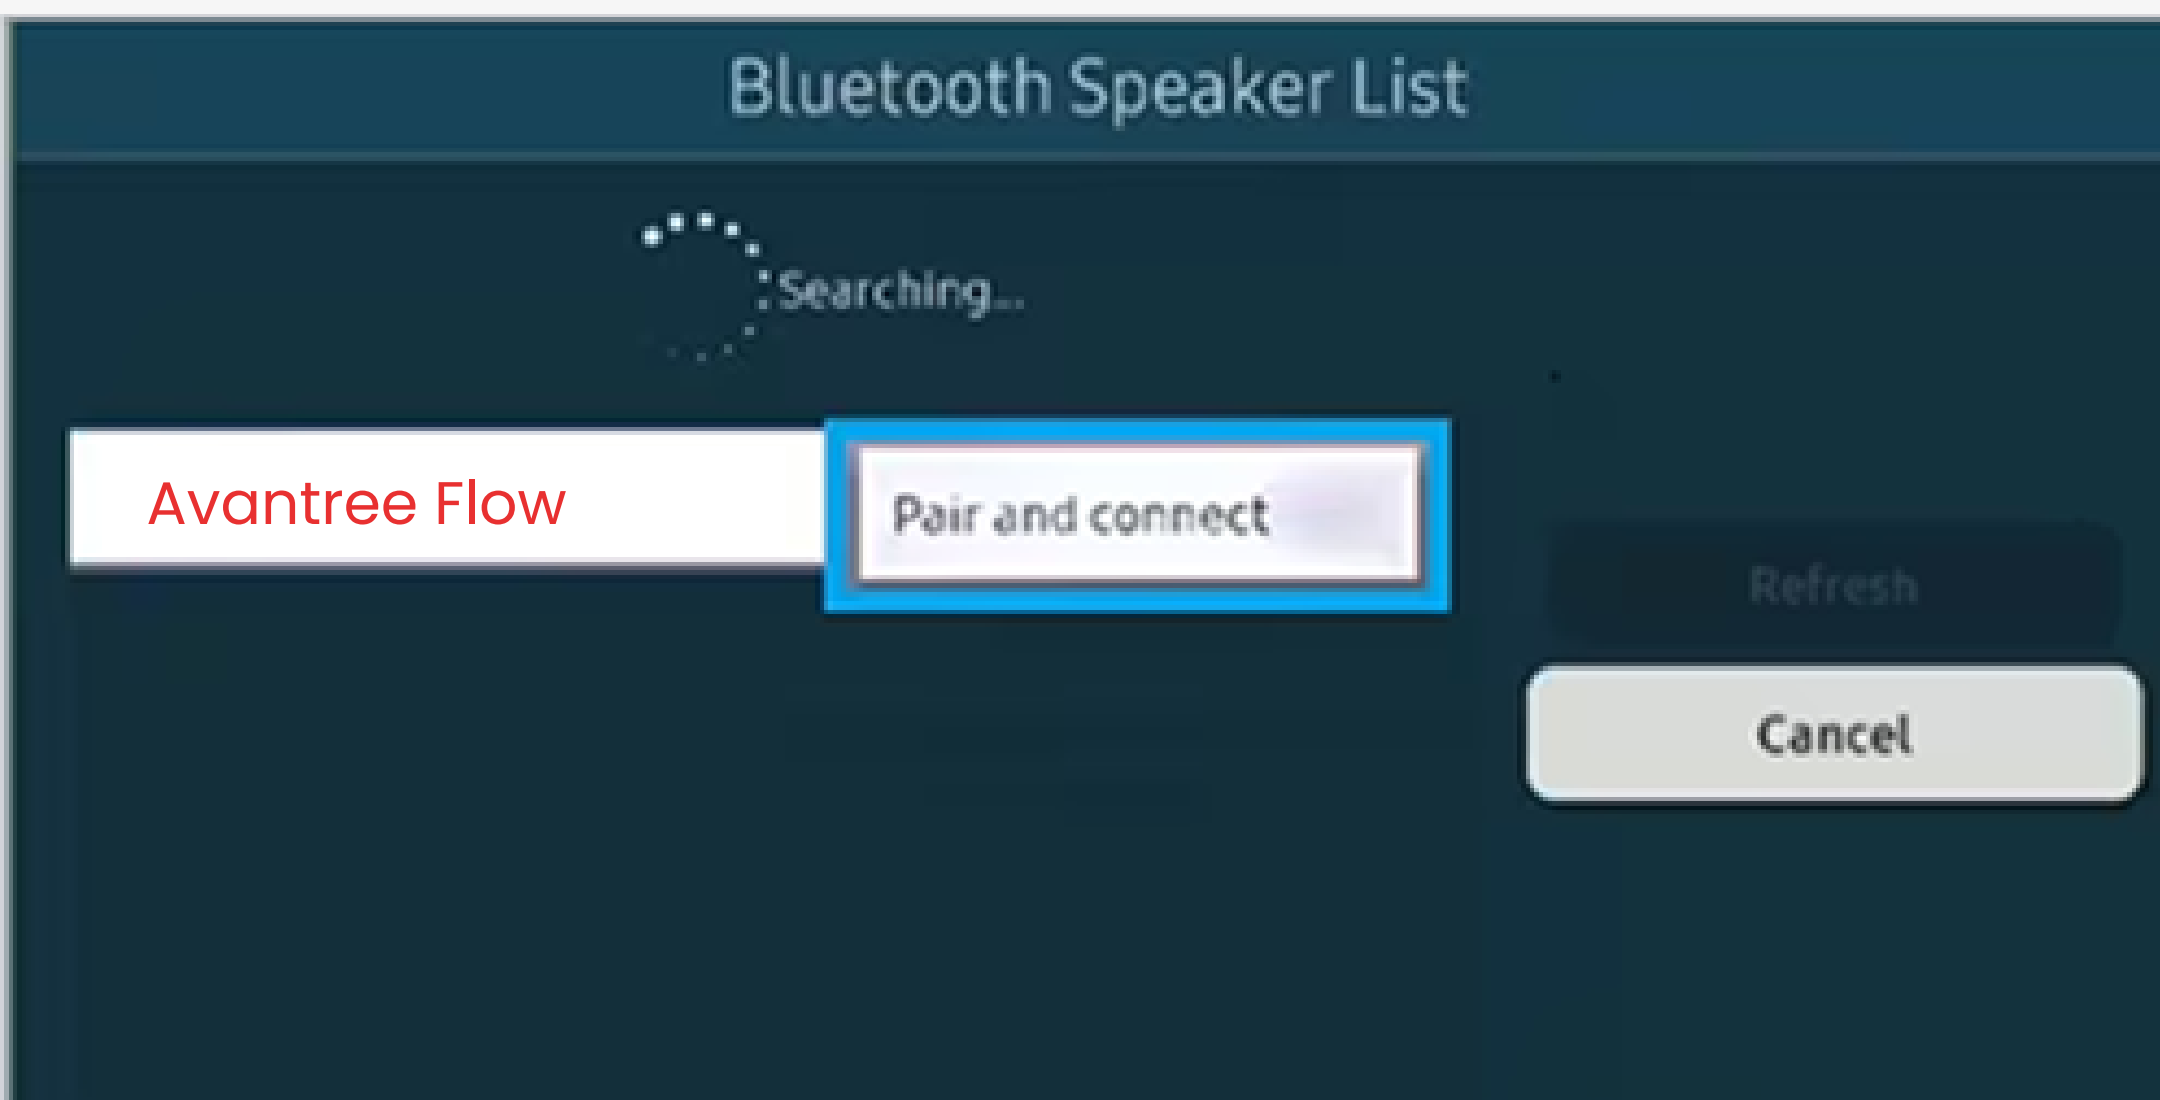

Next

< Back

Back to
Menu

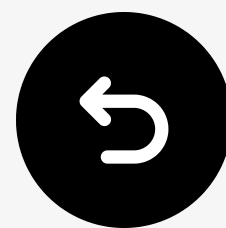

4. Connect via TV Bluetooth

4.5 Reconnect Tips


- Ensure transmitter is off.
- Earbuds automatically reconnect to last device (TV/phone) when powered on.
- If not, select "Avantree Flow" in TV's Bluetooth list.

Next



5. Adjust Volume

- Single-tap the button on earbuds, or press + & - button on transmitter.
- If sound is low, slide to "**Boost**" (**Optical** mode only).

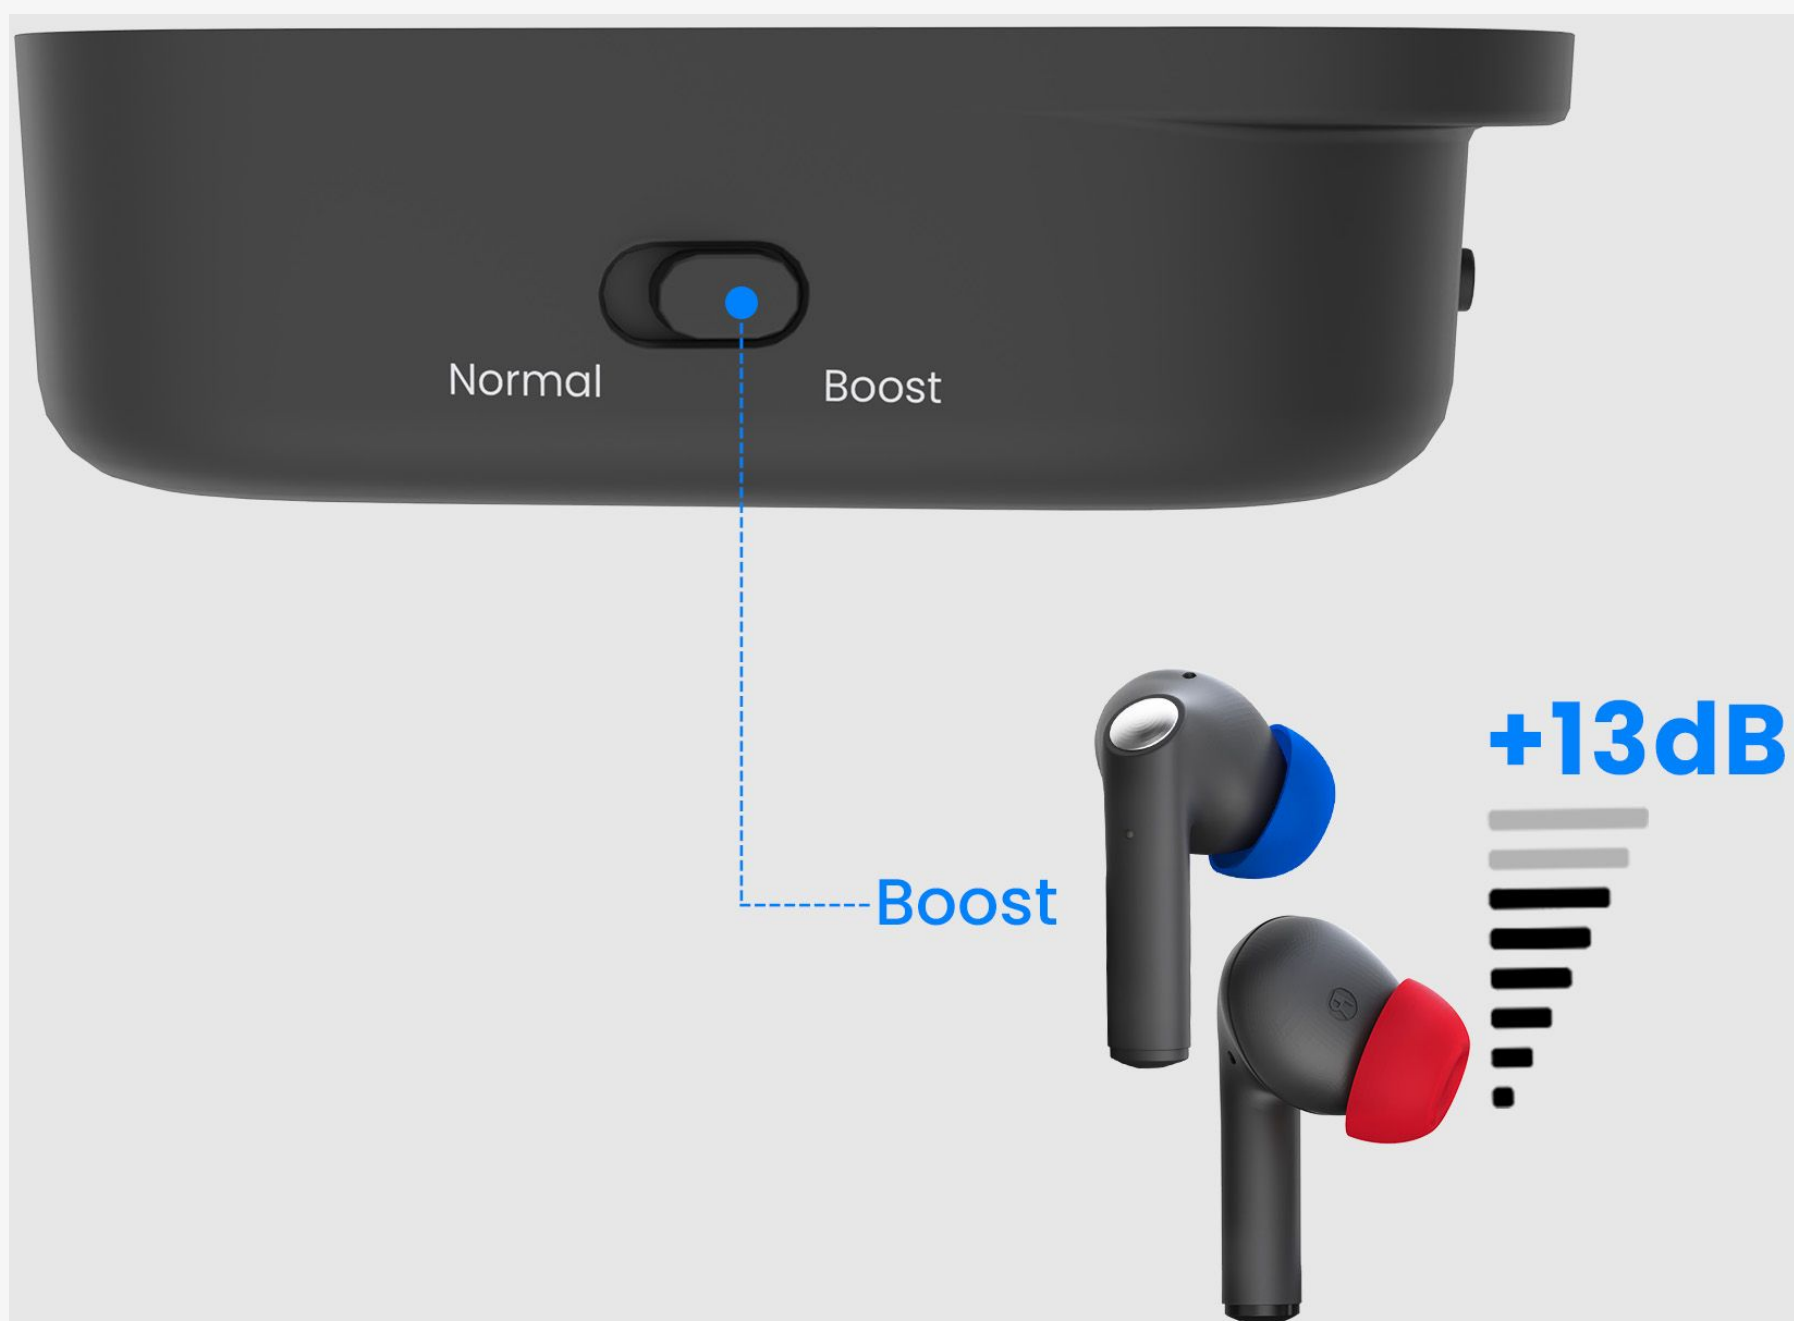



6. Advanced Features

6.1 Add More Aura Focus Earbuds

- 1 Hold case button 8s. LEDs blink **red**.
- 2 Turn on transmitter. Hold "**Add Device**" 2s → LED blinks **orange**.
- 3 When connected, transmitter LED stays **orange**, earbuds prompt "**Connected**".



< Back

Back to
Menu



6. Advanced Features

6.2 Use Earbuds With Phone/PC

- 1 Turn transmitter off.
- 2 Open the case, press case button 2s.
LEDs blink **red** & **blue** → ready to pair.
- 3 Turn on Bluetooth, tap "**Avantree Flow**".



Next



6. Advanced Features

6.3 Dual Link (Phone + Base)

- 1 Connect earbuds to your phone.
- 2 Turn on transmitter, and wait 5s to connect to earbuds.

Note: With Dual Link, take a call while listening to TV audio. TV Audio resumes automatically after the call.





6. Advanced Features

6.4 How to Reset

- Ensure earbuds in pairing mode (**red** & **blue**). If not, press case button 3s.
- Double-press case button → LEDs stay **pink** 2s, then blink **red** & **blue**.

This will clear pairing history and enter pairing mode.



< Back

Back to
Menu



7. Recommend Use With

These Auracast-compatible add-ons work great with your Aura Focus:



Focus



Infinity



AS70P

Next



8. Troubleshooting

1. No Sound? Check:

- Audio input LED = Solid light
If not, check TV audio settings:
output and PCM
- Still no sound?
Put earbuds back in case & close,
then take out again.

2. One-side sound?


- Put earbuds back in case, then
take out.
- Still one-side sound? Try resetting.

[More Troubleshooting & FAQs ↗](#)

Next

< Back

Back to
Menu

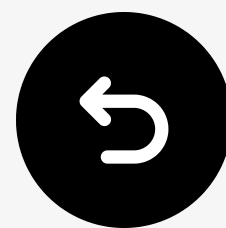

9. Get Your Warranty

[Register now to:](#)

- Get **24-month** warranty-Free!
- Enjoy priority support.

Next

< Back

Back to
Menu




10. Rate This Guide

Thanks for choosing Aura Focus!

Was this guide helpful?

Tap a face below – it only takes 1 second:

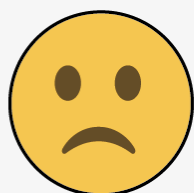

Next

< Back

Back to
Menu



11. Need Human Help?

Get a reply within **1 business day**.

Choose a support option:

✉ Email: support@avantree.com

📞 [Schedule callback ↗](#)

📧 [Submit a ticket ↗](#)

💬 [Live chat ↗](#)