



AuraClip

Auracast Audio Receiver



Interactive User Guide

Version 2.0.1

[Start Setup](#)

< Back



Main Menu

1. Start Here
2. Join Auracast Broadcast
3. Switch Broadcast
4. Battery & Charging
5. Troubleshooting
6. Rate This Guide
7. Register & Support

Next

1. Start Here

AuraClip lets you listen to open **Auracast** broadcasts.

- Requires **wired headphones** for audio output
- Adjust **personal volume**
- Receive audio **without pairing**

 **Does Not** support classic Bluetooth

Next

[Share Feedback](#)

< Back



Menu

2. Join Auracast Broadcast

Choose how you want to join:

A

Join

Avantree Transmitter

B

Join Other

Open Broadcast

Share Feedback

A.1 Set Up Avantree Transmitter

Make sure your Avantree transmitter is **on** and broadcasting audio.

Note: For detailed setup, see the user guide for your Avantree transmitter..

Supported Avantree transmitter:




Oasis Aura



Audikast 4



Voyager

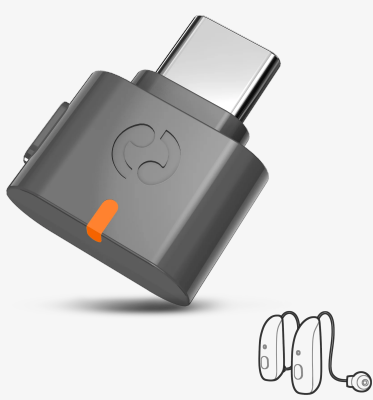

C82 Aura



Opera Aura



Aura Focus

Next

[Share Feedback](#)

A.2 Join Broadcasting

❶ Slide power switch of AuraClip to "ON" → LED  blinks orange.
(Ready to join Auracast)

❷ Put it nearby the transmitter.

✅ **Joined:** LED turns solid orange.

❸ Plug headphones into AuraClip.



You'll hear audio through headphones.

Next

[Share Feedback](#)

B. Join Other Open Broadcast

 **Available only when a nearby Auracast broadcast is active.**

- 1** Slide power switch of AuraClip to **"ON"** → LED  blinks **orange**.
(Ready to join Auracast)
- 2** AuraClip will auto-join nearby open broadcast.
-  **Joined:** LED turns **solid orange**.
- 3** Plug headphones into AuraClip.
You'll hear audio through headphones.

Supported Auracast broadcasting devices:

 [Join Auracast phone broadcast](#) ↗

 [Check more Auracast devices](#) ↗

Next

[Share Feedback](#)


B.1 Join Auracast Phone Broadcast

❶ Open **Bluetooth settings** on phone.

❷ Tap "**Broadcast sound using Auracast**" > "**Start broadcast**".

Note: Menus may vary by phone model.

❸ Play audio on your phone.

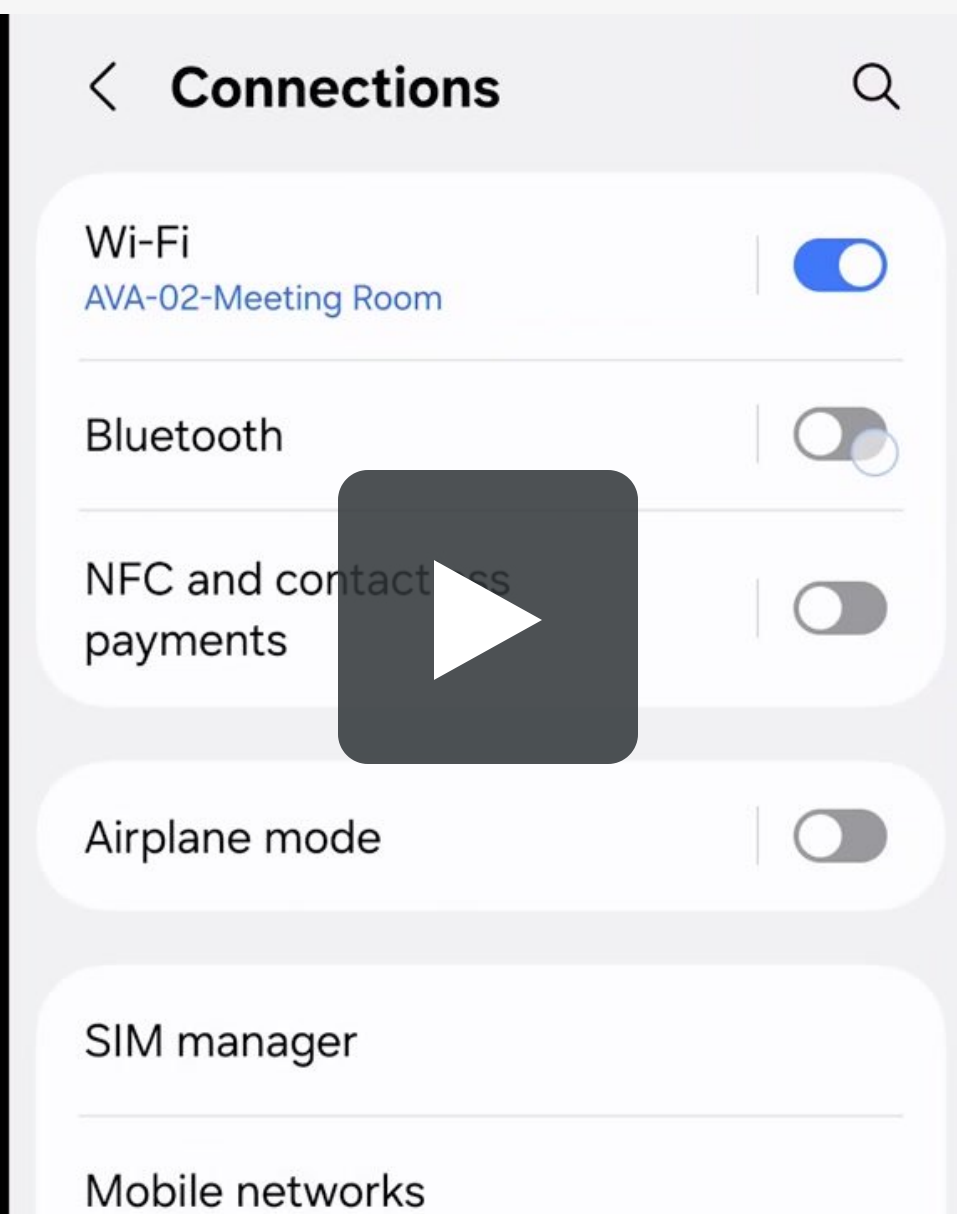

Supported models:

- Samsung Galaxy S23 and newer
- Google Pixel 8/9 series

👉 [Check more supported phones](#) ↗

Next

[Share Feedback](#)

3. Switch Broadcast

Each time AuraClip powers on, it scans nearby broadcasts and auto-joins the strongest signal.

During the current power-on session, it can remember **up to 3** broadcasts

- **Switch between broadcasts**
 - Hold **Switch Audio** for 3s
- **LED behavior:**
 - **blinks orange** while switching
 - **solid orange** when complete

Switch Audio



 *To join a broadcast **outside the current 3:** Power off and turn on again, AuraClip will rescan and join the strongest signal.*

Next

[Share Feedback](#)



4. Battery & Charging

- Use USB-C (5V, 1~2.4A).
- Low battery: LED blinks **red**
- Charging: LED blinks **white**
- Fully charged: LED off (~1.5 hrs)
- Playtime: Up to 16 hrs
- Can be used while charging

[Next](#)[Share Feedback](#)

< Back



Menu

5. Troubleshooting

- [No sound from my AuraClip? ↗](#)
- [Can connect to encrypted Auracast broadcasts? ↗](#)

[👉 More FAQ & Troubleshooting ↗](#)

Next

[Share Feedback](#)

< Back



Menu

6. Rate This Guide

Your feedback helps us improve this guide for everyone.

It only takes a moment.

[Rate This Guide](#)

Next

< Back



Menu

7. Register & Support

Register Your Product

Extended warranty & get updates.

[Register Your Product](#)

Agent Support

Need help? We're here.



Email



Call



Chat