



# Eon Me

Bluetooth Headphones




## Interactive User Guide

Version 2.3.1



First Time Setup

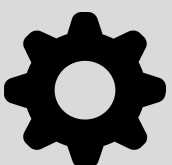

Troubleshooting

< Back



# Main Menu

1. Before You Start

2. Charge & Power

3. Use with TV

- With Bluetooth TV
- With Non-Bluetooth TV

4. Use with Phone

5. Customize L / R Ear Hearing via APP

6. Maintenance & Replaceable Parts

7. Buttons & Indicators

8. Troubleshooting

9. Register & Support

Next

# 1. Before You Start

Eon Me is a Bluetooth headphone designed for clear, personalized hearing.



- **Hearing Profile**

[Optimized based on your personal hearing](#) ↗

- **Built to last**

Replaceable headband, battery & ear cushions for extended lifespan

Next

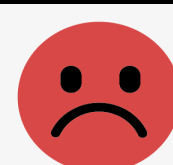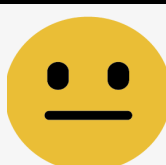


## 2. Charge & Power

### Charge Eon Me in two ways:



- Place on the base to charge
- Or use a USB-C cable (5V, 1–2.4A adapter)

### Charging status:

- LED solid **red** = Charging
- LED off = Fully charged (~2.5h)

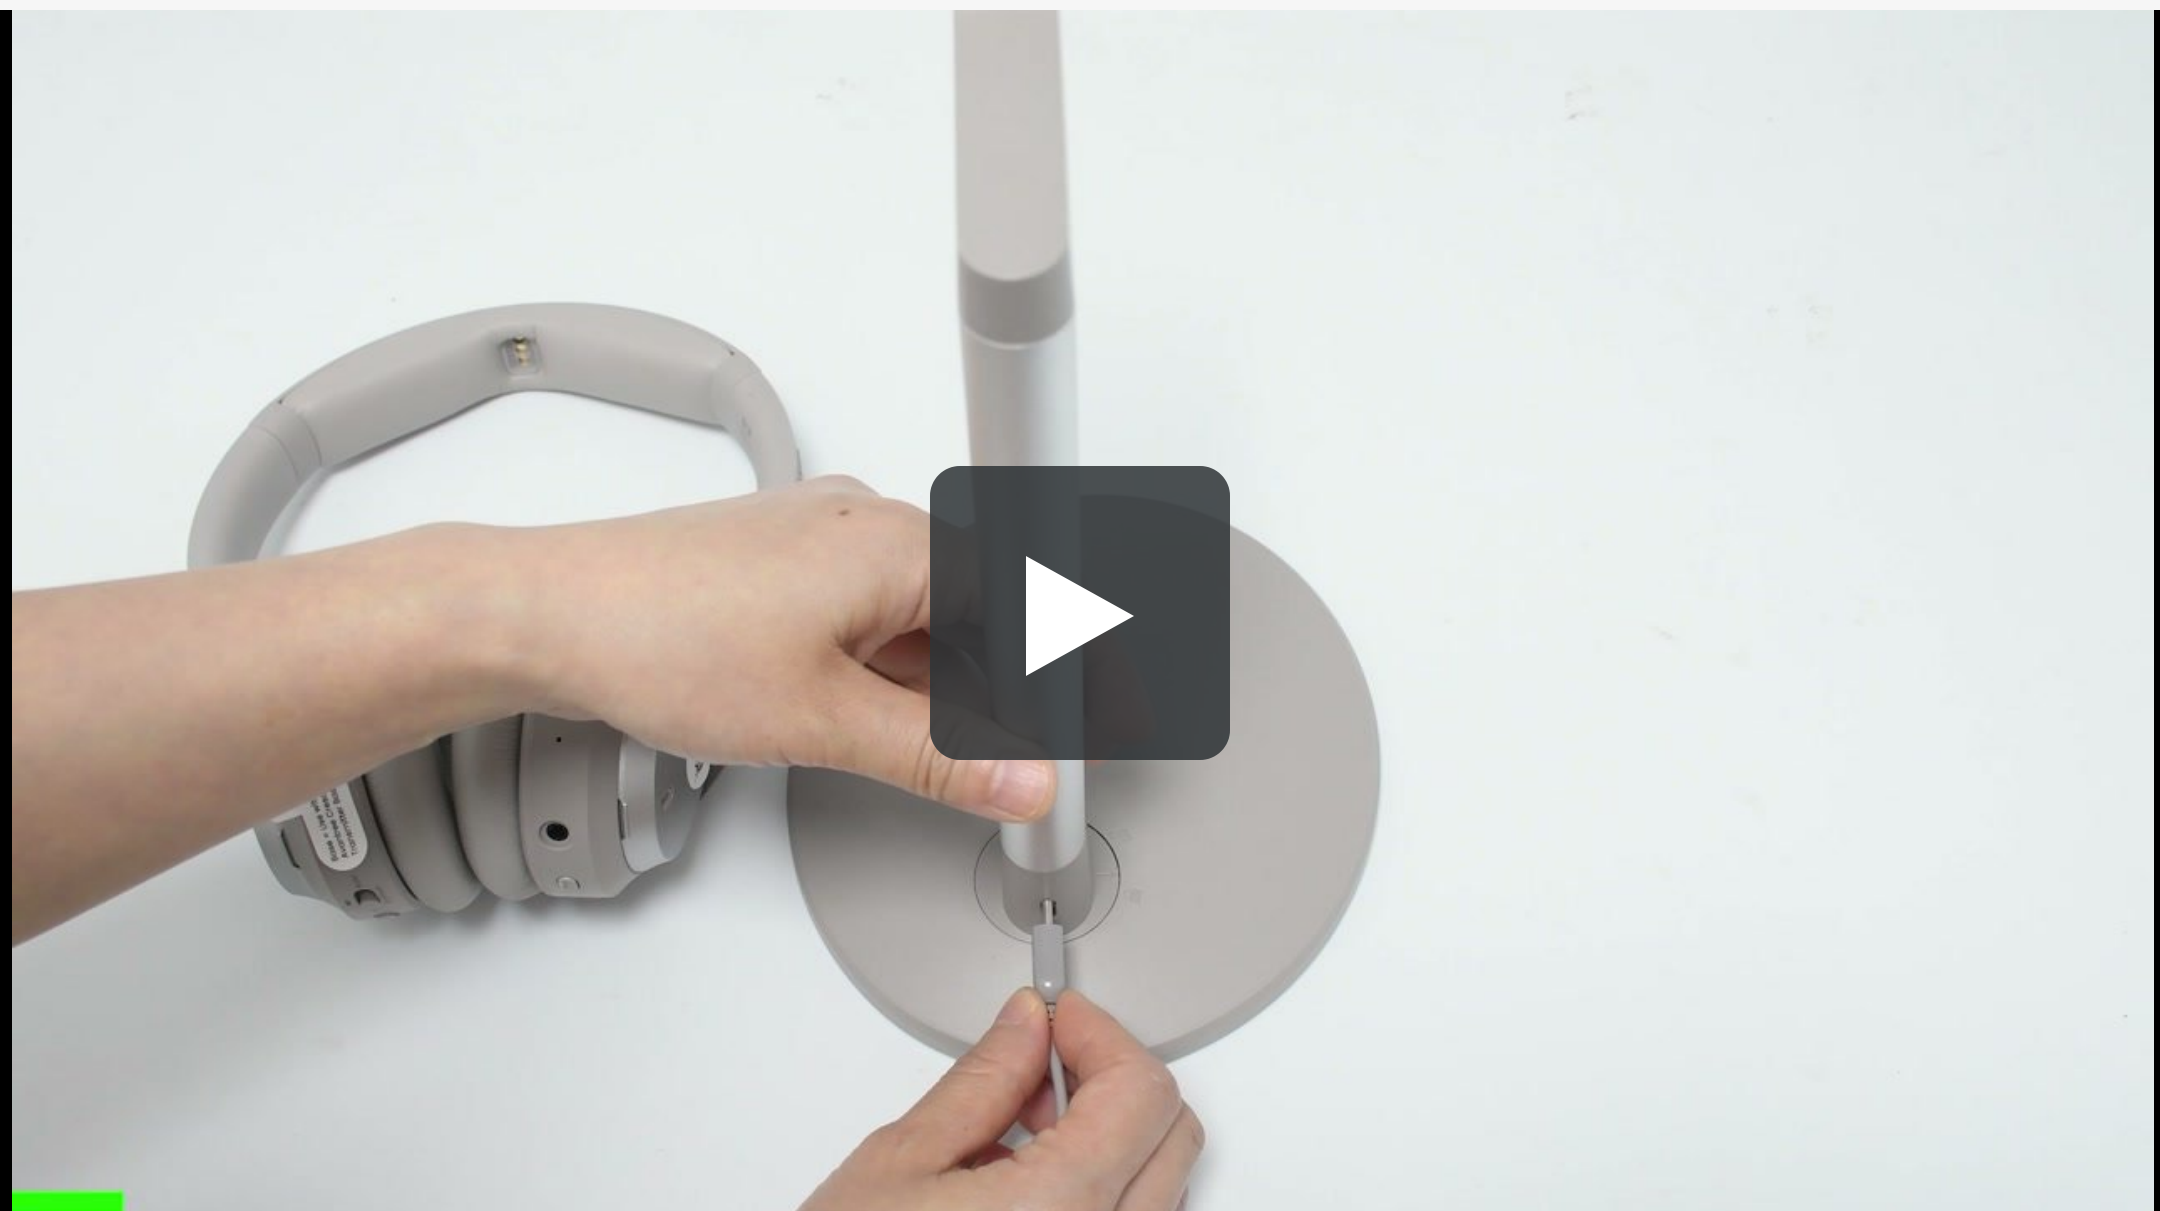

Next

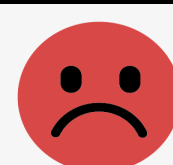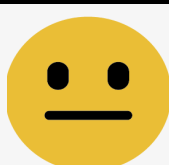

< Back



Menu

### 3. Use with TV

Choose how your TV connects:

#### **Bluetooth TV**

Connect **directly via Bluetooth**



*(For TVs support Bluetooth)*



#### **Non-Bluetooth TV**




Use with **Crescendo transmitter**

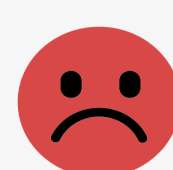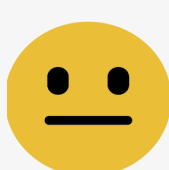*(For TVs without Bluetooth)*





## Use with Bluetooth TV

*Your TV must support Bluetooth audio*

- 1 Switch headphone to "**Bluetooth**"  
→ LED flashes **red** & **blue** (Ready to pair)  
(If not, hold  for 3s)
  - 2 TV: Open Settings → Sound → Bluetooth  [TV Setup FAQ](#) ↗
  - 3 On your TV, select "Eon Me"
-  Headphone LED **solid** = Connected



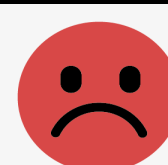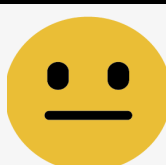

Next



## Use with Non-Bluetooth TV

Requires [Crescendo transmitter](#) ↗



- 1 Turn on your transmitter
- 2 Slide headphone Mode Switch → **Base**.
- 3 Hold  button **3s** → LED flashes (pairing).

 LED **solid** = connected



 [Need help with transmitter setup?](#) ↗

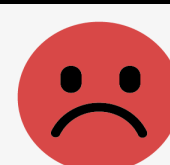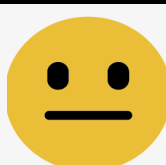

Next





## 4. Connect with Phone

- 1 Switch headphone to "**Bluetooth**"  
→ LED flashes **red** & **blue** (Ready to pair)  
(If not, hold  for 3s)
  - 2 On your Phone, turn on bluetooth  
and Select "**Eon Me**"
-  Headphone LED **solid** = Connected



Next

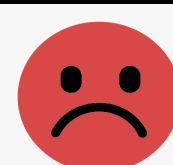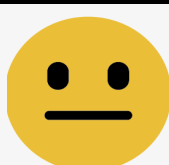

## 5. Customize L / R Ear Hearing via APP

1 Download




**Avantree-Avantalk app.**

- [Apple App Store](#) ↗
- [Google Play](#) ↗



2 Connect headphones to your phone.

3 Add Crescendo Me in the app.

4 Tap Custom Hearing and follow the in-app instructions.

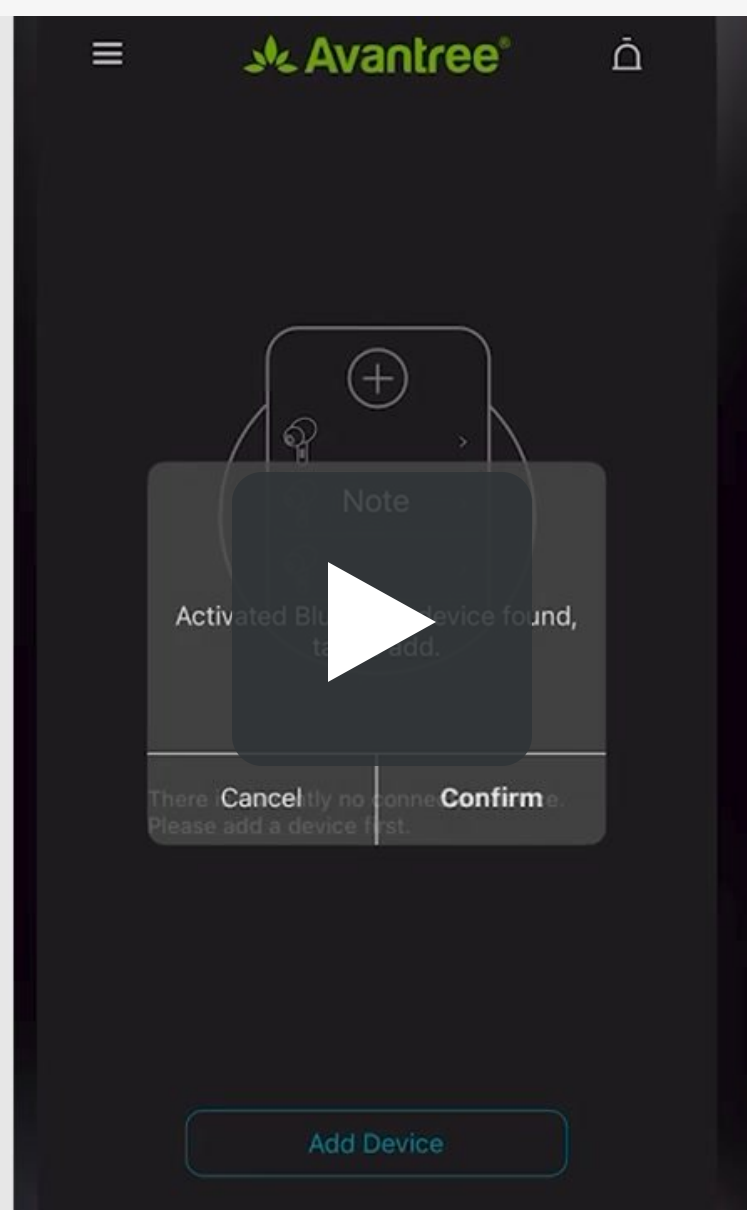

Next

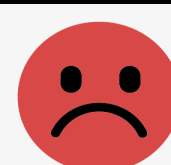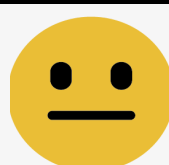

## 6. Maintenance & Replaceable Parts



Key parts are replaceable for long-term use.

### Replacement Parts:


- [Headband](#) ↗
- [Ear Cups](#) ↗
- [Batteries](#) ↗

### Replacement Guide:

- [Replace Ear Pads & Headband](#) ↗
- [Replace Batteries](#) ↗

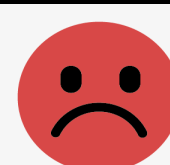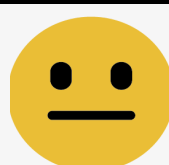[Next](#)

## 7. Buttons & Indicators

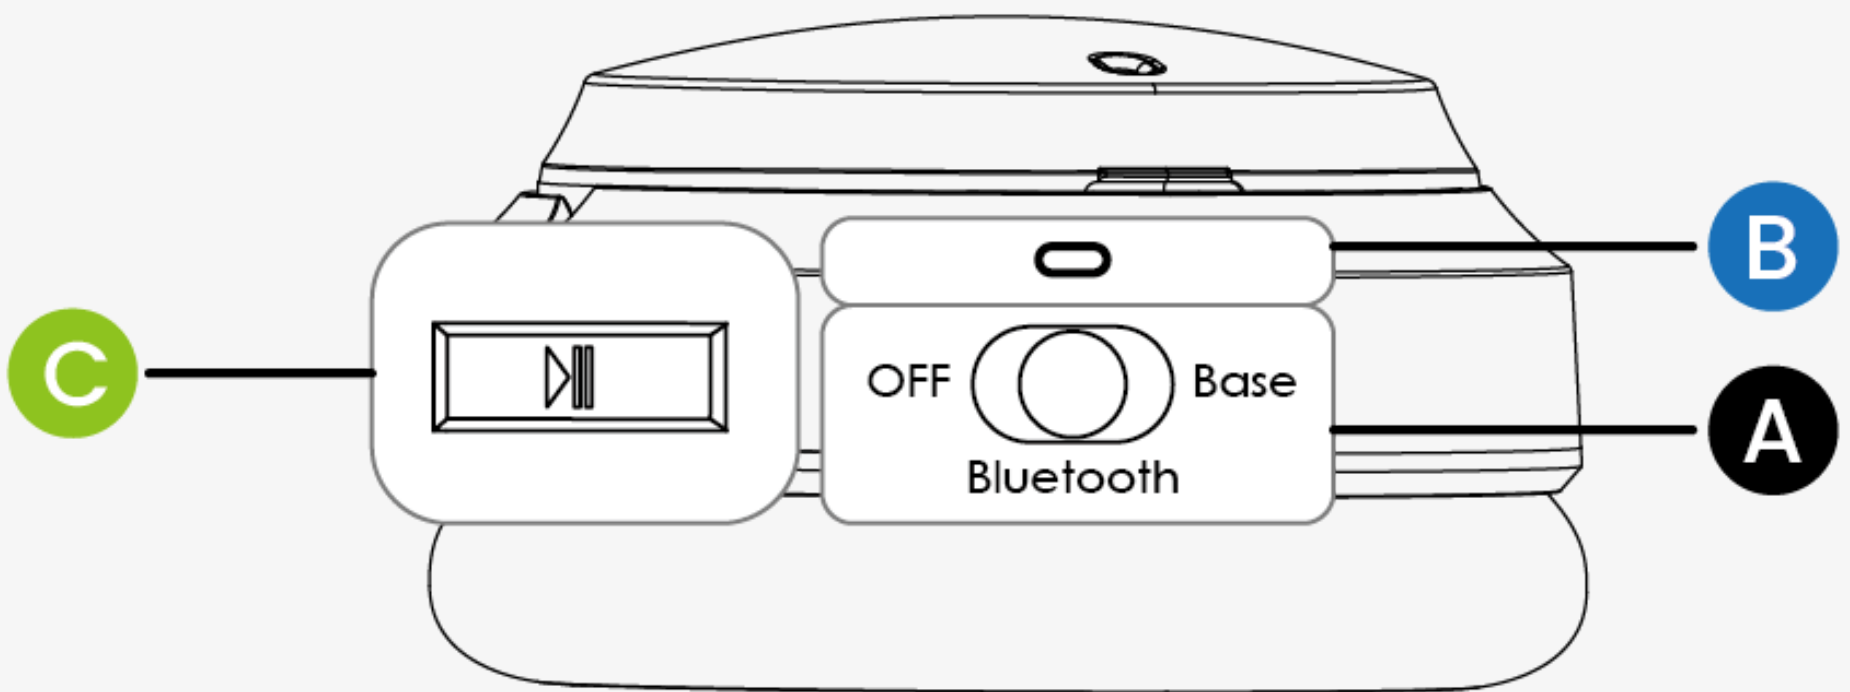

### A Switch

Bluetooth → TV / PC / Phone  
Base → Crescendo transmitter

### B LED Indicator



Solid → Connected  
Blinking → Not Connected

### C Multi-function Button

Tap → Play / Pause  
Hold 3s → **Pairing** (red & blue flash)

[👉 Full Buttons & Indicators Guide ↗](#)

Next

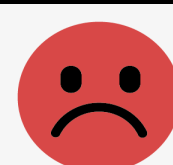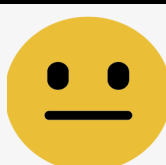

< Back




Menu

## Rate This Guide

Your feedback helps us improve this guide for everyone.

It only takes a moment.

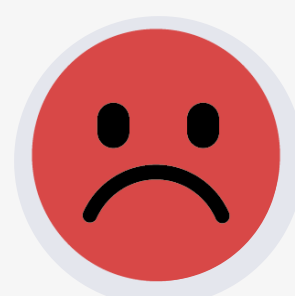

Next




## 8. Troubleshooting

### Common Issues



---

- [Not work with TV](#)
- [Customize Hearing](#)

[👉 More FAQ & Help ↗](#)

 *Still need help? [Contact support ↗](#)*

Next

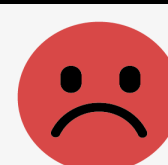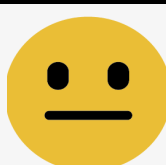

< Back



Menu

## 9. Register & Support

### Register Your Product

Extended warranty & get updates.

[Get 24M Warranty](#)

### Need help? Contact Us



Email

[support@avantree.com](mailto:support@avantree.com)



Call



USA (Toll Free)

[+1 800 232 2078](tel:+18002322078)



[Other Regions](#)



[Chat](#)

