



Pebble Aura

Open-Ear Auracast
TV Earbuds



Interactive User Guide

Version 2.5



Start Setup



Firmware & Settings

< Back



Main Menu

1. Before You Start

2. Use as Bluetooth Earphone

- Connect to Phone/PC
- Connect to Bluetooth TV

3. Use With Auracast Broadcast

- At Home(TV Transmitter)
- In Public Places

4. How to Wear

5. Adjust Volume

6. Advanced (Optional)

- Dual Mode (Never Miss a Call)
- Join Other Open and Secured Broadcast
- Private Mode

7. Power, Buttons & Indicators

8. Troubleshooting

9. Register & Support



Rate This Guide

Next



1. Before You Start

2-in-1 **Bluetooth** earphone with **Auracast** support

- Use as regular Bluetooth earphone
- Join other **open** (e.g. churches) and **secured broadcasts** via app (**Coming soon**)
- **Dual Mode : Never miss a call** while listening to broadcasts


[Next](#)

< Back




Menu

2. Use as Bluetooth Earphones

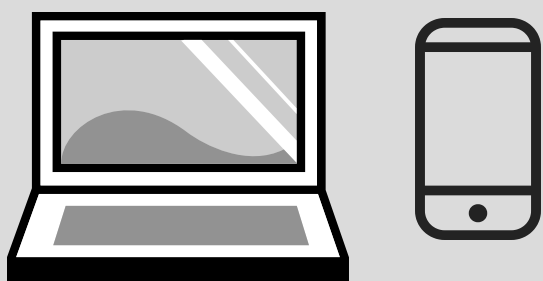

**Connect to
Phone/PC**

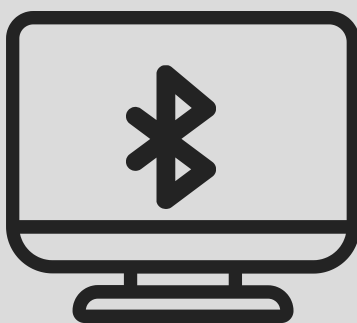

**Connect to
Bluetooth TV**



Connect to Phone/PC

❶ Take earphone out of the case.

Auto-enter pairing mode : LED flashes **red** & **blue**.



Not flashes red and blue?

Hold **+** button on either earphone for 5 seconds.

❷ **Turn ON** bluetooth on your Phone/PC and select "Pebble Aura".



Connected : Earphone LED turns solid **blue**.

[Next](#)



Connect to Bluetooth TV

❶ Take earphone out of the case.

Auto-enter pairing mode : LED flashes **red** & **blue**.



Not flashes red and blue?

Hold **+** button on either earphone for 5 seconds.

❷ **Turn ON** bluetooth on your TV and select "Pebble Aura".

✓ **Connected** : Earphone LED turns solid **blue**.


Next

< Back



Menu

3. Use With Auracast Broadcast

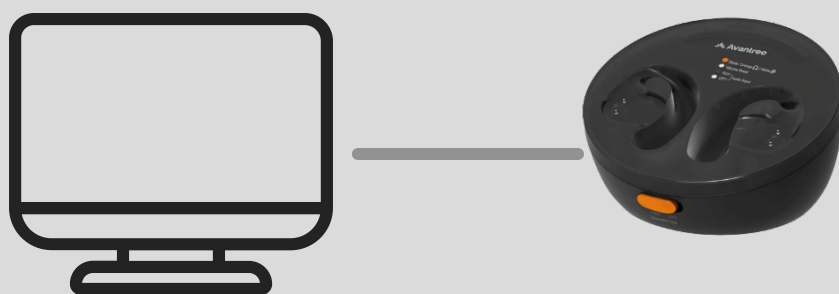

At Home
(TV Transmitter)



In
Public Places



At Home (TV Transmitter)

Only for Medley Pebble 2 transmitter

- ❶ Transmitter: Hold the **Mode** button for **2 sec** → LED flashes **orange rapidly**.
 - ❷ Either earphone: Hold the **–** button for **5 sec** → LED flashes **orange rapidly**.
 - ❸ Keep them **close**.
- ✓ **Joined:** Earphone LED turns **solid orange** for 3 sec , then off



[i](#) → *Join other Auracast broadcasts*

Next



In Public Places

Listen to Auracast broadcasts in places like churches, museums, gyms, and events.

This requires the **Avantree app**.

- The app feature is **coming soon** (around July 2026).
- Once available, we'll notify you.:



Stay informed !

Be the first to know when the **Avantree app** is available.

Notify Me

Next



Private Mode (Coming Soon)

Private mode (encrypted Auracast) is coming soon.

- Will be added via **a simple DFU**
- Once available, we'll notify you.



Stay informed !

Be the first to know when Private Mode is available.

[Notify Me](#)

[Next](#)

< Back



Menu

4. How to Wear

Place the ear hook along your ear's contour.



Next


5. Adjust Volume

Earphone

Press volume **(+/-)** to increase/decrease the volume

NOTE :

Adjust volume on either — changes automatically apply to both.

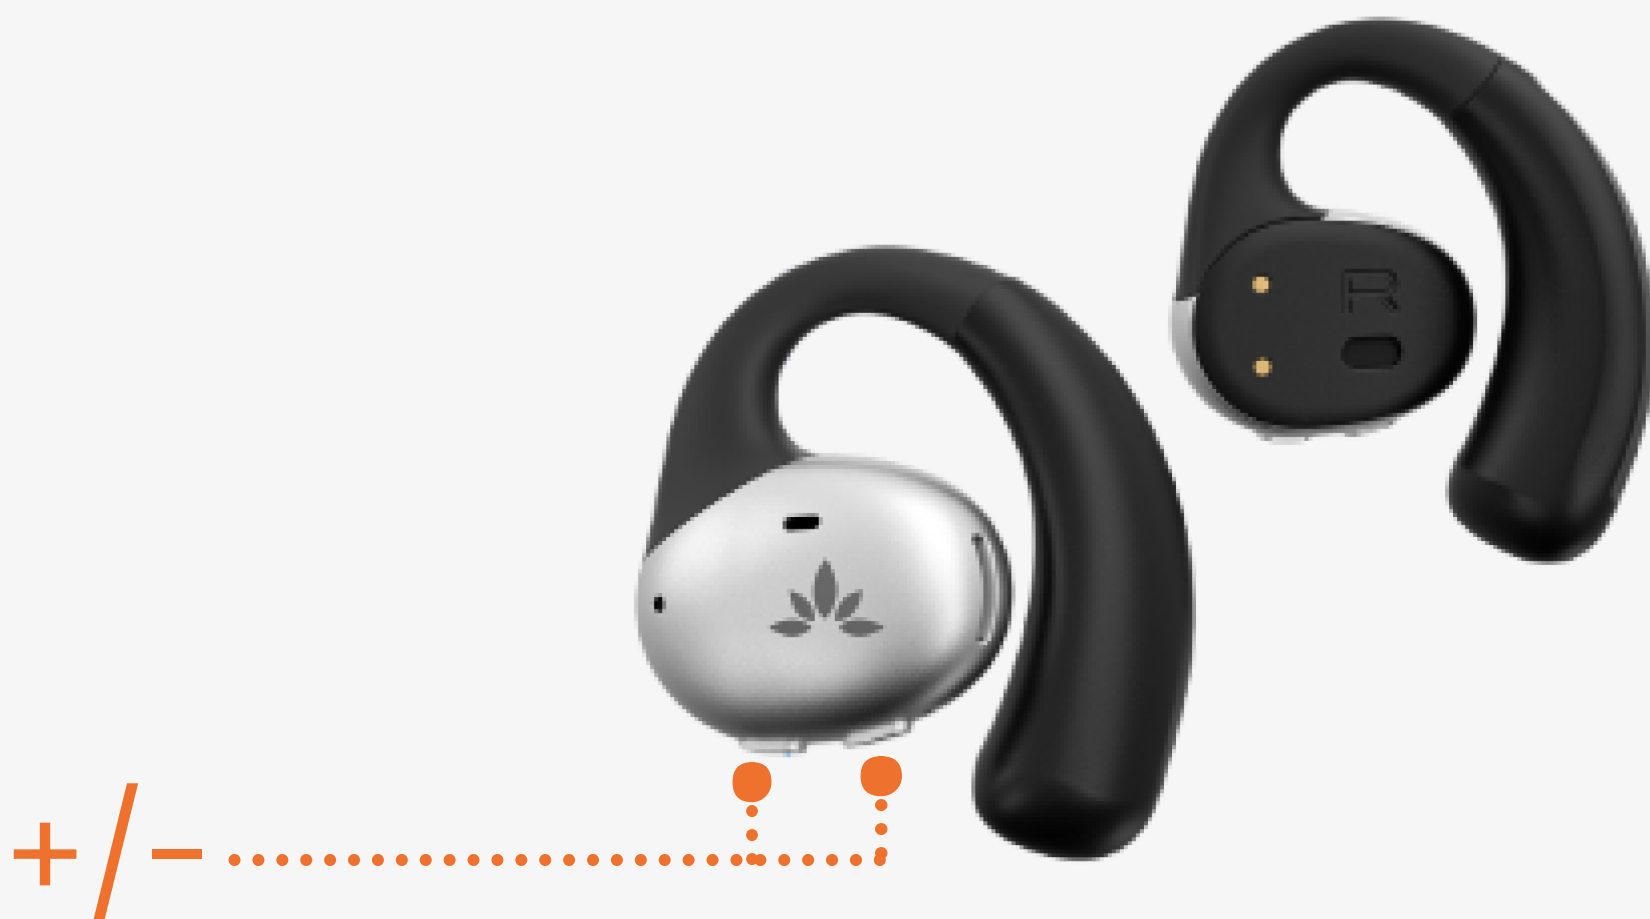[Next](#)

6. Advanced (Optional)

6.1 Dual Mode (Never Miss a Call)


Stay connected to your phone while listening to TV audio.

Never miss a call

- Incoming calls pause TV audio automatically.
- TV audio resumes after the call ends.

How to pair with Aura transmitter

- One conneced to Aura transmitter
- Turn back ON the phone bluetooth to reconnect

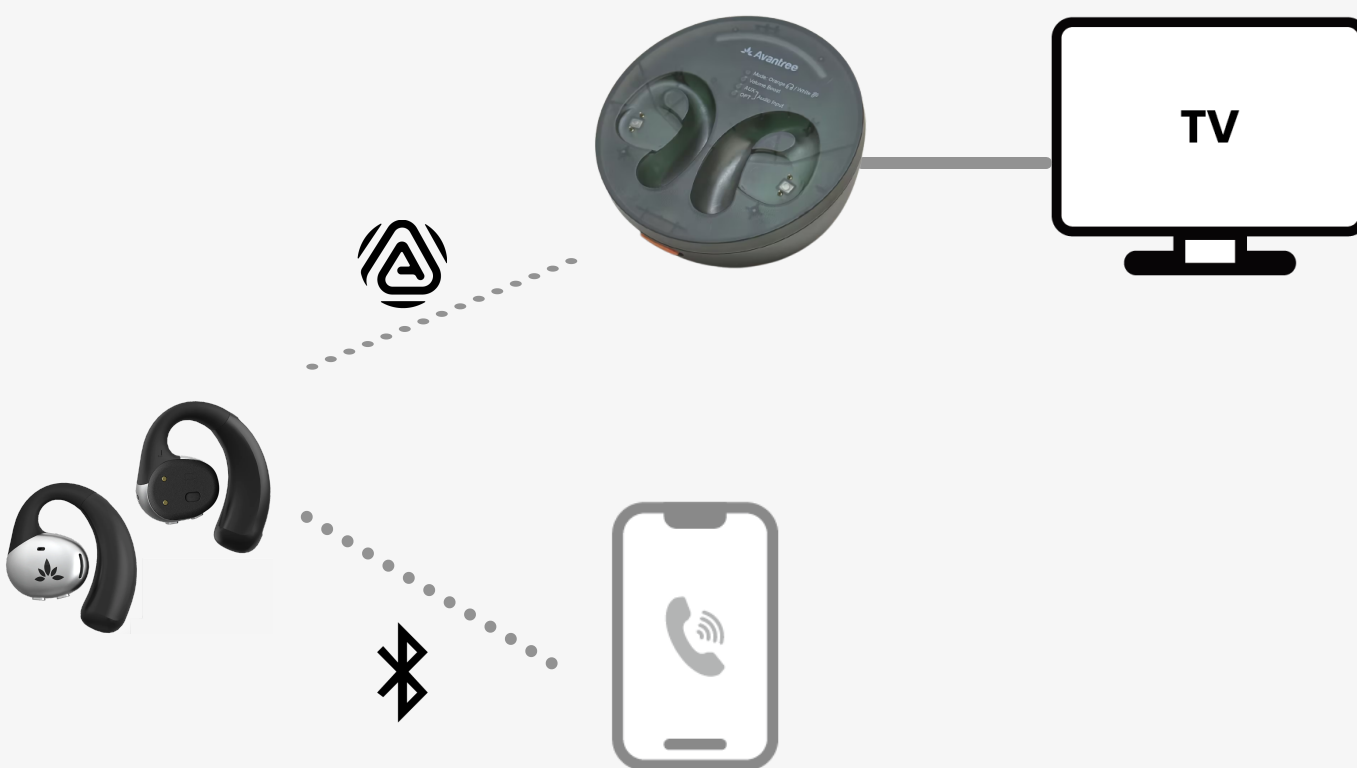

6.2 Join Other Open & Secured Broadcasts

Secured Auracast broadcasts require the **Avantree app**.

- The app feature is **coming soon** (around July 2026).
- Once available, we'll notify you.:



Stay informed !

Be the first to know when the **Avantree app** is available.


Notify Me

Next

7. Power, Buttons & Indicators

7.1 Power & Charging

- Earphone: Use the case
- Charging: LED stays **solid red**.
- Fully charged: LED turns **off** (~2h).
- Playtime: Up to 18 hours.
- Case: **USB-C** power (5V, 1-2.4A)

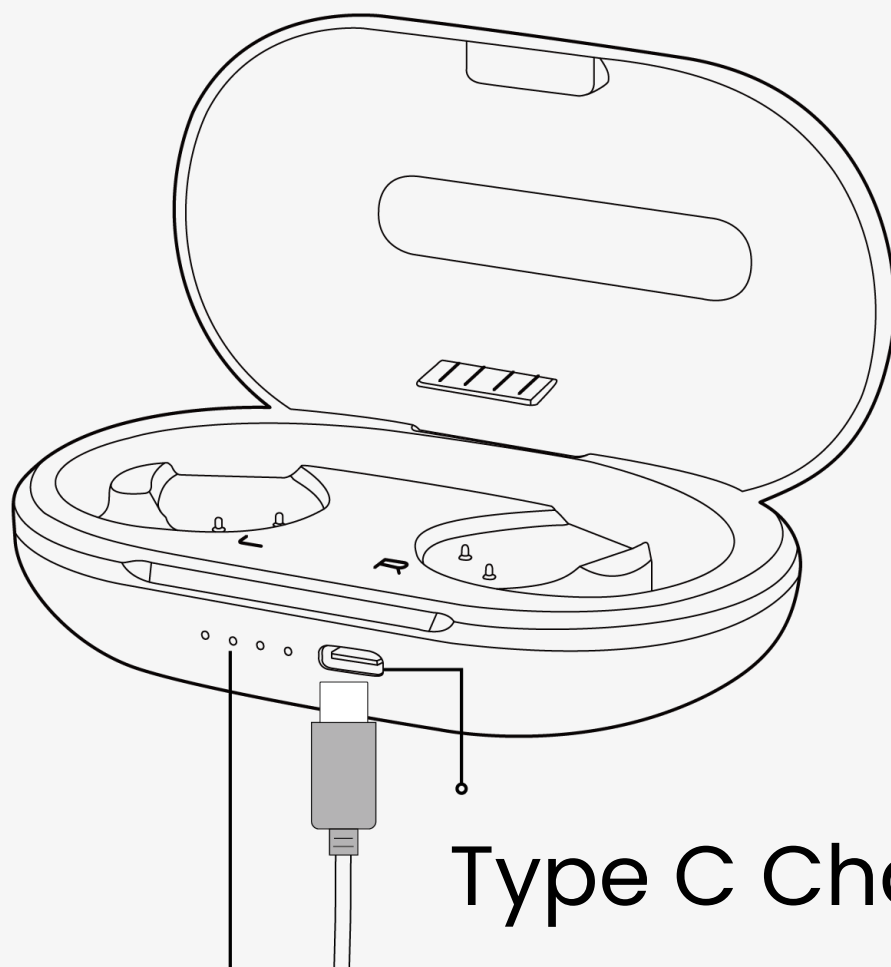


Type C Charging Port

Case's Battery
Level Indicator

Next

7.2 Buttons & Indicators

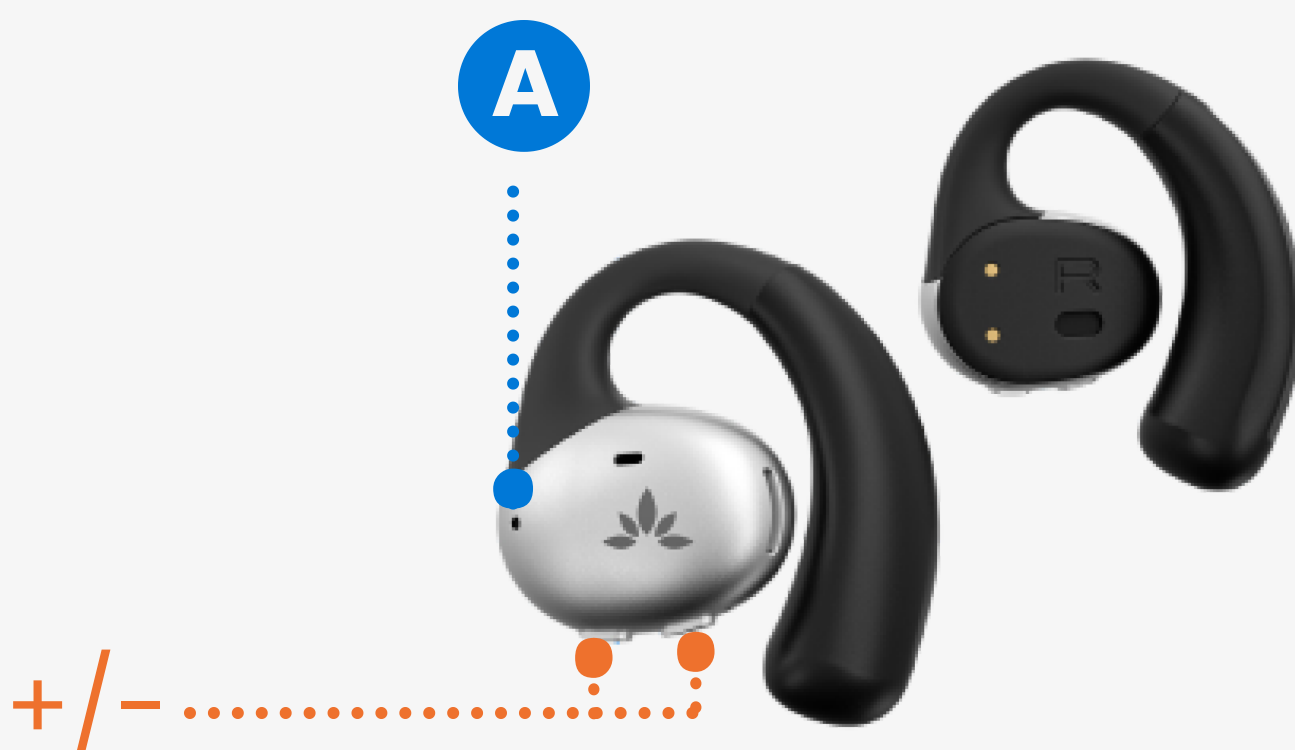

A LED

- **Solid** for 3s then off
- Auracast joined (**orange**)
- Bluetooth connected (**blue**)

• **Blinking**

- Searching Auracast (**orange**)
- Bluetooth pairing (**red** & **blue**)

→ [Full Buttons & Indicators Guide](#)

Next



8. Troubleshooting

Common Issues

- [One side sound?](#) → Put earphone back in the base, then remove them again.
- [Factory Reset ? ↗](#)
- [TV Speakers & Earphone ↗](#)

[👉 More FAQ & Help ↗](#)



Still need help? [Contact support ↗](#)

Next

< Back



Menu

9. Register & Support

Register Your Product

Extended warranty & get updates.

Get 24M Warranty

Need help? Contact Us



Email

support@avantree.com



Call



USA (Toll Free)

+1 800 232 2078



Other Regions



Chat



Next

< Back



Menu



Did this guide help you?

Your feedback goes directly to our team.

It helps us improve future guides and products.


Takes less than 10 seconds.



Helpful



It's OK

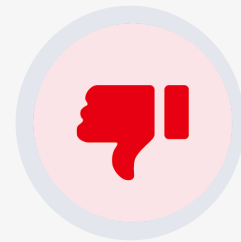

Need Help



Thank you for helping us improve.